


FIG.4

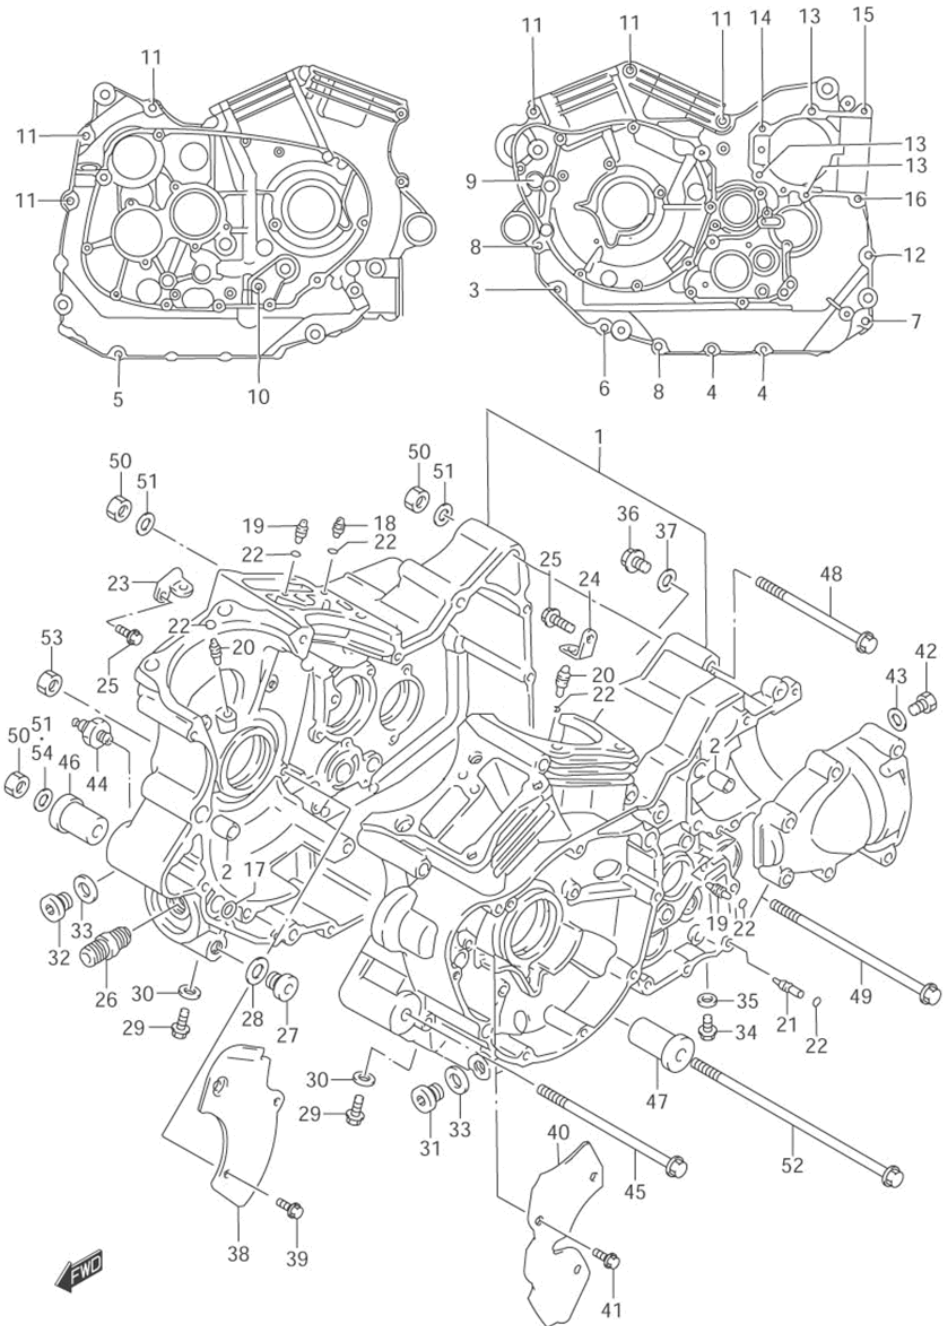

VL1500Y E03 E28\_004  
CRANKCASE

REF#	PART	#REQ	REMARKS
1	CRANKCASE SET 11300-10871	1	
2	.PIN (11X20) 09206-11017	4	
3	BOLT, HYDRAULIC UNIT NO.2	1	

	01550-06553	
4	.BOLT 01550-06653	2
5	.BOLT 01550-06853	1
6	BOLT, HOLDER 01550-0855A	1
7	.BOLT 01550-08653	1
8	.BOLT (8X70) 01550-08703	2
9	BOLT 01550-08903	1
10	BOLT, UPPER 09103-08098	1
11	.BOLT (L:95) 09103-08164	6
12	BOLT 01550-0880A	1
13	BOLT 01550-0840A	3
14	.BOLT 01550-08503	1
15	BOLT, HOLDER 01550-0855A	1
16	.BOLT 01550-08653	1
17	O RING, CRANKCASE 09280-12009	1
18	.JET, HEAD COOLING 09493-44002	1
19	JET, OIL GALL CYL HEAD 09493-28010	2
20	.JET, PISTON COOLING 09493-80009	2
21	.JET, MISSION 09493-24011	1
22	O RING, OIL GALLERY JET 09280-04004	6
25	BOLT 01550-0612A	2
26	UNION, OIL FILTER STAND 16591-06B01	1
27	PLUG, OIL GALLERY 09248-16010	1
28	GASKET (16X22X2.0) 09168-16002	1
29	PLUG, OIL GALLERY 01550-0812A	4
30-1	GASKET 09168-08015	4
30-2	.GASKET, 8.2X16X1 09168-08029	4
31	PLUG, OIL GALLERY 09248-14005	1
32	PLUG, MAIN GALLERY NO.2 09247-14027	1
33	.GASKET (14.1X18X1.5) 09168-14004	2
34	BOLT 01550-0610A	1
35-1	.GASKET 09168-06024	1
35-2	WASHER, OIL GALLERY EXHAUST 09168-06023	1
36	PLUG, OIL LEVEL 09247-12006	1
37	GASKET, OIL LEVEL PLUG 09168-12002	1
39	SCREW, SHIFT CAM (6X12) 09125-06110	3
40	PLATE, OIL SEPARATOR FRONT 11522-10F00	1
41	BOLT 01547-06123	3
42	.PLUG 09247-12106	1
43	GASKET, OIL LEVEL PLUG 09168-12002	1
44	SWITCH ASSY, OIL PRESSURE 37820-33D10	1
45	BOLT (10X205)	1

	09103-10145	
46-1	SPACER 11621-10F00	1
46-2	SPACER 11621-10F10	1
47	SPACER (L:27) 11610-20C00	1
48	BOLT, CVT UNIT (L:140) 09103-10119	1
49	BOLT (10X160) 09103-10278	1
50	NUT, ENG, MTG 08319-31103	3
51	WASHER, KNUCKLE END 08322-0110A	3
52	BOLT (10X260) 09103-10226	1
53	NUT 09159-10047	1
54	WASHER, FRONT LOW 09160-10502	1

(close window)