 


Ref No	Part No	Description
1	11400-10850	Gasket Set
1	11400-10851	Gasket Set
2	11141-10F00	•. Gasket, Cylinder Head Front
3	11142-10F00	•. Gasket, Cylinder Head Rear
4	11177-38B01-H17	•. Gasket, Breather Cover
5	11241-10F00	•. Gasket, Cylinder Front
6	11242-10F00	•. Gasket, Cylinder Rear
7	11482-38B10	•. Gasket, Clutch Cover
8	11483-10F00	•. Gasket, Generator Cover
9	11485-10F00	•. Gasket, Gear Shift Cover
10	14181-45C00	•. Gasket, Exhaust Pipe
11	09168-06023	•. Gasket (5.8x13x1.2)
12	09168-14011	•. Gasket (16x212x2)
13	09168-16002	•. Gasket (16x22x2)
14	09168-16003	•. Gasket (16x22x2)
15	09168-18003	•. Gasket (18x24.2x2)
16	09280-04004	•. O Ring (d:1.2,id:4.0)
17	09280-12009	•. O Ring (d:1.9,id:12.6)
18	09280-17003	•. O Ring (d:3.1,id:16.8)
19	09280-22008	•. O Ring (d:3.1,id:22.7)
20	09280-41007	•. O Ring (d:1.9,id:40.7)

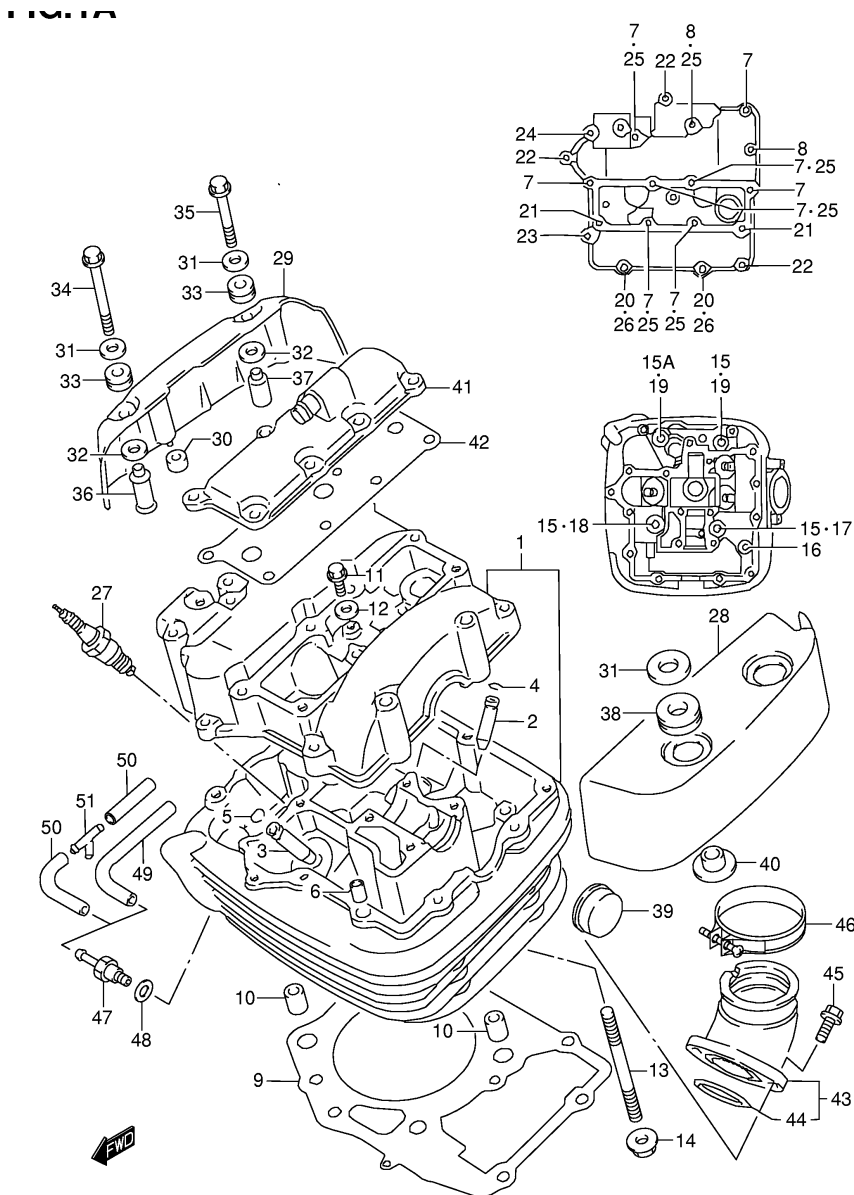


VL1500Y E02_001A
CYLINDER HEAD(FRONT)


Ref No	Part No	Description
1	11101-10F00	Head Assy, Cylinder Front
1	11101-10F10	Head Assy, Cylinder Front
2	11115-38B70	• . Guide, Valve Intake (os:0.3)
3	11115-45740	• . Guide, Valve Exhaust (os:0.3)
4	09381-10004	• . Ring, Valve Guide Intake
5	09381-10003	• . Ring, Valve Guide Exhaust
6	09206-08001	• . Pin
7	09103-06064	• . Bolt (6x60)
8	09103-06102	• . Bolt (6x55)
9	11141-10F00	Gasket, Cylinder Head Front
10	04211-13189	Pin
11	07120-06123	Bolt, Oil Gallery
12	09168-06018	Gasket
13	09108-08142	Stud Bolt (l:30)
14	08316-10083	Nut (green)
15	09160-10060	Washer
15a	09168-10017	Washer
16	09103-08099	Bolt (8x70)
17	09103-10178	Bolt (10x180)
18	09103-10179	Bolt (10x190)
19	09103-10180	Bolt (10x200)
20	09103-08213	Bolt (8x268)
21	01550-06203	Bolt
22	01550-06303	Bolt
23	01550-06353	Bolt
24	01550-06703	Bolt
25	09168-06023	Gasket
26	09160-08130	Washer
27	09482-00354	Spark Plug (ngk,dpr7ea-9)
27	09482-00355-111	Spark Plug (denso,x22epr-u9)
27	09482-00334	Spark Plug (ngk,dpr8ea-9)
27	09482-00335-111	Spark Plug (denso,x24epr-u9)
27	09482-00330	Spark Plug (ngk,dpr9ea-9)
27	09482-00331-111	Spark Plug (denso,x27epr-u9)
28	11171-10F00	Cap, Head Cover Lh
29	11172-10F00	Cap, Head Cover Rh
30	11273-24B00	Cushion, Head Cover Cap
31	09160-06084	Washer, Head Cover Cap Upper
32	09160-09016	Washer, Head Cover Cap Lower
33	09320-09016	Cushion, Head Cover Cap No.2
34	01547-06707	Bolt, Head Cover Cap No.1
35	01547-06507	Bolt, Head Cover Cap No.2
36	11179-10F00	Spacer, Head Cover Cap No.1
37	11179-10F10	Spacer, Head Cover Cap No.2
38	09320-13015	Cushion
39	09241-30008	Plug, Cylinder Head
40	09301-08007	Bush
41	11180-38B10	Cover, Breather
42	11177-38B01-H17	Gasket, Breather Cover
43	13101-10F00	Pipe, Intake Front
44	09280-41007	• . O Ring (d:2.4,id:41.7)
45	09119-06092	Bolt
46	09402-52208	Clamp, Intake Pipe
47	09362-06002	Union, Intake Port

VL1500Y E02_001A
CYLINDER HEAD(FRONT)

Ref No	Part No	Description
48	09168-06018	Gasket
49	09355-35755-600	Hose, Boost Sensor
50	09355-35755-600	Hose, Boost Sensor
51	09367-04007	3 Way

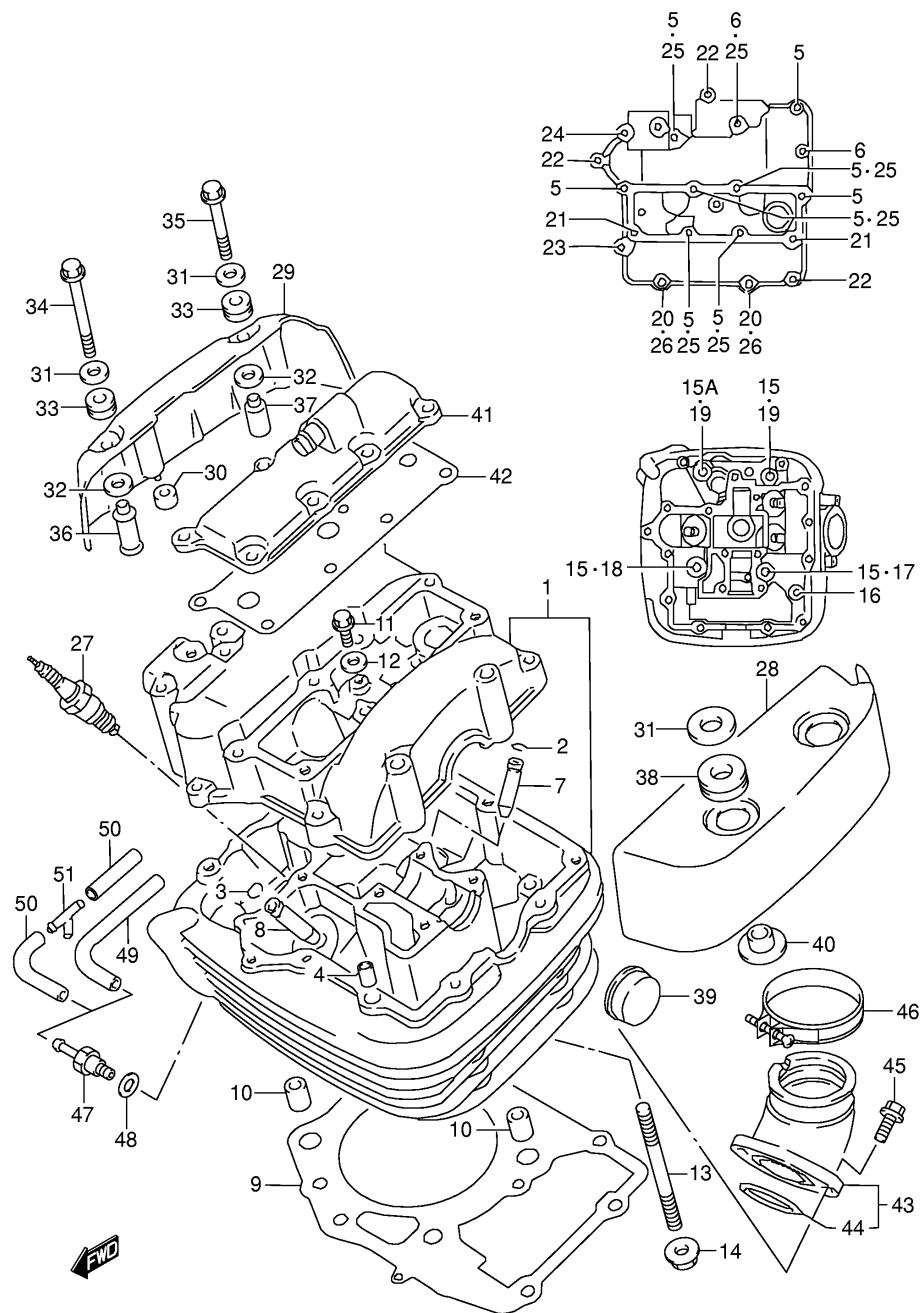 


Ref No	Part No	Description
1	11101-10F00	Head Assy, Cylinder Front
1	11101-10F10	Head Assy, Cylinder Front
2	09381-10004	• . Ring, Valve Guide Intake
3	09381-10003	• . Ring, Valve Guide Exhaust
4	09206-08001	• . Pin
5	09103-06064	• . Bolt (6x60)
6	09103-06102	• . Bolt (6x55)
7	11115-38B70	Guide, Valve Intake (os:0.3)
8	11115-45740	Guide, Valve Exhaust (os:0.3)
9	11141-10F00	Gasket, Cylinder Head Front
10	04211-13189	Pin
11	07120-06123	Bolt, Oil Gallery
12	09168-06018	Gasket
13	09108-08142	Stud Bolt (l:30)
14	08316-10083	Nut (green)
15	09160-10039	Washer
15a	09168-10017	Washer
16	09103-08099	Bolt (8x70)
17	09103-10178	Bolt (10x180)
18	09103-10179	Bolt (10x190)
19	09103-10180	Bolt (10x200)
20	09103-08213	Bolt (8x268)
21	01550-06203	Bolt
22	01550-06303	Bolt
23	01550-06353	Bolt
24	01550-06703	Bolt
25	09168-06023	Gasket
26	09160-08130	Washer
27	09482-00354	Spark Plug (ngk,dpr7ea-9)
27	09482-00355	Spark Plug (denso,x22epr-u9)
27	09482-00334	Spark Plug (ngk,dpr8ea-9)
27	09482-00335	Spark Plug (denso,x24epr-u9)
27	09482-00330	Spark Plug (ngk,dpr9ea-9)
27	09482-00331	Spark Plug (denso,x27epr-u9)
28	11171-10F00	Cap, Head Cover Lh
29	11172-10F00	Cap, Head Cover Rh
30	11273-24B00	Cushion, Head Cover Cap
31	09160-06084	Washer, Head Cover Cap Upper
32	09160-09016	Washer, Head Cover Cap Lower
33	09320-09016	Cushion, Head Cover Cap No.2
34	01547-06707	Bolt, Head Cover Cap No.1
35	01547-06507	Bolt, Head Cover Cap No.2
36	11179-10F00	Spacer, Head Cover Cap No.1
37	11179-10F10	Spacer, Head Cover Cap No.2
38	09320-13015	Cushion
39	09241-30008	Plug, Cylinder Head
40	09301-08007	Bush
41	11180-38B10	Cover, Breather
42	11177-38B01-H17	Gasket, Breather Cover
43	13101-10F00	Pipe, Intake Front
44	09280-41007	• . O Ring (d:2.4,id:41.7)
45	09119-06092	Bolt
46	09402-52208	Clamp, Intake Pipe

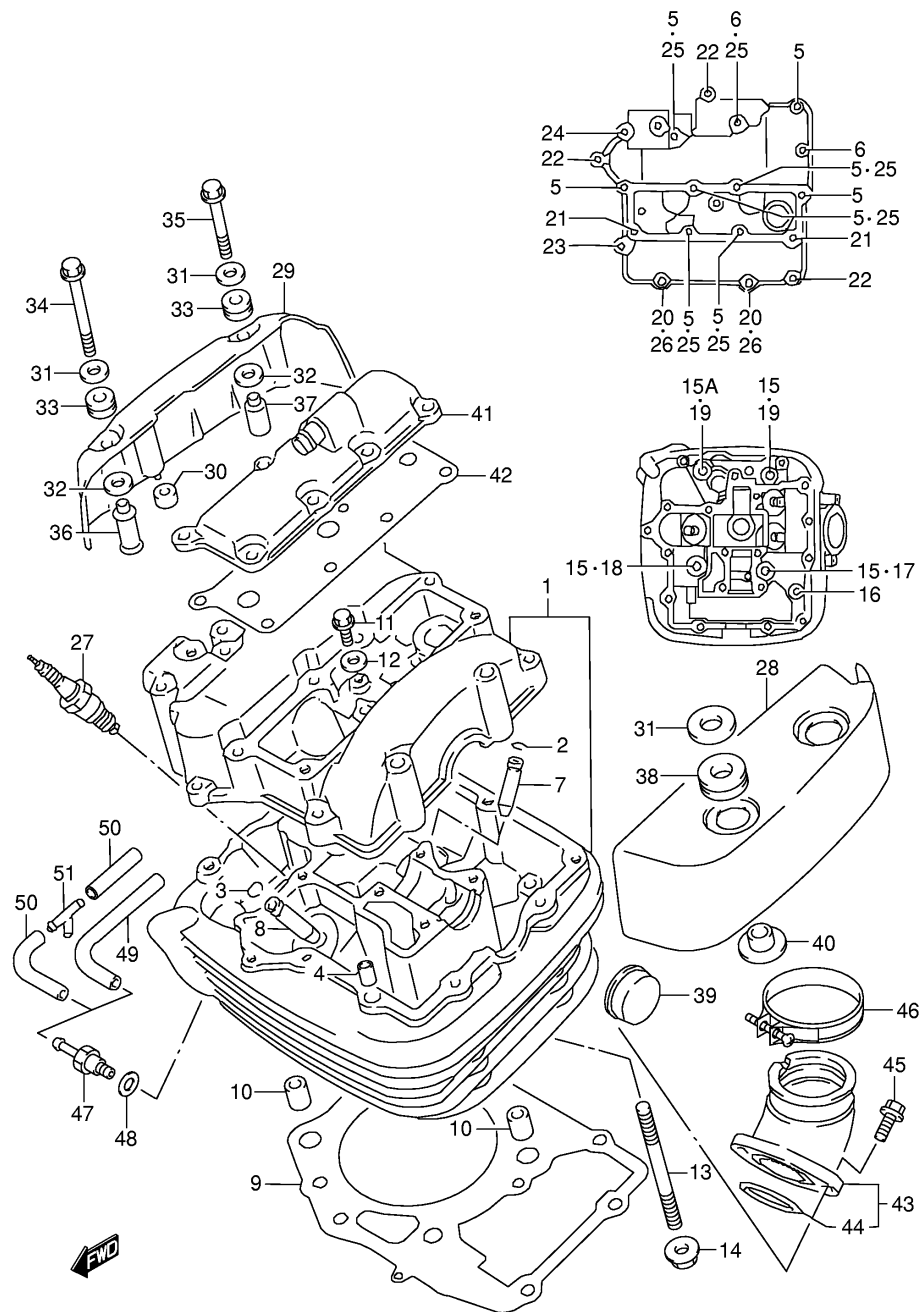 


Ref No	Part No	Description
47	09362-06002	Union, Intake Port
48	09168-06018	Gasket
49	09355-35755-600	Hose, Boost Sensor
50	09355-35755-600	Hose, Boost Sensor
51	09367-04007	3 Way


Ref No	Part No	Description
1	11103-10F00	Head Assy, Cylinder Rear
1	11103-10F10	Head Assy, Cylinder Rear
2	11115-38B70	• . Guide, Valve Intake (os:0.3)
3	11115-45740	• . Guide, Valve Exhaust (os:0.3)
4	09381-10004	• . Ring, Valve Guide Intake
5	09381-10003	• . Ring, Valve Guide Exhaust
6	09206-08001	• . Pin
7	09103-06064	• . Bolt (6x60)
8	09103-06102	• . Bolt (6x55)
9	11142-10F00	Gasket, Cylinder Head Rear
10	04211-13189	Pin
11	07120-06123	Bolt, Oil Gallery
12	09168-06018	Gasket
13	09108-08142	Stud Bolt (l:30)
14	09108-08205	Stud Bolt (m12/8)
15	08316-10083	Nut (green)
16	09160-10060	Washer
16a	09168-10017	Washer
17	09103-08181	Bolt (8x57)
18	09103-10178	Bolt (10x180)
19	09103-10179	Bolt (10x190)
19a	09103-10180	Bolt (10x200)
20	09103-10181	Bolt (10x215)
21	09103-06101	Bolt (6x50)
22	09103-06112	Bolt (6x45)
23	09103-08086	Bolt (8x130)
24	09103-08213	Bolt (8x268)
25	01550-06303	Bolt
26	01550-06353	Bolt
27	09160-08130	Washer
28	09168-06023	Gasket
29	09482-00354	Spark Plug (ngk,dpr7ea-9)
29	09482-00355	Spark Plug (denso,x22epr-u9)
29	09482-00334	Spark Plug (ngk,dpr8ea-9)
29	09482-00335	Spark Plug (denso,x24epr-u9)
29	09482-00330	Spark Plug (ngk,dpr9ea-9)
29	09482-00331	Spark Plug (denso,x27epr-u9)
30	11173-10F00	Cap, Head Cover Lh
31	11174-10F00	Cap, Head Cover Rh
32	11273-24B00	Cushion, Head Cover Cap
33	09160-06084	Washer, Head Cover Cap Upper
34	09160-09016	Washer, Head Cover Cap Lower
35	09320-09016	Cushion, Head Cover Cap No.2
36	01547-06707	Bolt, Head Cover Cap No.1
37	01547-06507	Bolt, Head Cover Cap No.2
38	11179-10F00	Spacer, Head Cover Cap No.1
39	11179-10F10	Spacer, Head Cover Cap No.2
40	09320-13015	Cushion
41	09241-30008	Plug, Cylinder Head
42	09301-08007	Bush
43	09248-22004	Plug, Head Cover
44	13102-10F00	Pipe, Intake Rear
45	09280-41007	• . O Ring (d:1.9,id:40.7)

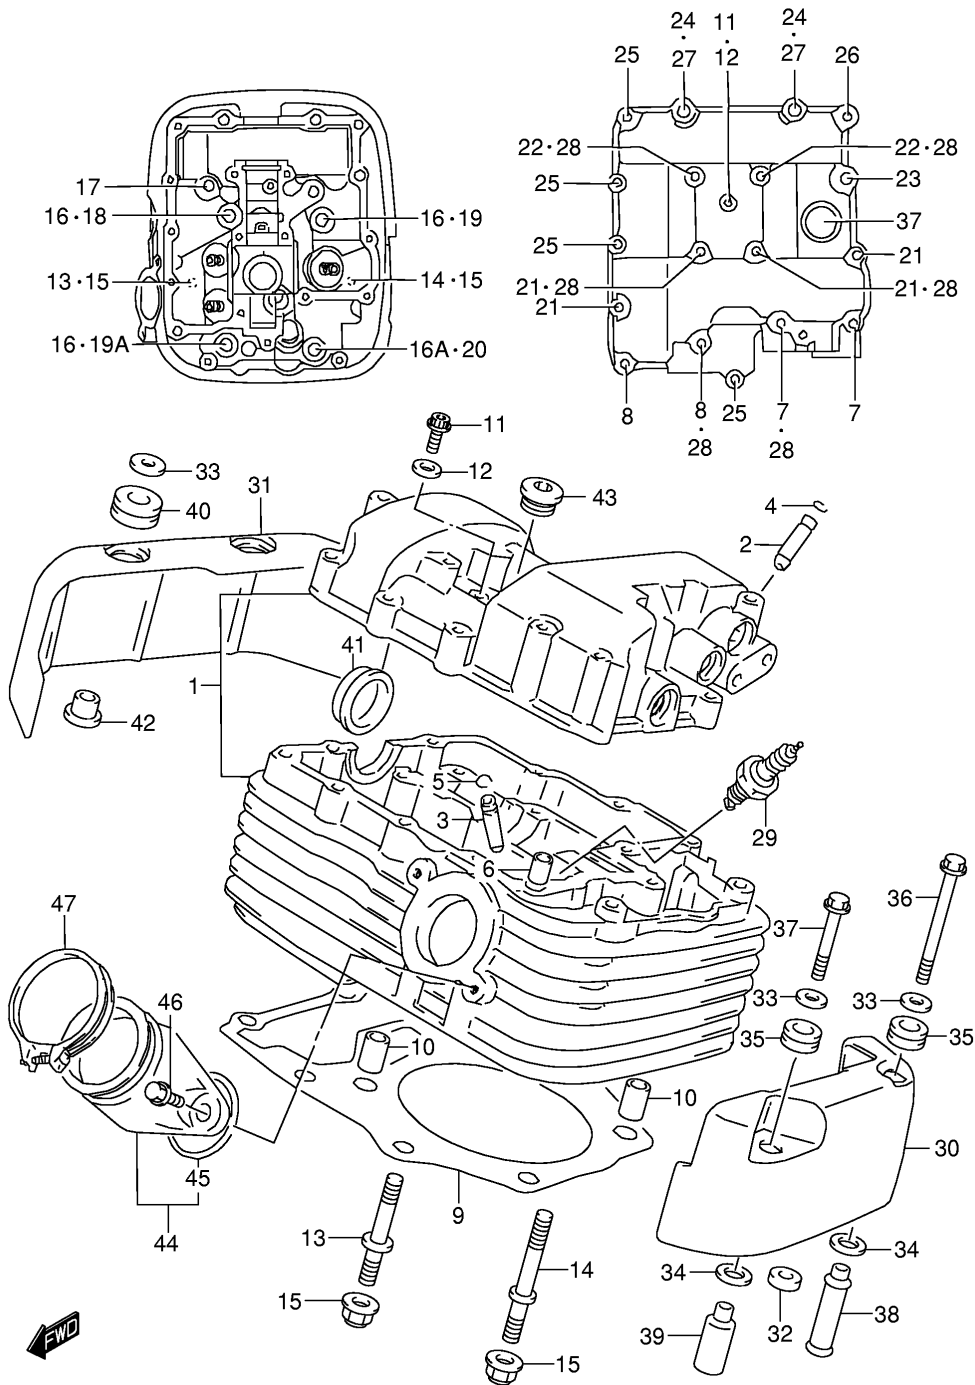 


Ref No	Part No	Description
46	09119-06092	Screw
47	09402-52208	Clamp, Intake Pipe

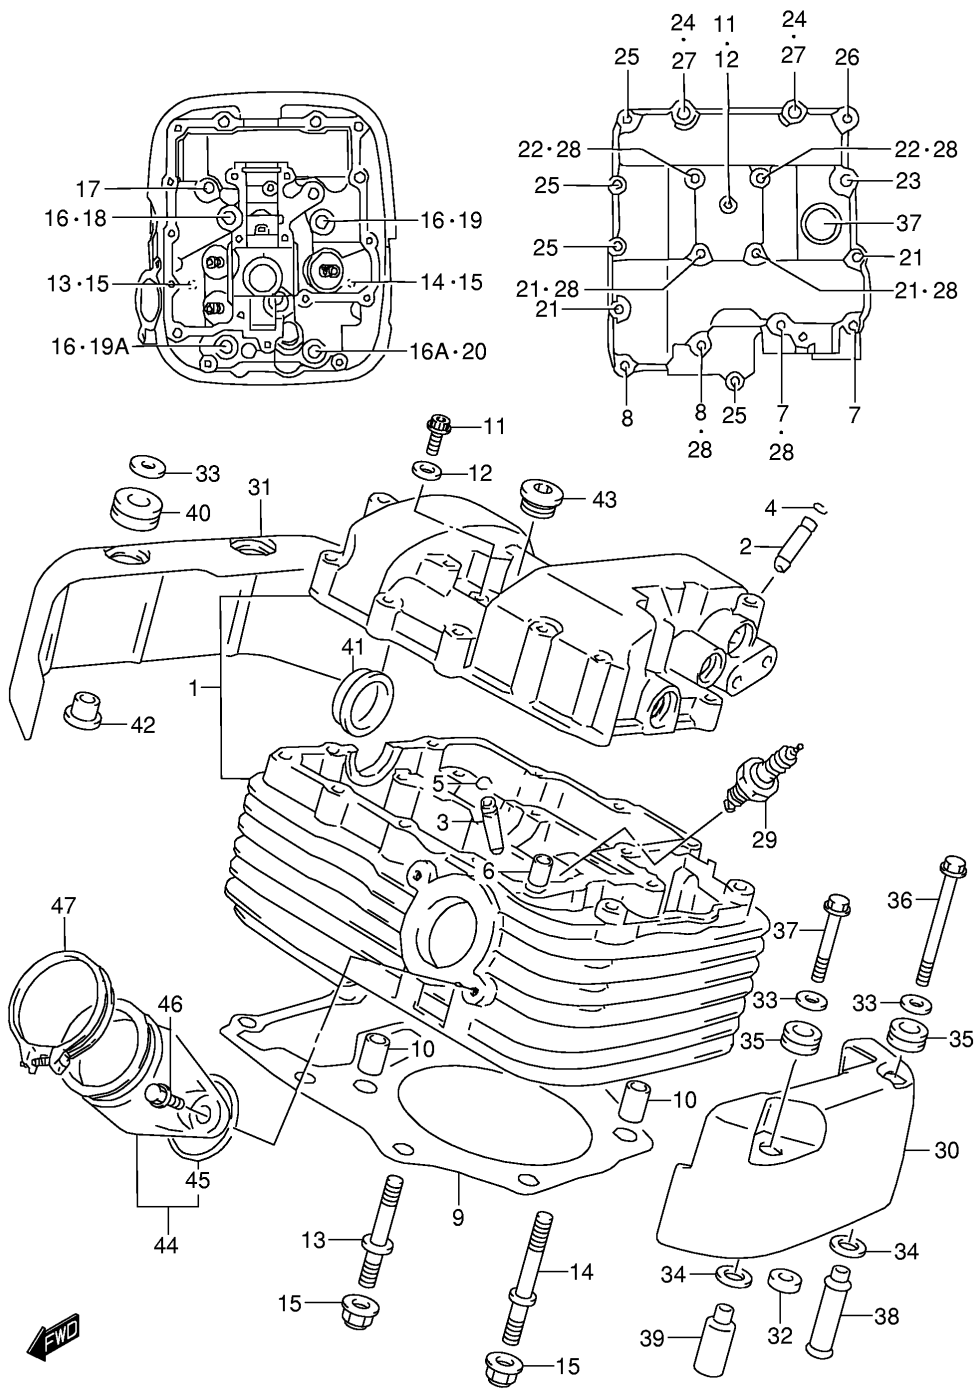 


Ref No	Part No	Description
1	11103-10F00	Head Assy, Cylinder Rear
1	11103-10F10	Head Assy, Cylinder Rear
2	09381-10004	• . Ring, Valve Guide Intake
3	09381-10003	• . Ring, Valve Guide Exhaust
4	09206-08001	• . Pin
5	09103-06064	• . Bolt (6x60)
6	09103-06102	• . Bolt (6x55)
7	11115-38B70	Guide, Valve Intake (os:0.3)
8	11115-45740	Guide, Valve Exhaust (os:0.3)
9	11142-10F00	Gasket, Cylinder Head Rear
10	04211-13189	Pin
11	07120-06123	Bolt, Oil Gallery
12	09168-06018	Gasket
13	09108-08142	Stud Bolt (l:30)
14	09108-08205	Stud Bolt (m12/8)
15	08316-10083	Nut (green)
16	09160-10039	Washer
16a	09168-10017	Washer
17	09103-08181	Bolt (8x57)
18	09103-10178	Bolt (10x180)
19	09103-10179	Bolt (10x190)
19a	09103-10180	Bolt (10x200)
20	09103-10181	Bolt (10x215)
21	09103-06101	Bolt (6x50)
22	09103-06112	Bolt (6x45)
23	09103-08086	Bolt (8x130)
24	09103-08213	Bolt (8x268)
25	01550-06303	Bolt
26	01550-06353	Bolt
27	09160-08130	Washer
28	09168-06023	Gasket
29	09482-00354	Spark Plug (ngk,dpr7ea-9)
29	09482-00355	Spark Plug (denso,x22epr-u9)
29	09482-00334	Spark Plug (ngk,dpr8ea-9)
29	09482-00335	Spark Plug (denso,x24epr-u9)
29	09482-00330	Spark Plug (ngk,dpr9ea-9)
29	09482-00331	Spark Plug (denso,x27epr-u9)
30	11173-10F00	Cap, Head Cover Lh
31	11174-10F00	Cap, Head Cover Rh
32	11273-24B00	Cushion, Head Cover Cap
33	09160-06084	Washer, Head Cover Cap Upper
34	09160-09016	Washer, Head Cover Cap Lower
35	09320-09016	Cushion, Head Cover Cap No.2
36	01547-06707	Bolt, Head Cover Cap No.1
37	01547-06507	Bolt, Head Cover Cap No.2
38	11179-10F00	Spacer, Head Cover Cap No.1
39	11179-10F10	Spacer, Head Cover Cap No.2
40	09320-13015	Cushion
41	09241-30008	Plug, Cylinder Head
42	09301-08007	Bush
43	09248-22004	Plug, Head Cover
44	13102-10F00	Pipe, Intake Rear
45	09280-41007	• . O Ring (d:1.9,id:40.7)

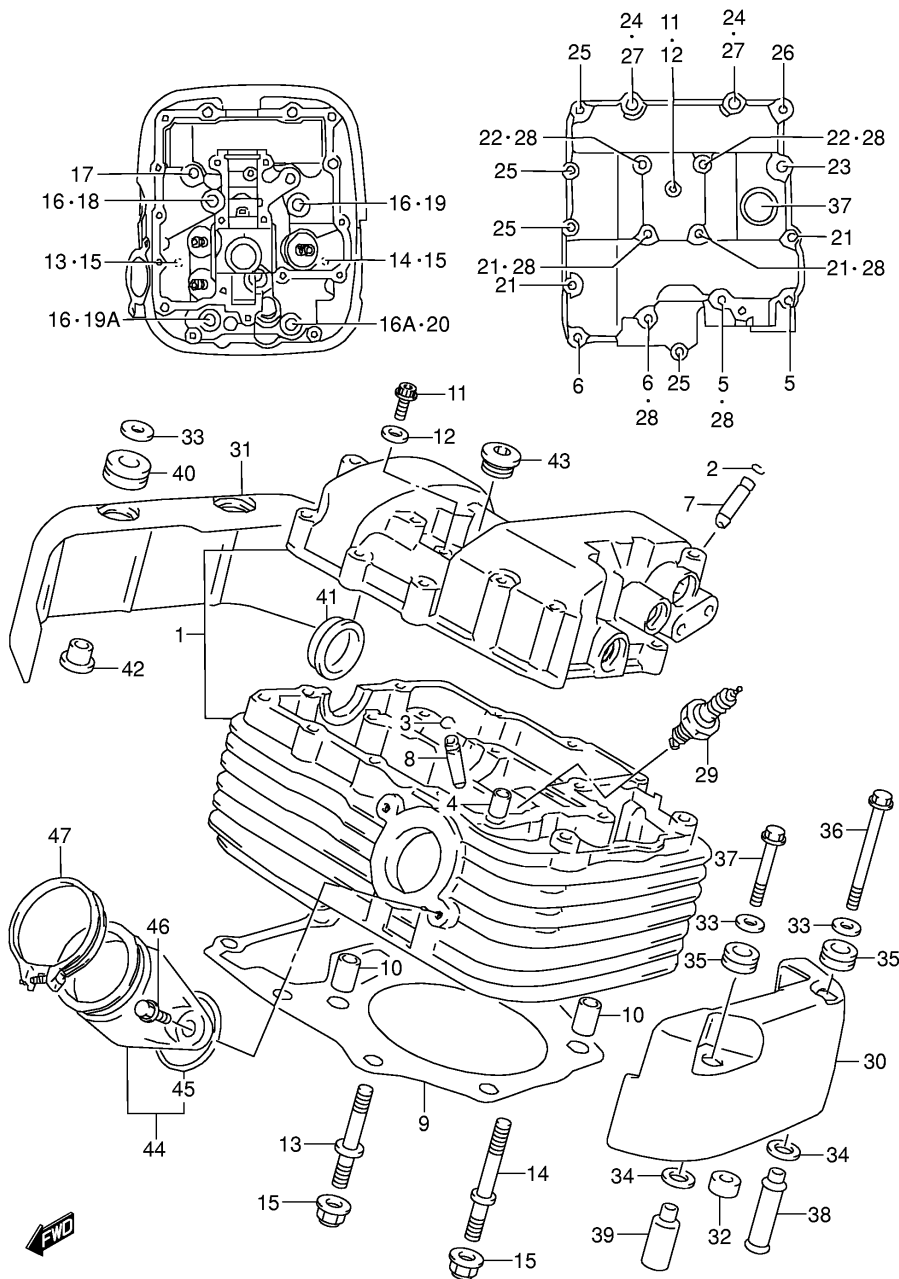 


Ref No	Part No	Description
46	09119-06092	Screw
47	09402-52208	Clamp, Intake Pipe

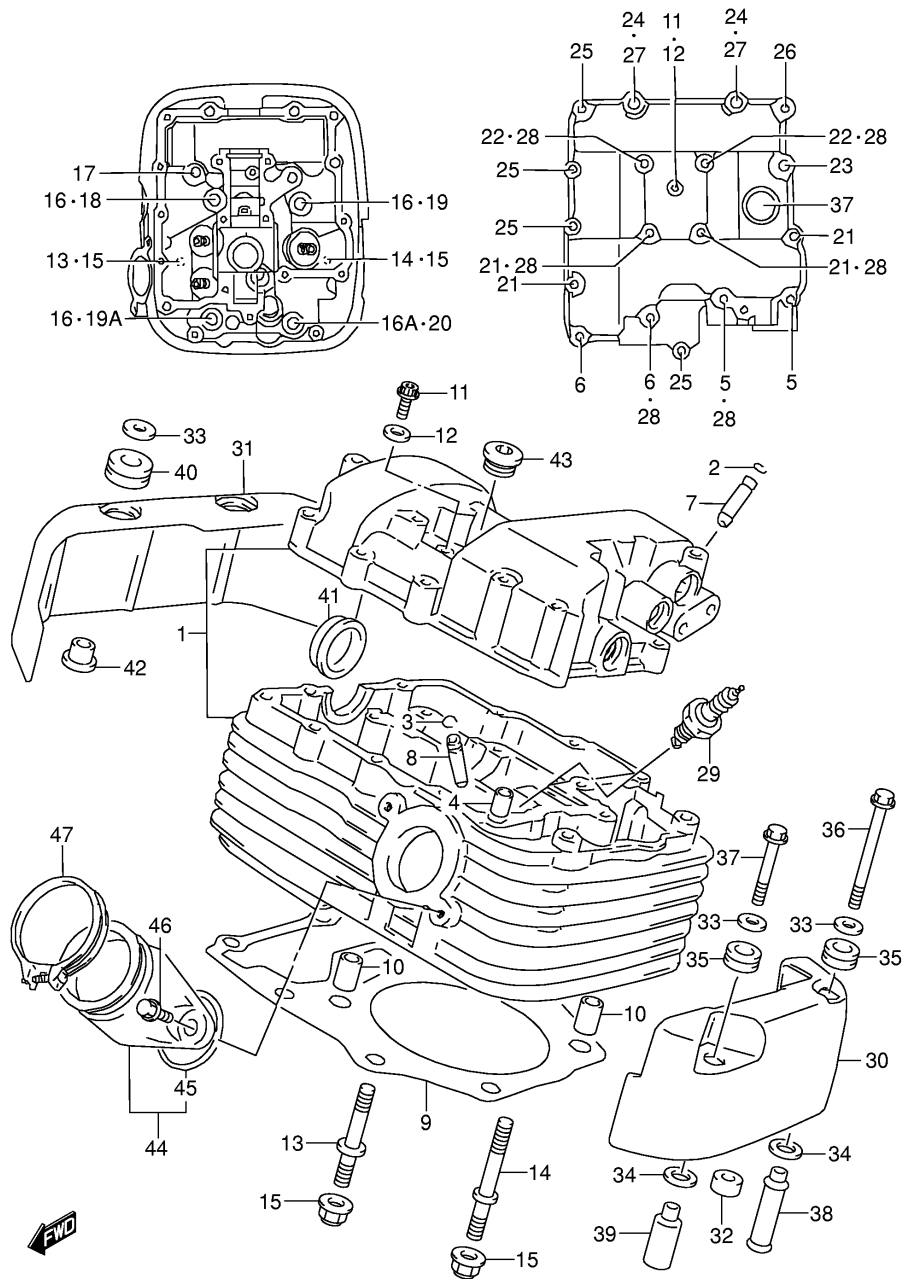 

Ref No	Part No	Description
1	11211-10F00-0F0	Cylinder, Front
1	11211-10F10-0F0	Cylinder, Front
2	11221-10F00-0F0	Cylinder, Rear
2	11221-10F10-0F0	Cylinder, Rear
3	11241-10F00	Gasket, Cylinder Front
4	11242-10F00	Gasket, Cylinder Rear
5	04211-13189	Pin

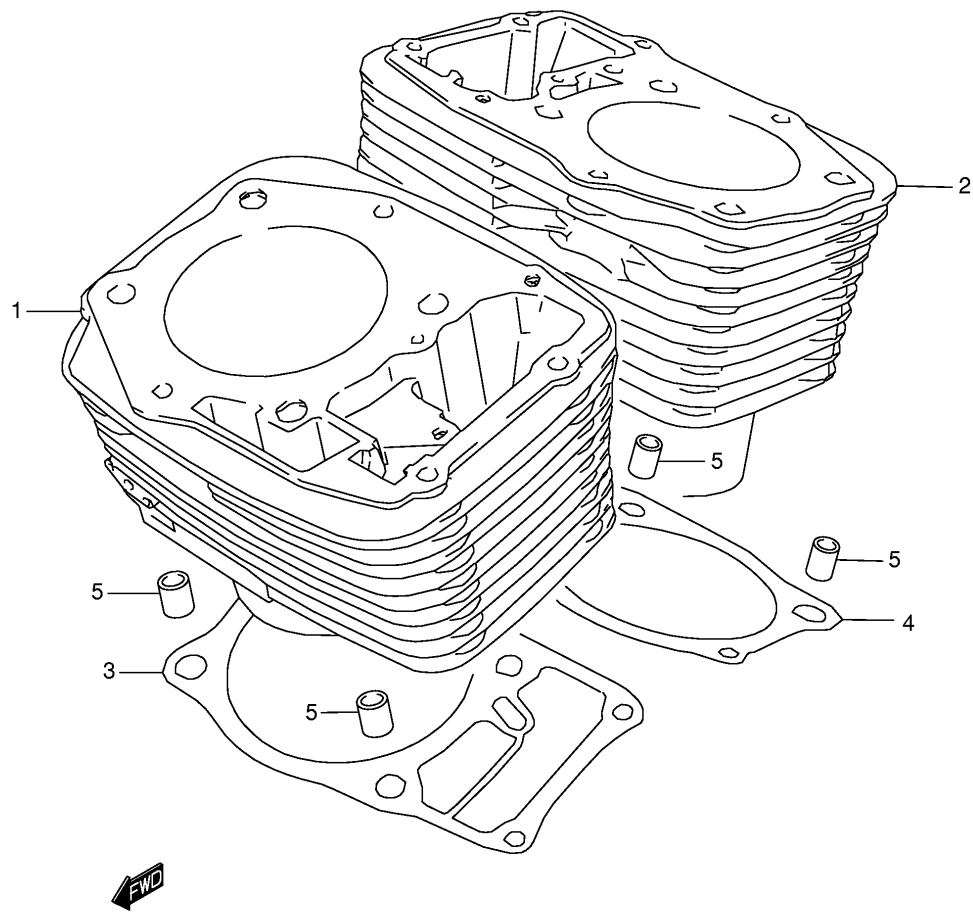 


Ref No	Part No	Description
1	11211-10F00-0F0	Cylinder, Front
1	11211-10F10-0F0	Cylinder, Front
2	11221-10F00-0F0	Cylinder, Rear
2	11221-10F10-0F0	Cylinder, Rear
3	11241-10F00	Gasket, Cylinder Front
4	11242-10F00	Gasket, Cylinder Rear
5	04211-13189	Pin

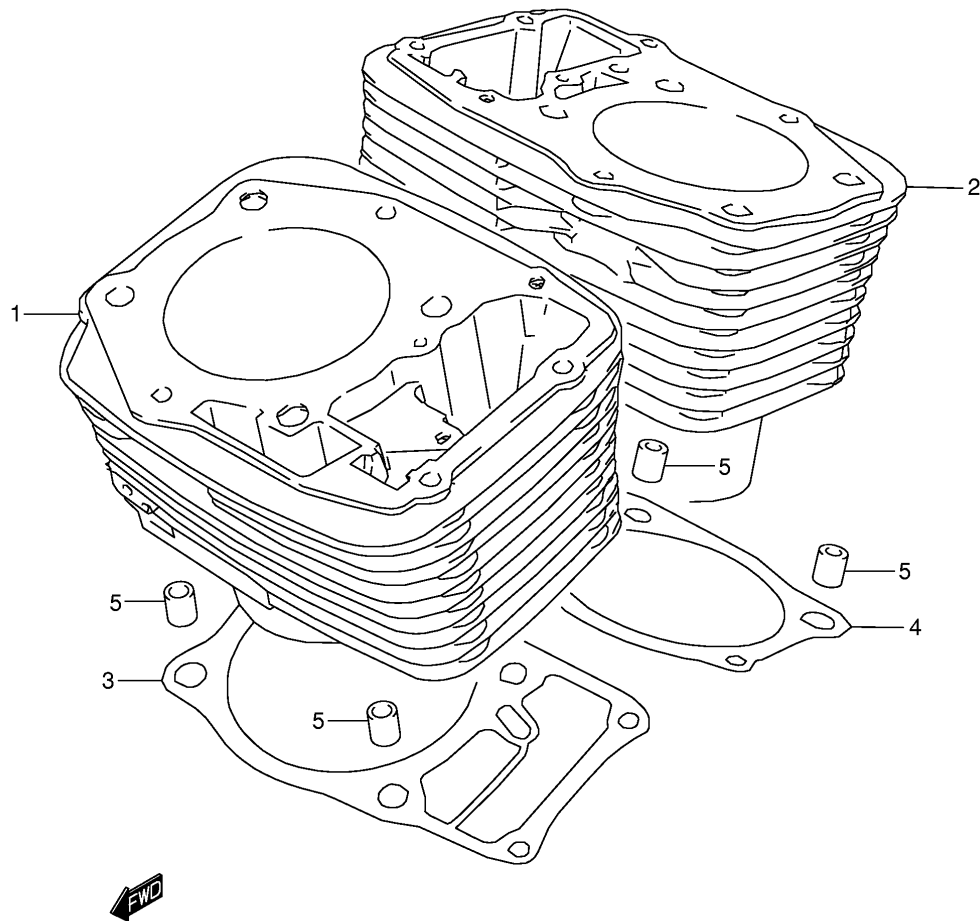 


Ref No Part No


Description

1	11300-10870	Crankcase Set
2	09206-11017	.. Pin
3	01550-06553	.. Bolt
4	01550-06653	.. Bolt
5	01550-06853	.. Bolt
6	01550-08553	.. Bolt
7	01550-08653	.. Bolt
8	01550-08703	.. Bolt (8x70)
9	01550-08903	.. Bolt
10	09103-08098	.. Bolt (8x115)
11	09103-08164	.. Bolt (8x95)
12	01550-08803	.. Bolt (8x80)
13	01550-08403	.. Bolt
14	01550-08503	.. Bolt
15	01550-08553	.. Bolt
16	01550-08653	.. Bolt
17	09280-12009	.. O Ring (d:1.9,id:12.6)
18	09493-44002	.. Jet, Head Cooling
19	09493-28010	.. Jet, Head/secondary
20	09493-80009	.. Jet, Piston Cooling
21	09493-24011	.. Jet, Mission
22	09280-04004	.. O Ring, Jet (d:1.2,id:4.0)
23	16438-38B00	.. Plate, Piston Jet, Front
24	16439-38B00	.. Plate, Piston Jet, Rear
25	01550-06123	.. Bolt
26	16591-06B00	.. Union, Oil Filter Stand
27	09248-16012	Plug, Control Plunger (16x8)
28	09168-16002	Gasket
29	01550-08123	Plug, Oil Gallery
30	09168-08015	Gasket
31	09248-14005	Plug, Main Gallery
32	09247-14027	Plug, Main Gallery No.2
33	09168-14002	Gasket
34	01550-06123	Plug, Mission Gallery
35	09168-06023	Gasket (5.8x13x1.2)
36	09247-12006	Plug, Main Gallery End
37	09168-12002	Gasket
38	11521-38B01	Plate, Oil Separator
39	09125-06110	Bolt
40	11522-10F00	Plate, Oil Separator Front
41	01547-06123	Bolt
42	09247-12106	Plug, Oil Drain
43	09168-12002	Gasket
44	37820-33D10	Switch, Oil Pressure
45	09103-10145	Bolt (10x205)
46	11621-10F00	Spacer
47	11610-20C00	Spacer (l:27)
48	09103-10119	Bolt (10x140)
49	09103-10278	Bolt (10x160)
50	08319-31103	Nut
52	09103-10226	Bolt (10x260)
53	09159-10047	Nut

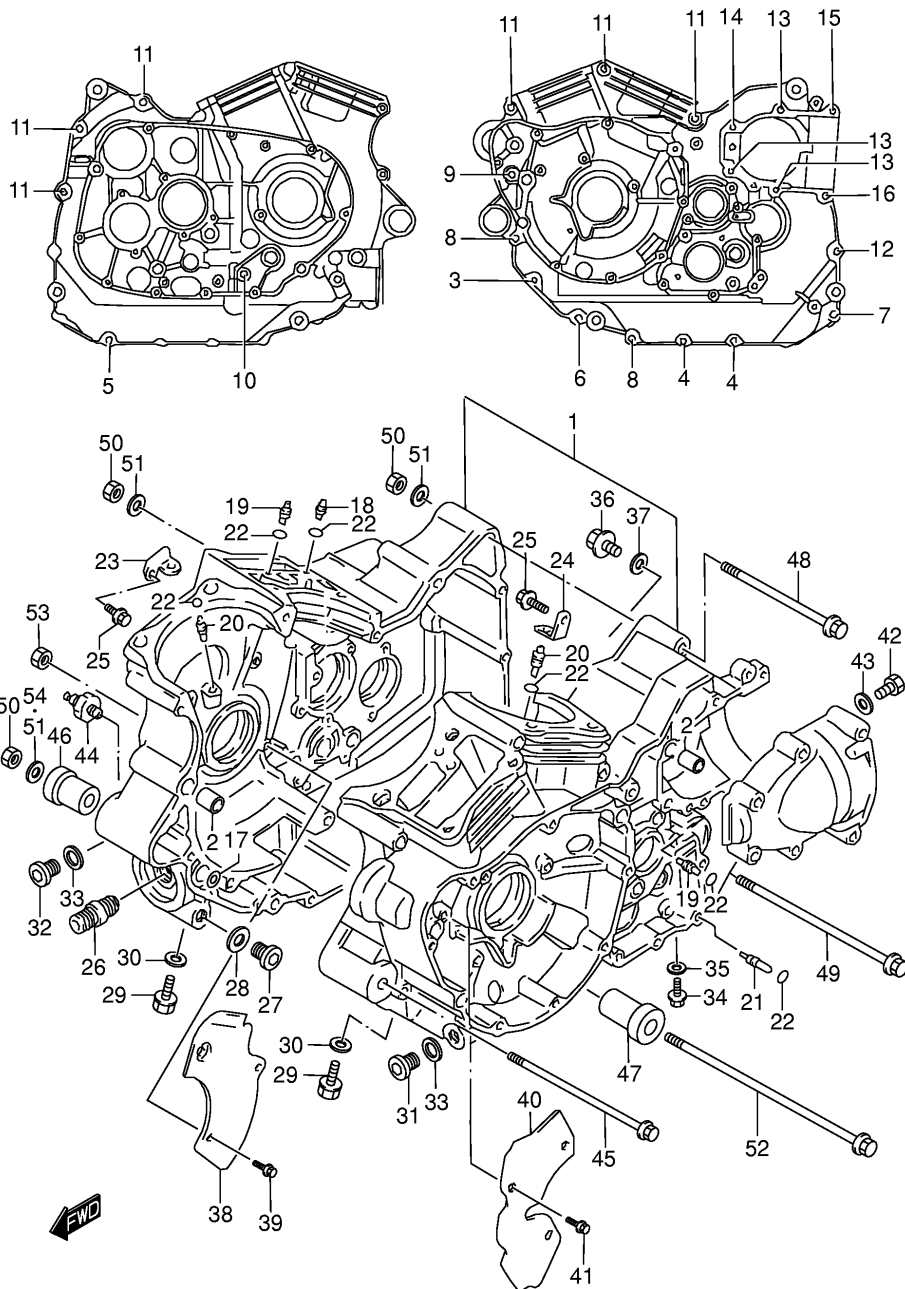 


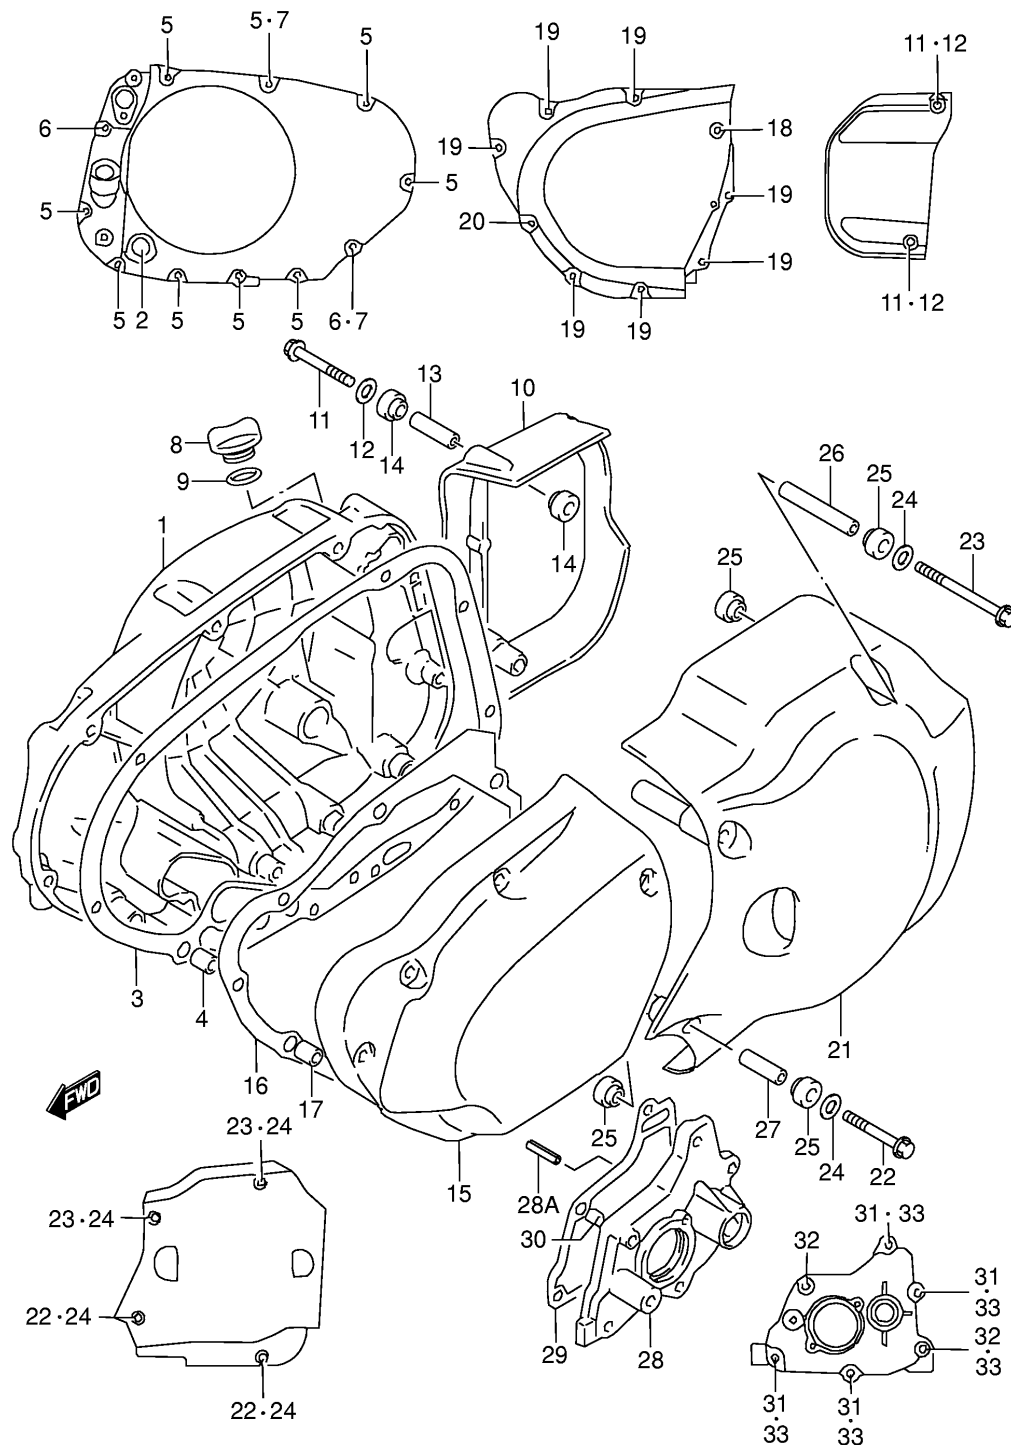 


Ref No	Part No	Description
1	11340-10F00	Cover, Clutch
2	11971-45010	• . Lens, Oil Level Check
3	11482-38B10	Gasket, Clutch Cover
4	04211-09189	Pin
5	01547-06307	Bolt
6	01547-06407	Bolt
7	09168-06023	Gasket (5.8x13x1.2)
8	09259-20008	Plug, Oil Filler
9	09280-17003	O Ring
10	11381-10F00	Cover, Clutch Rear
11	07130-06457	Bolt
12	09160-06125	Washer
13	09180-06277	Spacer
14	09161-09005	Cushion
15	11351-10F00	Cover, Generator
16	11483-10F00	Gasket, Generator Cover
17	09206-11017	Pin
18	01547-06957	Bolt
19	01547-06357	Bolt
20	01547-06457	Bolt
21	11361-10F00	Cover, Secondary Drive Unit
22	01547-06407	Bolt
23	01547-06707	Bolt
24	09160-06125	Washer
25	09161-09005	Cushion
26	09180-06233	Spacer (l:55.9)
27	09180-06302	Spacer (l:26.0)
28	11370-10F00	Cover, Gear Shift
28a	09205-03023	• . Pin, Gear Shift Cover
29	11485-10F00	Gasket, Gear Shift Cover
30	04211-09109	Pin
31	01547-06253	Bolt
32	01547-06353	Bolt
33	09168-06023	Gasket (5.8x13x1.2)

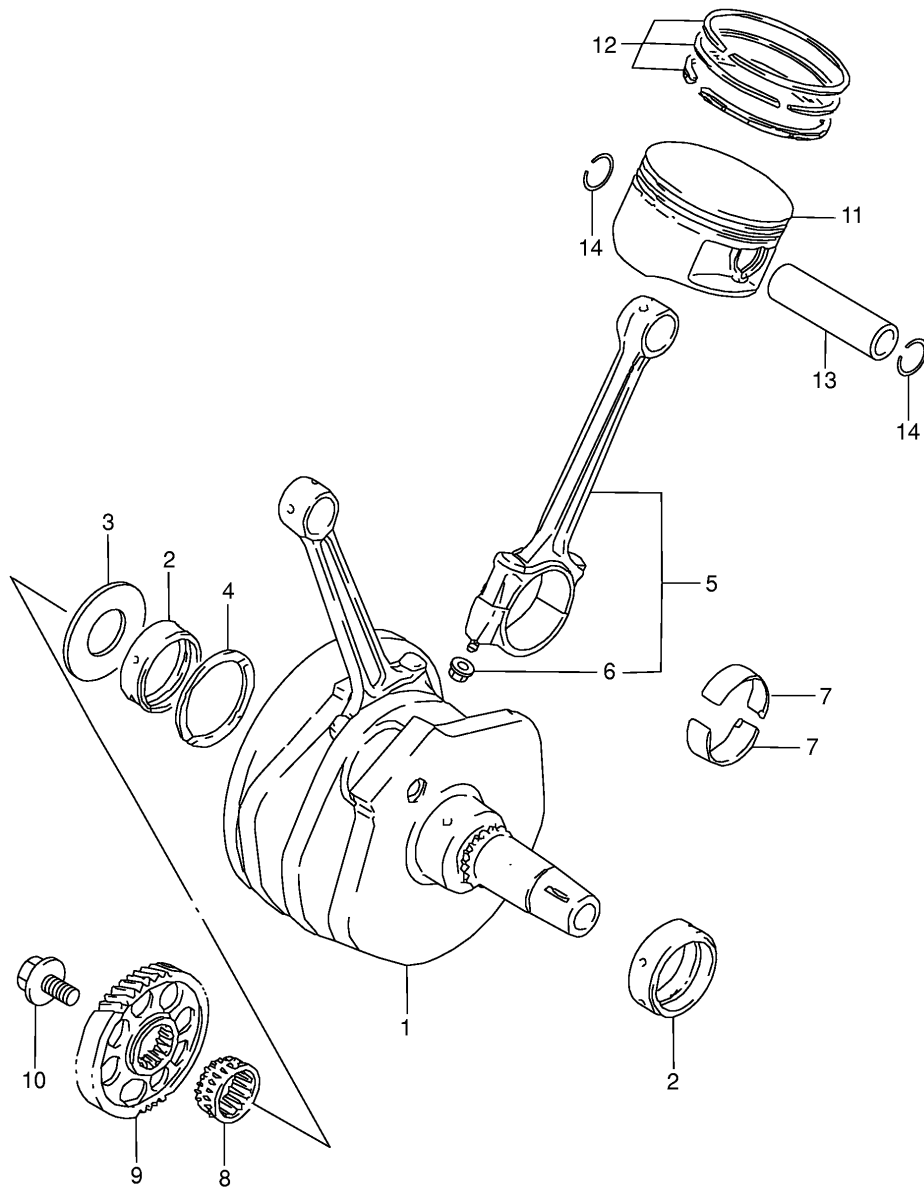 


Ref No	Part No	Description
1	12000-10810	Crankshaft
2	12229-38B00	Bearing, Crankshaft
3	12652-38B00	Washer, Crank Thrust
4	12228-38B00-0A0	Bearing, Crank Thrust (no.1)
4	12228-38B00-0B0	Bearing, Crank Thrust (no.2)
4	12228-38B00-0C0	Bearing, Crank Thrust (no.3)
4	12228-38B00-0D0	Bearing, Crank Thrust (no.4)
4	12228-38B00-0E0	Bearing, Crank Thrust (no.5)
4	12228-38B00-0F0	Bearing, Crank Thrust (no.6)
4	12228-38B00-0G0	Bearing, Crank Thrust (no.7)
4	12228-38B00-0H0	Bearing, Crank Thrust (no.8)
4	12228-38B00-0I0	Bearing, Crank Thrust (no.9)
4	12228-38B00-0J0	Bearing, Crank Thrust (no.10)
5	12160-10F00	Rod Assy, Connecting
6	09159-09001	• . Nut
7	12164-38B01-0A0	Bearing, Crank Pin (green)
7	12164-38B01-0B0	Bearing, Crank Pin (black)
7	12164-38B01-0C0	Bearing, Crank Pin (brown)
7	12164-38B01-0D0	Bearing, Crank Pin (yellow)
7	12164-38B01-0E0	Bearing, Crank Pin (blue)
8	12731-38B00	Sprocket, Cam Chain Drive Rh
9	21111-10F00	Gear, Primary Drive (nt:48)
10	09103-14010	Bolt (14x28)
11	12111-10F00-0F0	Piston
12	12140-10F00	Ring Set, Piston
13	12151-14A01	Pin, Piston
14	09381-23003	Circlip

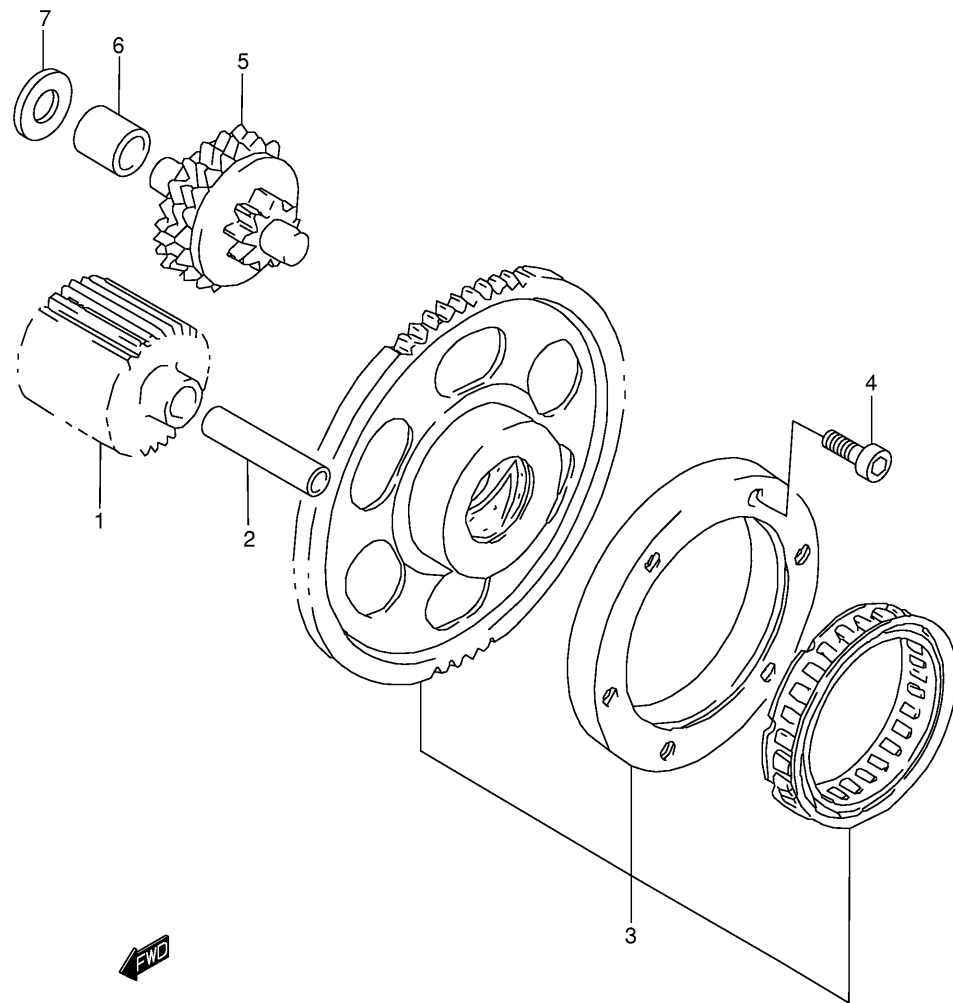 


Ref No	Part No	Description
1	12611-10F00	Gear, Starter Idle No.1
2	09206-11015	Pin
3	12600-10860	Clutch Set, Starter
4	07130-08163	Bolt
5	12600-24B00	Limiter Assy, Starter Idle Gear
6	12618-31D01	Bush
7	09181-10195	Washer

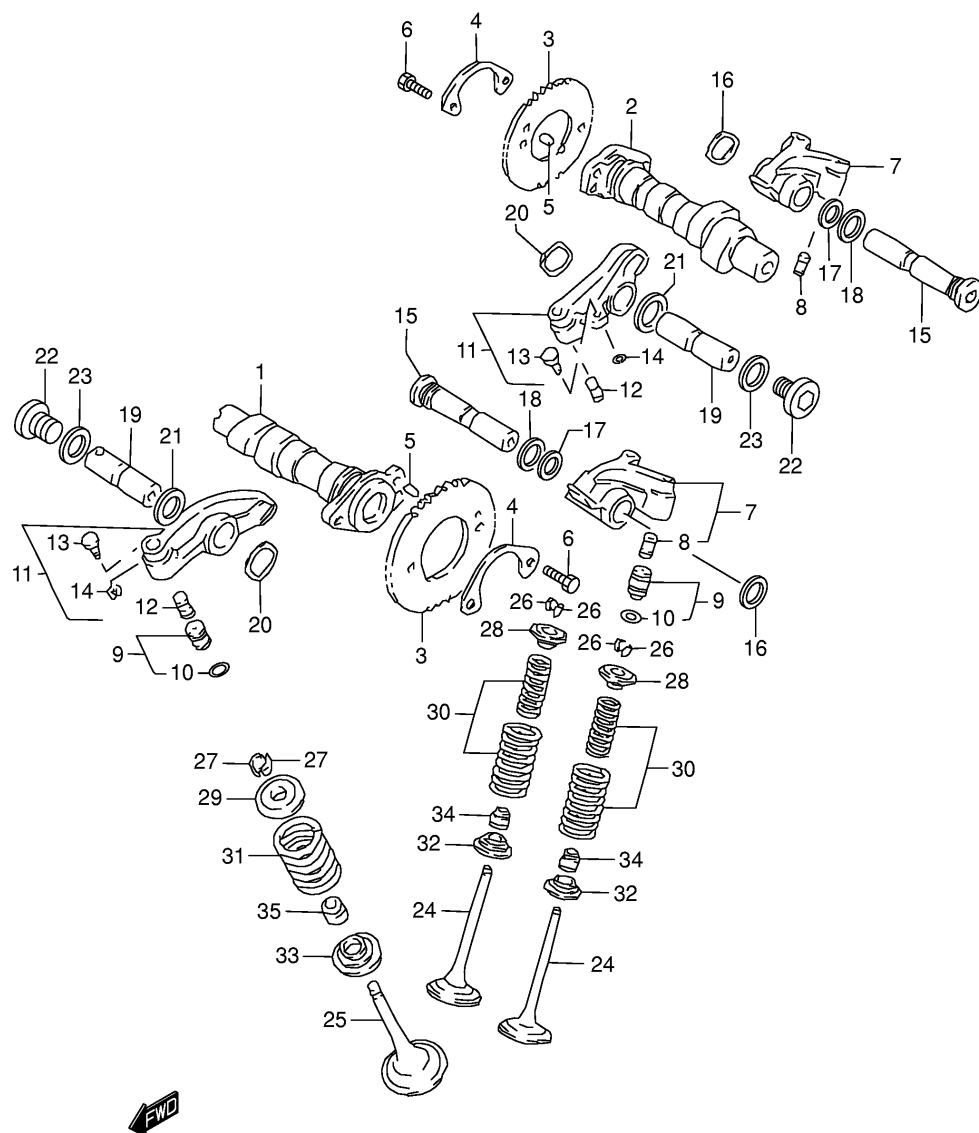 


Ref No	Part No	Description
1	12711-38B00	Camshaft, Front
2	12713-10F00	Camshaft, Rear
3	12741-38B00	Sprocket, Camshaft
4	12747-44000	Washer
5	04221-05109	Pin
6	09111-06027	Bolt (6x12.5)
7	12840-38B01	Arm, Valve Rocker, In
8	12863-38B00	• . Chamber, Adjuster
9	12860-38B01	Adjuster, Valve Lash
10	12864-38B01	• . O Ring
11	12850-38B02	Arm, Valve Rocker Front, Ex
12	12863-38B00	• . Chamber, Adjuster
13	12844-38B00	• . Pin, Decomp
14	08332-11033	• . E Ring
15	12861-38B00	Shaft, Valve Rocker Arm, In
16	09164-14012	Washer, Wave
17	09181-14139	Washer
18	09168-16003	Gasket
19	12871-38B00	Shaft, Valve Rocker Arm, Ex
20	09164-16003	Washer, Wave
21	09160-16033	Washer
22	09248-18004	Plug, Rocker Arm Shaft
23	09168-18003	Gasket
24	12911-38B00	Valve, Intake
25	12912-38B00	Valve, Exhaust
26	12932-24400	Cotter, Valve, In
27	12932-82000	Cotter, Valve, Ex
28	12931-33200	Retainer, Spring, In
29	12931-45000	Retainer, Spring, Ex
30	12920-06B00	Spring Set, Valve, In
31	12922-44110	Spring, Valve, Ex
32	12933-33201	Seat, Spring, In
33	12933-45001	Seat, Spring, Ex
34	09289-05015	Oil Seal, In (5.5x11x8.2)
35	09289-07002	Oil Seal, Ex (7x14.4x9)

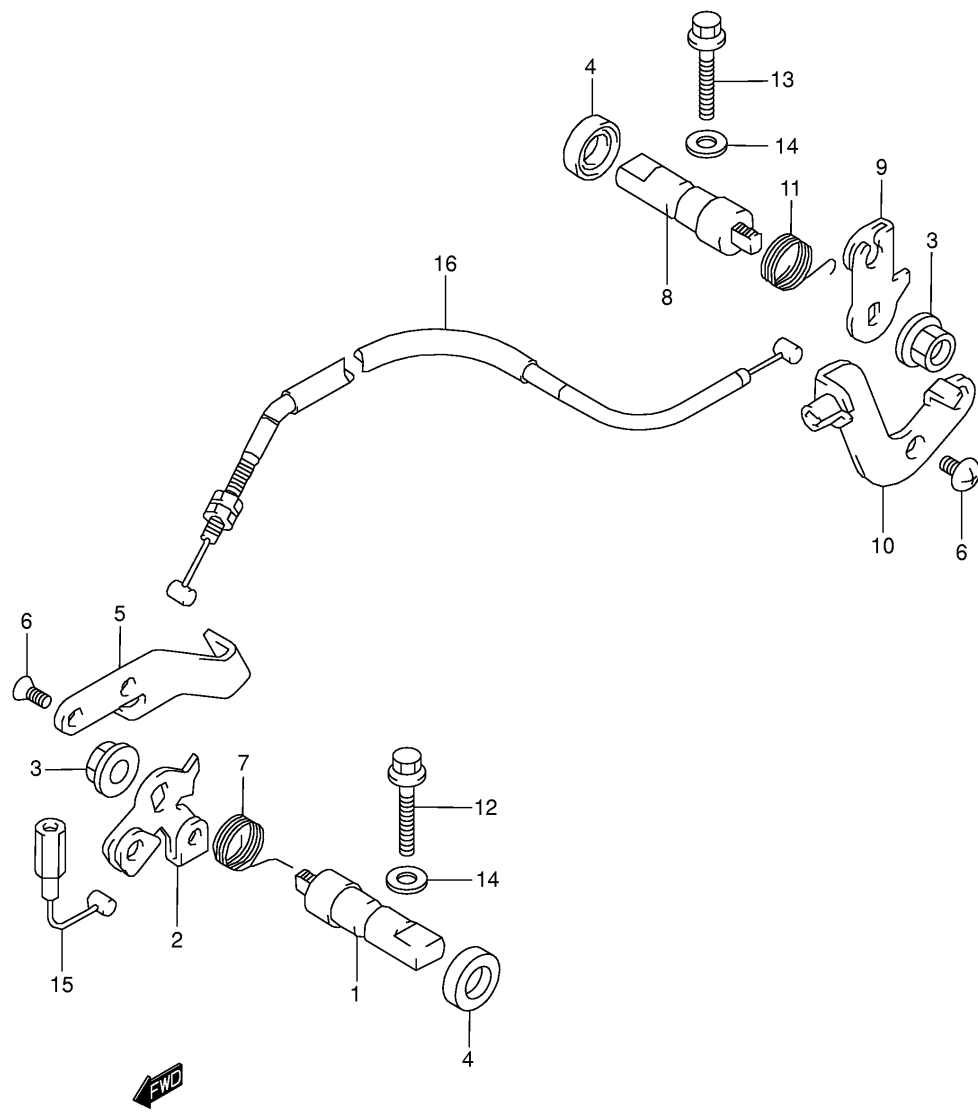 


Ref No	Part No	Description
1	12939-38B00	Shaft, Decomp Front
2	12942-10F00	Lever, Decomp Front
3	08316-10083	Nut
4	09282-10012	Oil Seal (10x20x6)
5	12944-10F00	Holder, Decomp Cable Front
6	02122-05103	Screw (green)
7	09448-17031	Spring, Decomp Shaft Front
8	12941-38B00	Shaft, Decomp Rear
9	12952-10F00	Lever, Decomp Rear
10	12950-10F00	Holder, Decomp Cable Rear
11	09448-17020	Spring, Decomp Shaft Rear
12	01550-06303	Bolt (green)
13	01550-06253	Bolt (green)
14	09168-06023	Gasket
15	58900-10F00	Cable, Decomp Front
16	58910-10F00	Cable, Decomp Rear

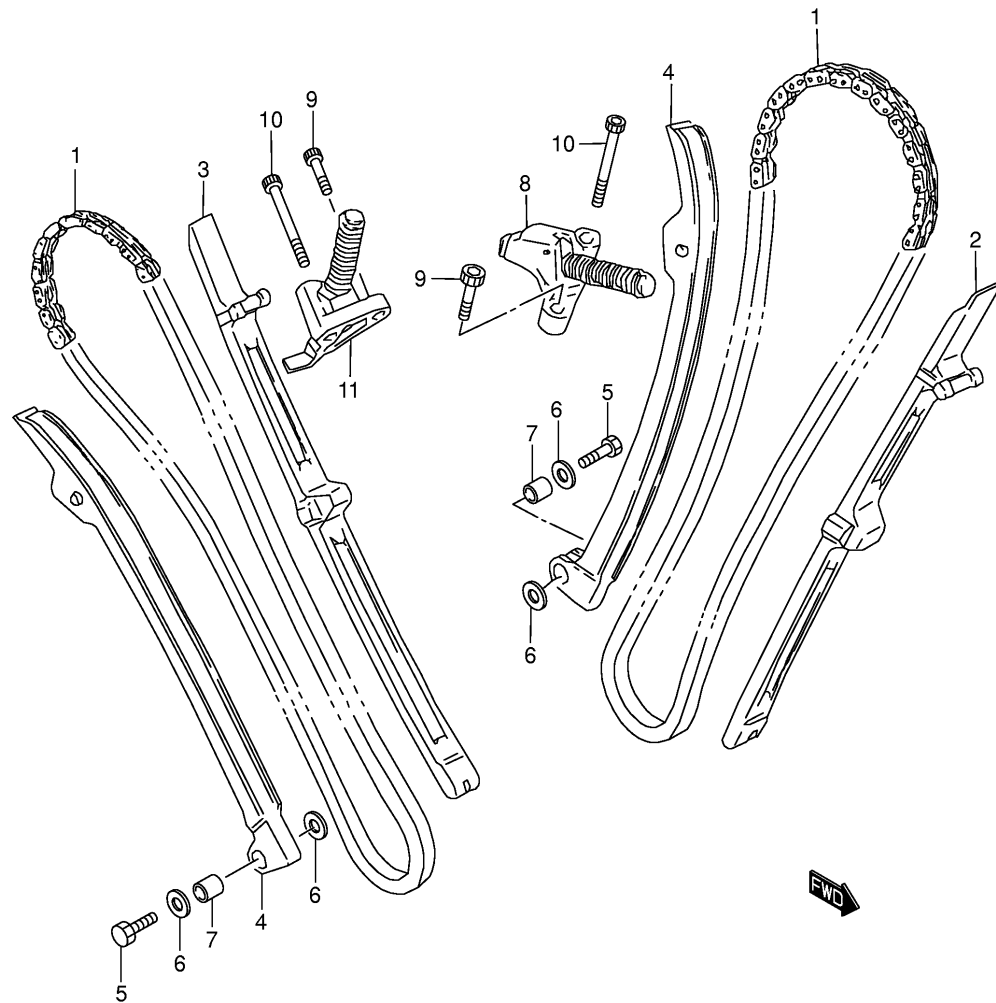 


Ref No	Part No	Description
1	12760-38B00	Chain, Cam Shaft Drive
2	12771-38B00	Guide, Cam Chain Front
3	12771-10F00	Guide, Cam Chain Rear
4	12811-38B00	Tensioner, Cam Chain
5	09100-06129	Bolt (6x26)
6	08211-06182	Washer
7	09180-06184	Spacer
8	12831-38A00	Adjuster Assy, Tensioner Front
9	07130-06203	Bolt
10	07130-06453	Bolt
11	12832-38A00	Adjuster Assy, Tensioner Rear

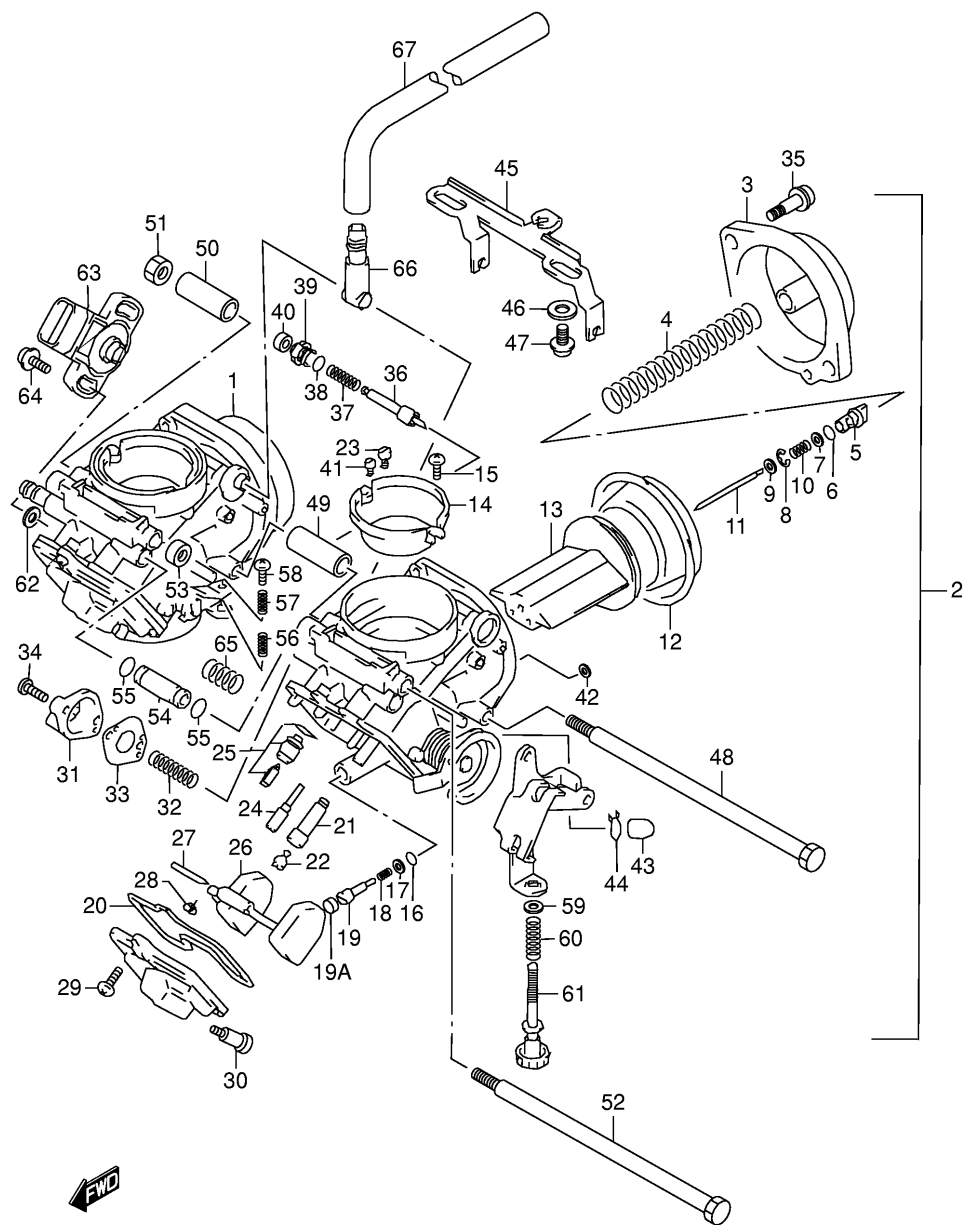 


Ref No	Part No	Description
1	13201-10F01	Carburetor Assy, Rh
1	13201-10F21	Carburetor Assy, Rh
1	13201-10F31	Carburetor Assy, Rh
1	13201-10F60	Carburetor Assy, Rh
2	13202-10F02	Carburetor Assy, Lh
2	13202-10F22	Carburetor Assy, Lh
2	13202-10F32	Carburetor Assy, Lh
2	13202-10F60	Carburetor Assy, Lh
3	13502-34E00	. Cover Assy, Diaphragm
4	13573-10F00	. Spring
5	13418-33E00	. Holder
6	09280-05004	. O Ring (d:1.9,id:4.8)
7	13382-44030	. Washer
8	13394-17E60	. E Ring, Multiple Jet Nozzle
9	13387-44030	. Ring
10	13481-33E00	. Spring
11	13383-10F00	. Needle, Jet (5d94-56-3)
11	13383-10F10	. Needle, Jet (5e08-56-3)
11	13383-10F00	. Needle, Jet (5d94-56-4)
11	13383-10F10	. Needle, Jet (5e08-56-4)
12	13507-17C01	. Diaphragm
13	13501-34E00	. Valve, Piston
14	13667-34E00	. Funnel
15	02112-04107	. Screw
16	13295-29900	. O Ring
17	13291-29900	. Washer
18	13268-48700	. Spring
19	13279-33E00	. Adjuster (2.0)
19	13279-33E00	. Adjuster, Rh (2,1/2)
19	13279-33E00	. Adjuster, Lh (2,5/8)
19	13279-33E00	. Adjuster, Rh (2,7/8)
19a	13281-05A00	. Plug
20	13258-33E00	. O Ring
21	13385-33E00	. Holder, Jet
22	09491-22014	. Jet, Main (112.5)
22	09491-22013	. Jet, Main (110)
22	09491-23019	. Jet, Main (117.5)
22	09491-23012	. Jet, Main (115)
23	09491-55004	. Jet, Pilot Air (#55)
23	09491-80009	. Jet, Pilot Air (#80)
24	09492-32010	. Jet, Pilot (32.5)
24	09492-35021	. Jet, Pilot (35)
25	13370-33E80	. Valve Assy, Needle
26	13250-33E00	. Float Assy
27	13254-92910	. Pin, Float
28	13602-05A10	. Screw
29	13603-14A00	. Screw
30	13247-02340	. Screw, Drain
31	13502-10F00	. Cover Assy
32	13271-10F00	. Spring
33	13480-10F00	. Diaphragm Assy
34	13601-04148	. Screw
35	13247-33E00	. Screw

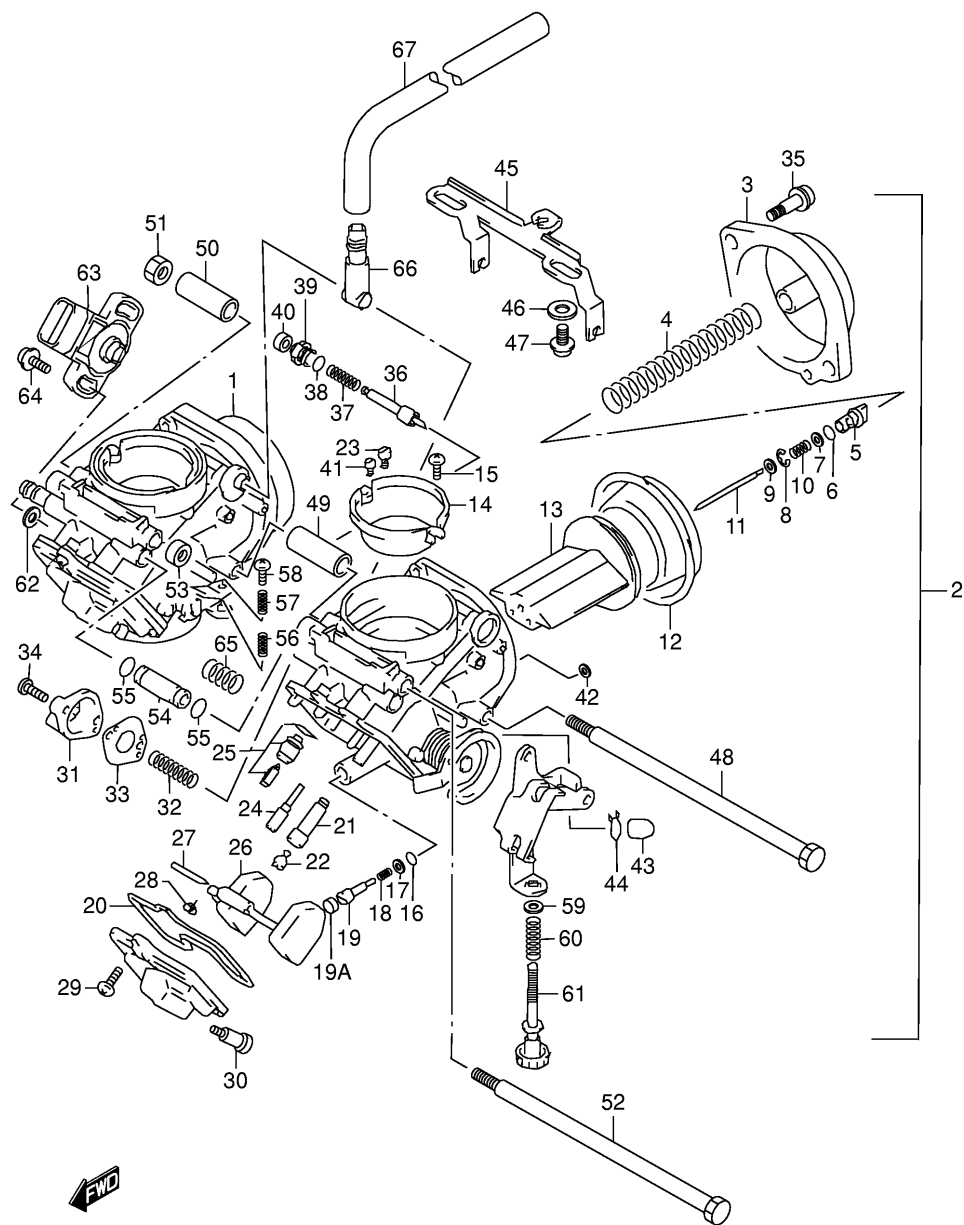 

Ref No	Part No	Description
36	13411-05300	.. Plunger
37	13417-26D00	.. Spring
38	13278-47090	.. O Ring
39	13418-44080	.. Holder, Guide
40	13682-31210	.. Cap
41	09493-38004	.. Jet, Pilot Air (1.9)
42	13295-33010	.. O Ring
43	13274-84000	.. Cap
44	09401-06101	.. Clip
45	13413-10F00	Lever
46	13557-33E00	Packing
47	02142-04083	Screw
48	13612-10F10	Bolt
49	13685-10F20	Pipe
50	13685-10F30	Pipe
51	13324-03010	Nut
52	13612-10F00	Bolt
53	13685-10F00	Pipe
54	13685-10F10	Pipe
55	13246-87400	O Ring
56	13268-96110	Spring
57	13271-44B00	Spring
58	13267-44B00	Screw
59	13392-78B00	Washer
60	13271-33C00	Spring
61	13267-10F00	Adjust Screw Assy
62	13663-31010	Washer
63	13580-02F00	Sensor Assy, Throttle
64	13602-55A00	Screw, Sensor
65	13573-06C10	Spring
66	13683-10F00	Hose
67	13683-21E10	Hose

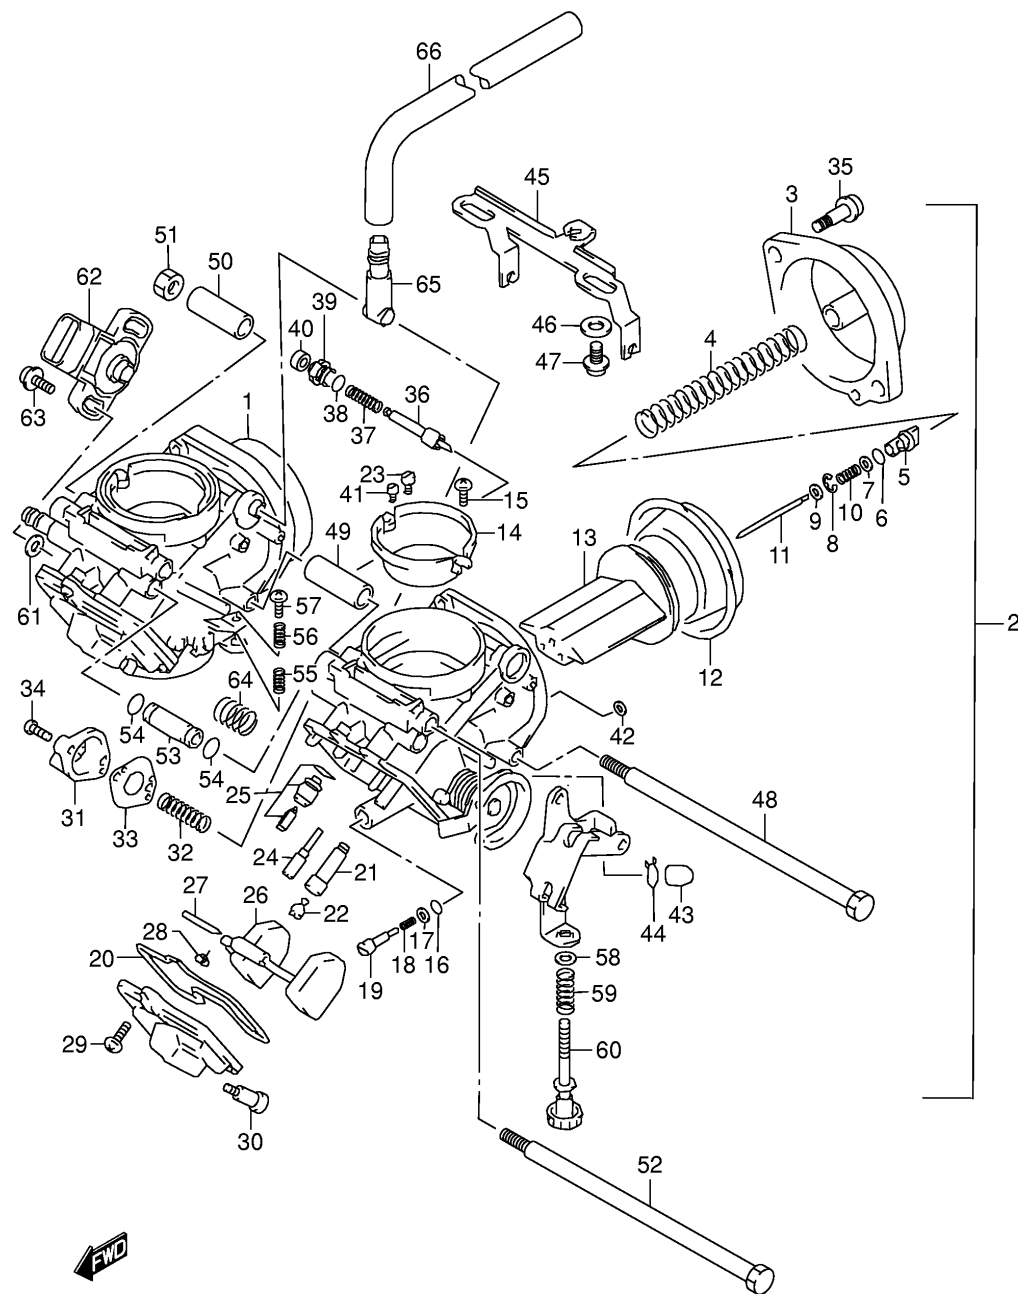 



Ref No	Part No	Description
1	13201-10F90	Carburetor Assy, Rh
1	13201-10F21	Carburetor Assy, Rh
1	13201-10F60	Carburetor Assy, Rh
2	13202-10F90	Carburetor Assy, Lh
2	13202-10F22	Carburetor Assy, Lh
2	13202-10F61	Carburetor Assy, Lh
3	13502-34E00	. Cover Assy, Diaphragm
4	13573-10F00	. Spring
5	13418-33E00	. Holder
6	09280-05004	. O Ring (d:1.9,id:4.8)
7	13382-44030	. Washer
8	13394-17E60	. E Ring, Multiple Jet Nozzle
9	13387-44030	. Ring
10	13481-33E00	. Spring
11	13383-10F80	. Needle, Jet (5e19-3)
11	13383-10F90	. Needle, Jet (5d124-3)
11	13383-10F00	. Needle, Jet (5d94-56-4)
11	13383-10F10	. Needle, Jet (5e08-56-4)
12	13507-17C01	. Diaphragm
13	13501-34E00	. Valve, Piston
14	13667-34E00	. Funnel
15	02112-04107	. Screw
16	13295-29900	. O Ring
17	13291-29900	. Washer
18	13268-48700	. Spring
19	13279-33E00	. Adjuster (1,3/8)
19	13279-33E00	. Adjuster (1,3/4)
19	13279-33E00	. Adjuster (2.0)
20	13258-33E00	. O Ring
21	13385-33E00	. Holder, Jet
22	09491-22014	. Jet, Main (112.5)
22	09491-22013	. Jet, Main (110)
22	09491-23019	. Jet, Main (117.5)
22	09491-23012	. Jet, Main (115)
23	09491-80009	. Jet, Pilot Air (80)
23	09491-55004	. Jet, Pilot Air (55)
24	09492-35021	. Jet, Pilot (35.0)
24	09492-32010	. Jet, Pilot (32.5)
24	09492-35021	. Jet, Pilot (35.0)
25	13370-33E80	. Valve Assy, Needle
26	13250-33E00	. Float Assy
27	13254-92910	. Pin, Float
28	13602-05A10	. Screw
29	13603-14A00	. Screw
30	13247-02340	. Screw, Drain
30	13247-13A00	. Screw, Drain
31	13502-10F00	. Cover Assy
32	13271-10F00	. Spring
33	13480-10F00	. Diaphragm Assy
34	13601-04148	. Screw
35	13247-33E00	. Screw
36	13411-05300	. Plunger
37	13417-26D00	. Spring

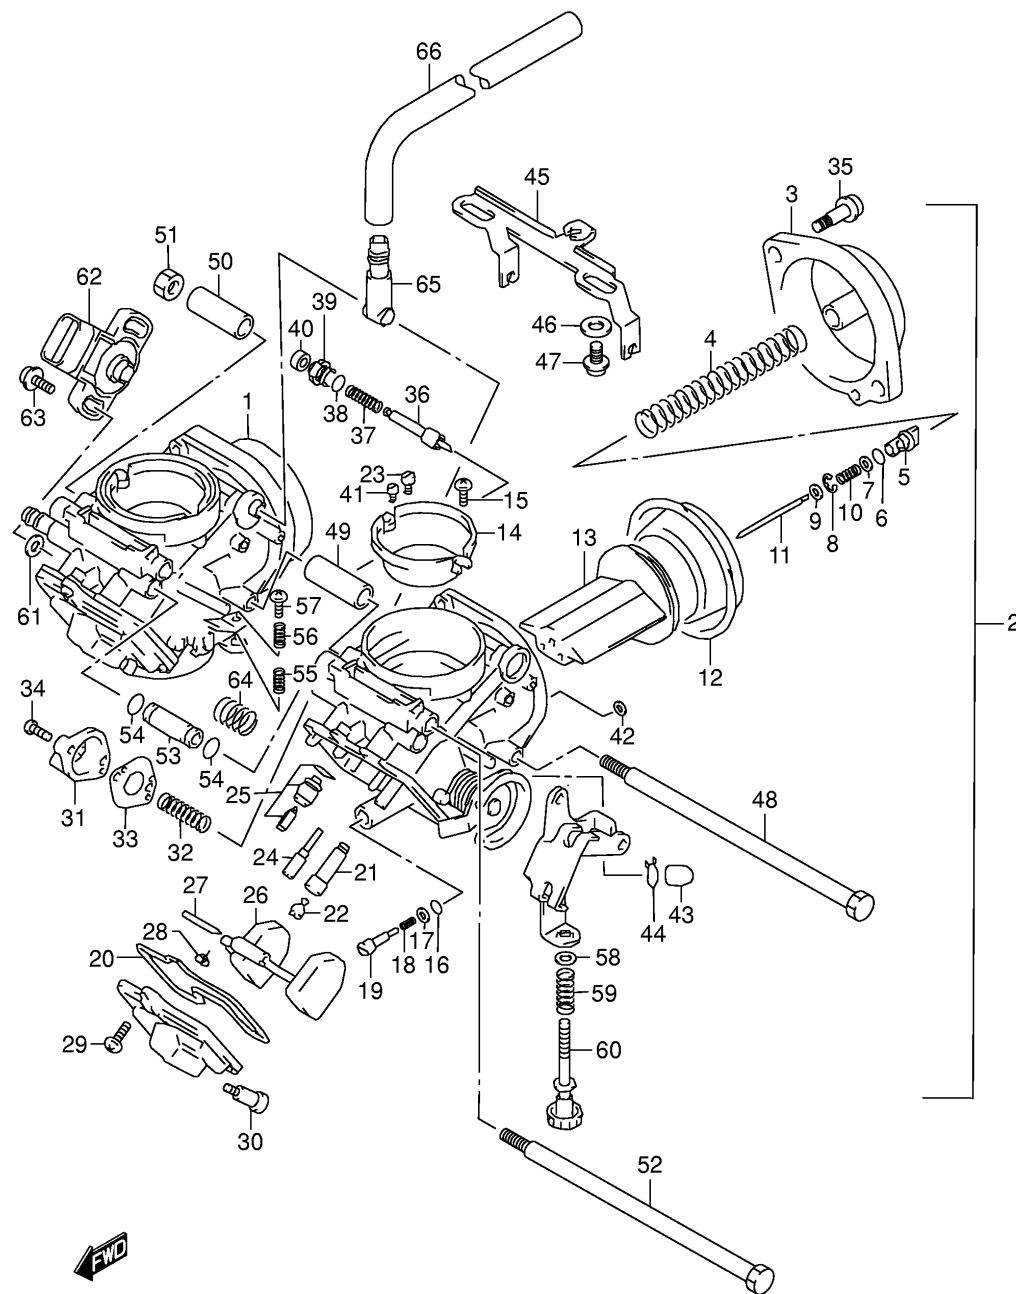 


Ref No	Part No	Description
38	13278-47090	. . O Ring
39	13418-44080	. . Holder, Guide
40	13682-31210	. . Cap
41	09493-32007	. . Jet, Pilot Air (160)
41	09493-38004	. . Jet, Pilot Air (1.9)
42	13295-33010	. . O Ring
43	13274-84000	. . Cap
44	09401-06101	. . Clip
45	13413-10F00	Lever
46	13557-33E00	Packing
47	02142-04083	Screw
48	13612-10F10	Bolt
49	13685-10F20	Pipe
50	13685-10F30	Pipe
51	13324-03010	Nut
52	13612-10F00	Bolt
53	13685-10F10	Pipe
54	13246-87400	O Ring
55	13268-96111	Spring
56	13271-44B00	Spring
57	13267-44B00	Screw
58	13392-78B00	Washer
59	13271-33C00	Spring
60	13267-10F00	Adjust Screw Assy
61	13663-31010	Washer
62	13580-02F00	Sensor Assy, Throttle
63	13605-20C00	Screw, Sensor
64	13573-06C10	Spring
65	13683-10F00	Hose
66	13683-21E10	Hose

Ref No	Part No	Description
1	13700-10F00	Cleaner Assy, Air
1	13700-10F10	Cleaner Assy, Air
2	13780-10F00	. Filter
3	02142-05123	. Screw
4	13881-10F00	. Tube, Outlet
5	13826-02F00	. Clamp
6	13853-10F00	. Tube, Breather
7	09401-14301	. Clip
8	13859-41B10	. Plug
8	13859-41B10	. Plug
9	09401-14301	. Clip
9	09401-14301	. Clip

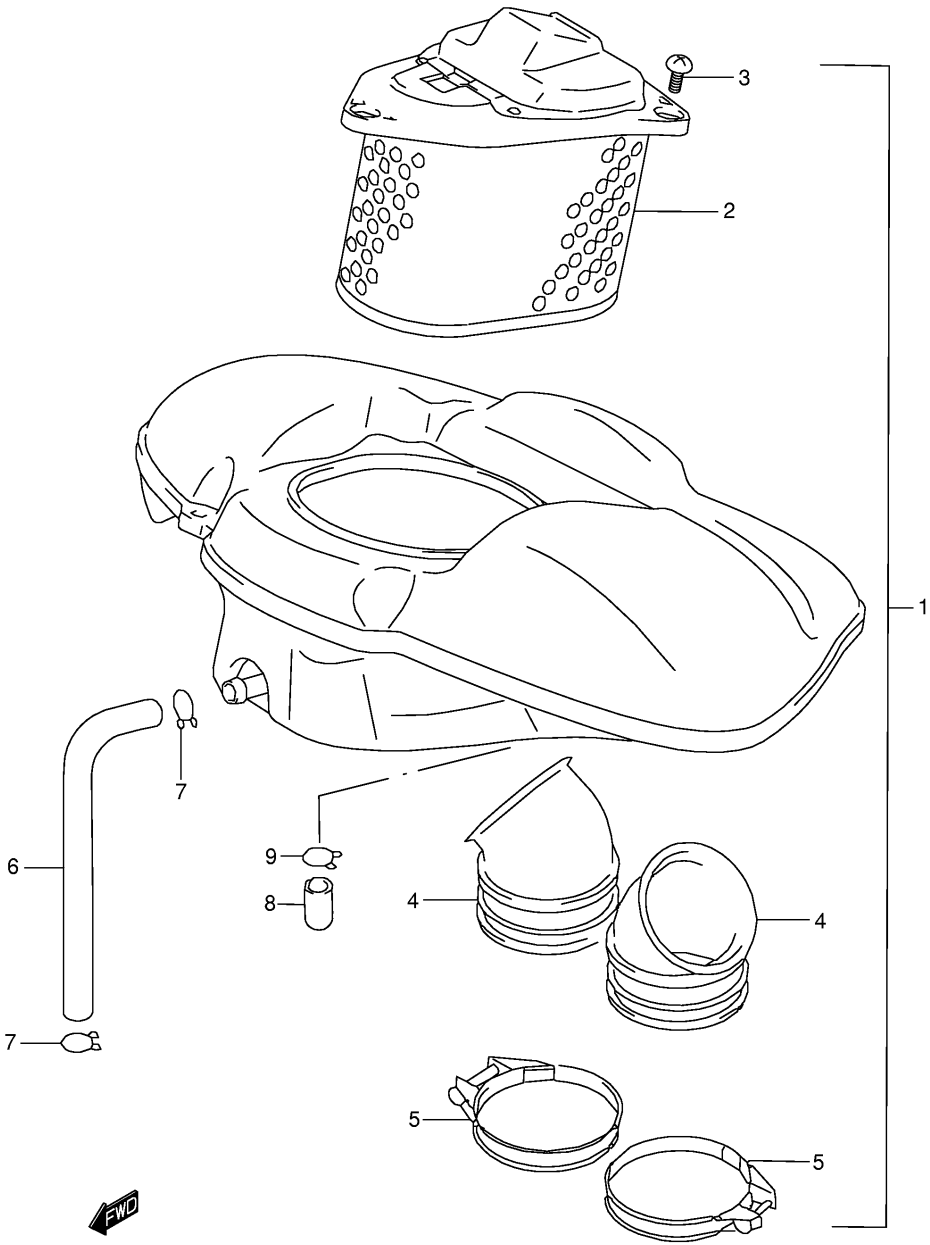 

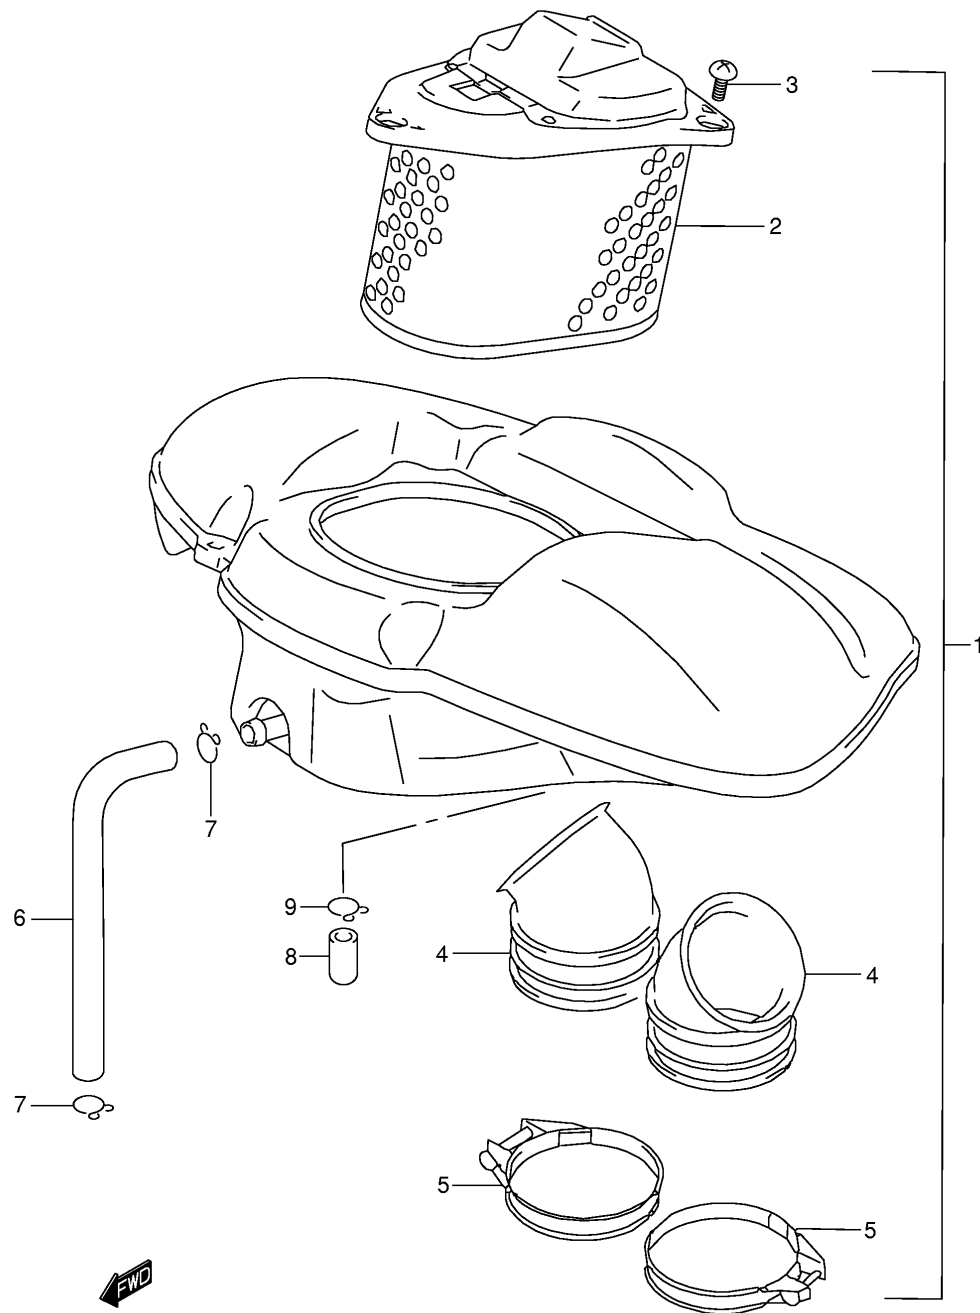 


Ref No	Part No	Description
1	13700-10F00	Cleaner Assy, Air
2	13780-10F00	. Filter
3	02142-05123	. Screw
4	13881-10F00	. Tube, Outlet
5	13826-02F00	. Clamp
6	13853-10F00	. Tube, Breather
7	09401-14301	. Clip
8	13859-41B10	. Plug
8	13859-41B10	. Plug
9	09401-14301	. Clip
9	09401-14301	. Clip

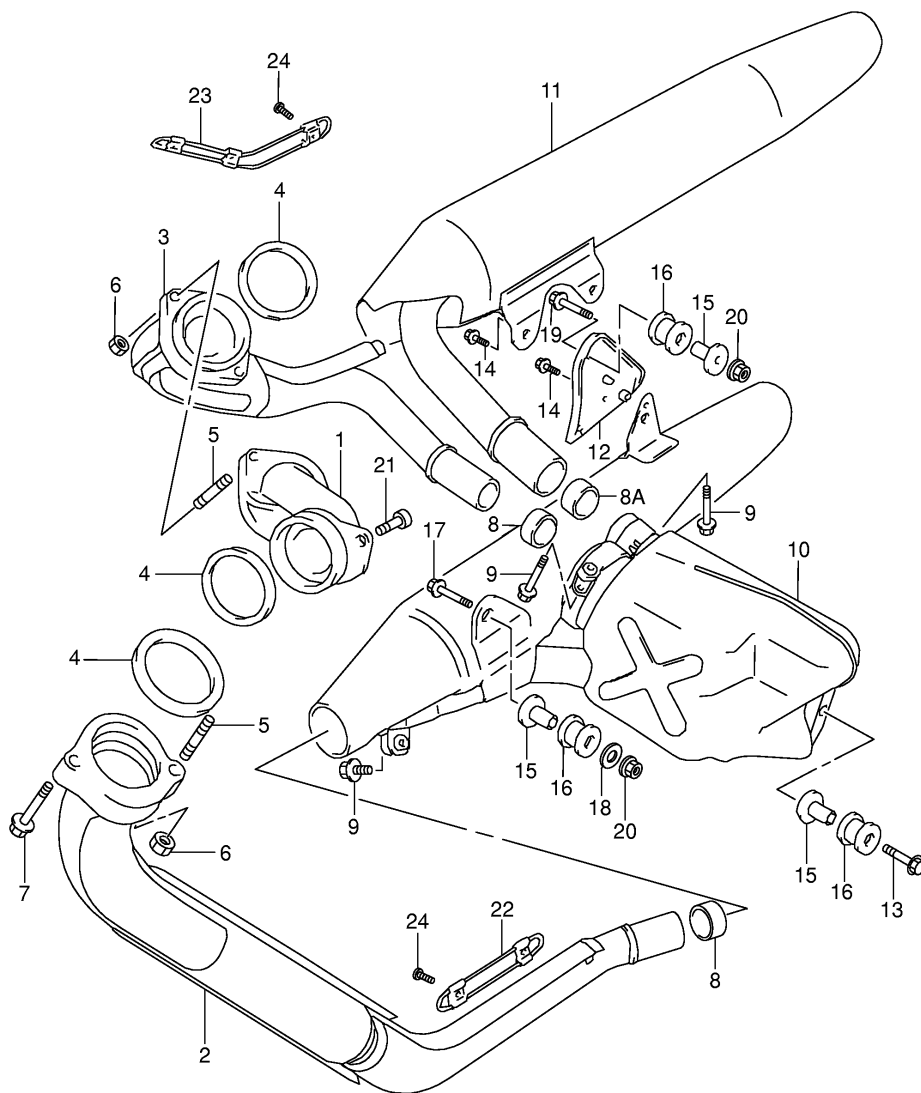 


Ref No	Part No	Description
1	14111-10F01	Manifold, Exhaust Rear
2	14150-10F00	Pipe, Exhaust Rh
3	14160-10F00	Pipe, Exhaust Lh
4	14181-45C00	Gasket, Exhaust Pipe
5	09108-08142	Stud Bolt (8x30)
6	08313-20087	Nut
7	09104-08026	Bolt, Front Upper
8	14771-13E00	Connector, Muffler Front
8a	14771-14D00	Connector, Muffler
9	09106-08137	Bolt
10	14305-10F00	Muffler, Rh
10	14305-10F10	Muffler, Rh
11	14340-10F00	Body, Muffler Lh
11	14340-10F10	Body, Muffler Lh
12	14770-10F00	Bracket, Muffler Support
13	09118-08152	Bolt, Premuffler Support Lh
14	09103-08069	Bolt, Muffler Support
15	09180-08156	Spacer
16	09320-12049	Cushion
17	01550-08453	Bolt, Muf Support Rh Front
18	09160-08140	Washer, Muf Support Rh Front
19	01550-08403	Bolt, Muf Support Rh Rear
20	08361-25088	Nut, Muffler, Rh
21	07130-08253	Bolt, Rear Muffler
22	14780-10F00	Guard, Exhaust Rh
23	14790-10F00	Guard, Exhaust Lh
24	09139-06078	Screw




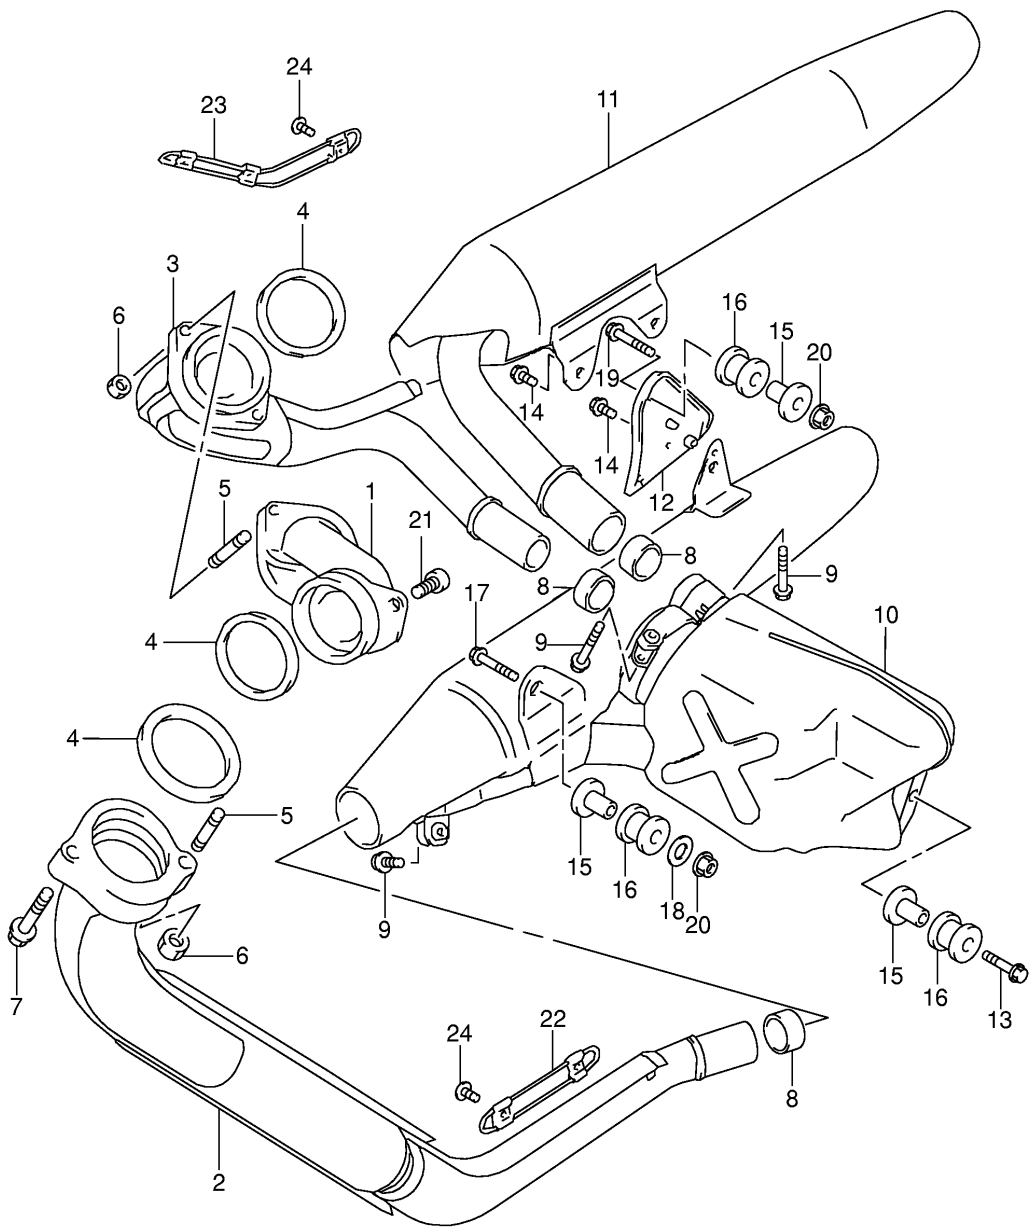 


Ref No	Part No	Description
1	14111-10F01	Manifold, Exhaust Rear
2	14150-10F20	Pipe, Exhaust Rh
3	14160-10F00	Pipe, Exhaust Lh
4	14181-10F00	Gasket, Exhaust Pipe
5	09108-08142	Stud Bolt (8x30)
6	08313-20087	Nut
7	09104-08026	Bolt, Front Upper
8	14771-13E00	Connector, Muffler Front
9	09106-08137	Bolt
10	14305-10F41	Muffler, Rh
10	14305-10F30	Muffler, Rh
11	14340-10F41	Body, Muffler Lh
11	14340-10F30	Body, Muffler Lh
12	14770-10F00	Bracket, Muffler Support
13	09118-08152	Bolt, Premuffler Support Lh
14	09103-08069	Bolt, Muffler Support
15	09180-08156	Spacer
16	09320-12049	Cushion
17	01550-08453	Bolt, Muf Support Rh Front
18	09160-08140	Washer, Muf Support Rh Front
19	01550-08403	Bolt, Muf Support Rh Rear
20	08361-25088	Nut, Muffler, Rh
21	07130-08253	Bolt, Rear Muffler
22	14780-10F10	Guard, Exhaust Rh
23	14790-10F10	Guard, Exhaust Lh
24	09139-06078	Screw

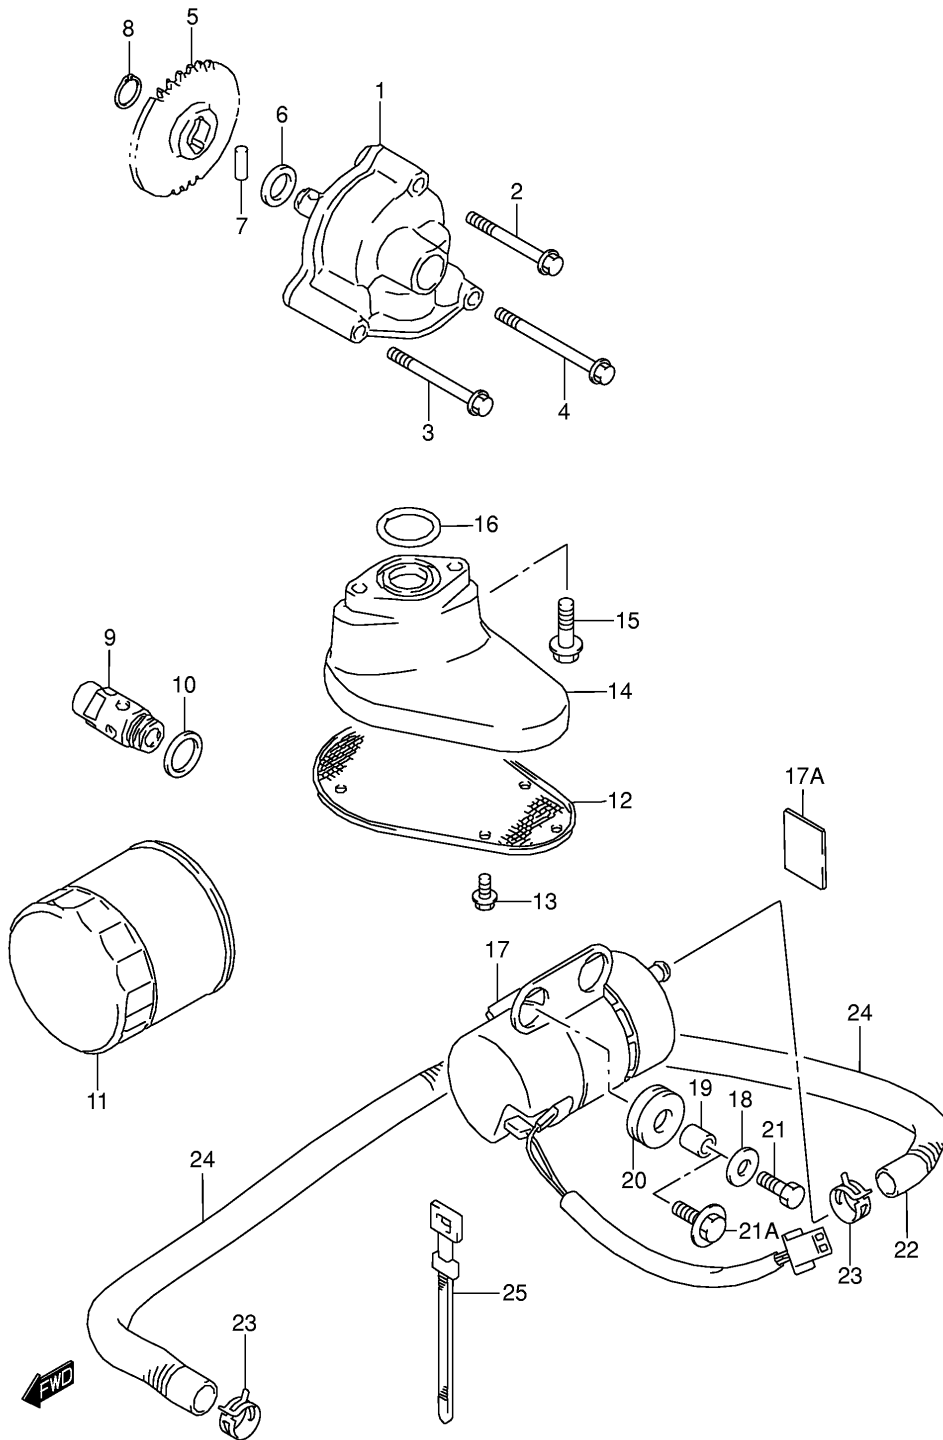 


Ref No	Part No	Description
1	16400-38B10	Pump Assy, Oil
2	01547-06453	Bolt
3	01547-06553	Bolt
4	01547-06653	Bolt
5	16331-38B01	Gear, Oil Pump Driven (nt:31)
6	09181-12158	Washer
7	09261-05006	Pin
8	08331-31126	Circlip
9	16440-17C20	Valve Assy, Oil Relief
10	09168-16002	Gasket
11	16510-34E00	Filter, Engine Oil
12	16520-38B10	Strainer, Oil
13	01550-05103	Bolt
14	16525-38B10	Holder, Oil Strainer
15	01550-06253	Bolt
16	09280-22008	O Ring (d:3.1,id:22.7)
17	15100-10F00	Pump Assy, Fuel
17a	61374-08010	Cushion
18	09160-06077	Washer (6.5x20x1.2)
19	09180-06263	Spacer
20	09320-09009	Cushion
21	01500-06207	Bolt
22	15801-10F00	Hose, Fuel (pump & Carb)
23	09401-11407	Clip
24	09440-14047	Spring

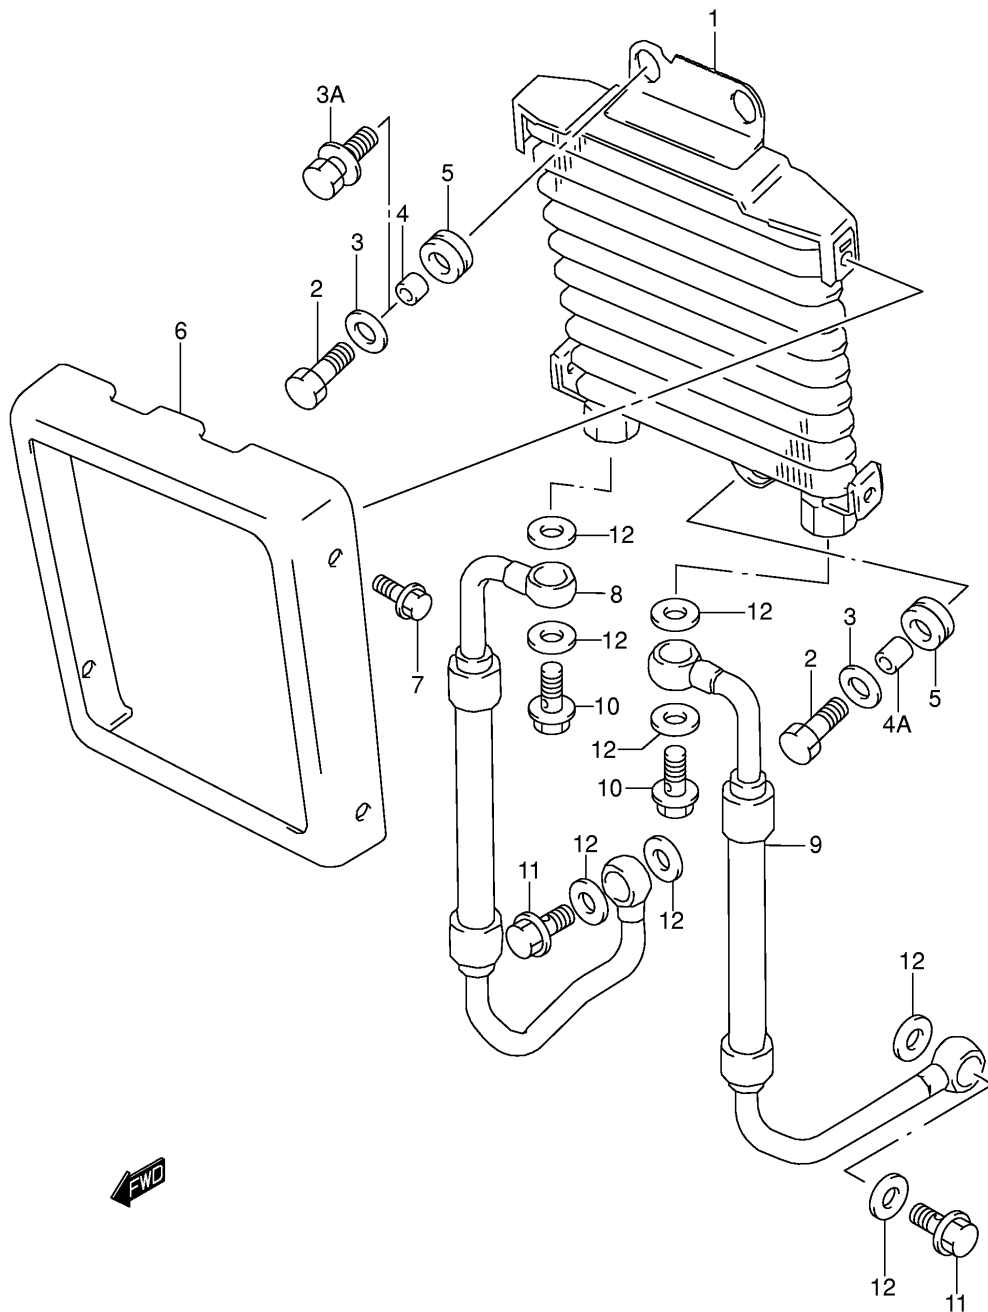 


Ref No	Part No	Description
1	16600-10F00	Cooler Assy, Oil
2	01500-06203	Bolt
3	09160-06077	Washer (6.5x20x1.2)
4	09180-06310	Spacer (6.5x10x10)
4a	09180-07004	Spacer, Lower (6.5x10.5x12)
5	09320-10015	Cushion
6	16621-10F00	Cover, Oil Cooler
7	09139-06027	Bolt (6x12)
8	16460-10F00	Hose, Oil Cooler Rh
9	16470-10F00	Hose, Oil Cooler Lh
10	09360-14009	Bolt, Oil Hose Union
11	09360-14012	Bolt, Oil Hose Union
12	09168-14011	Gasket (14x20x1.5)

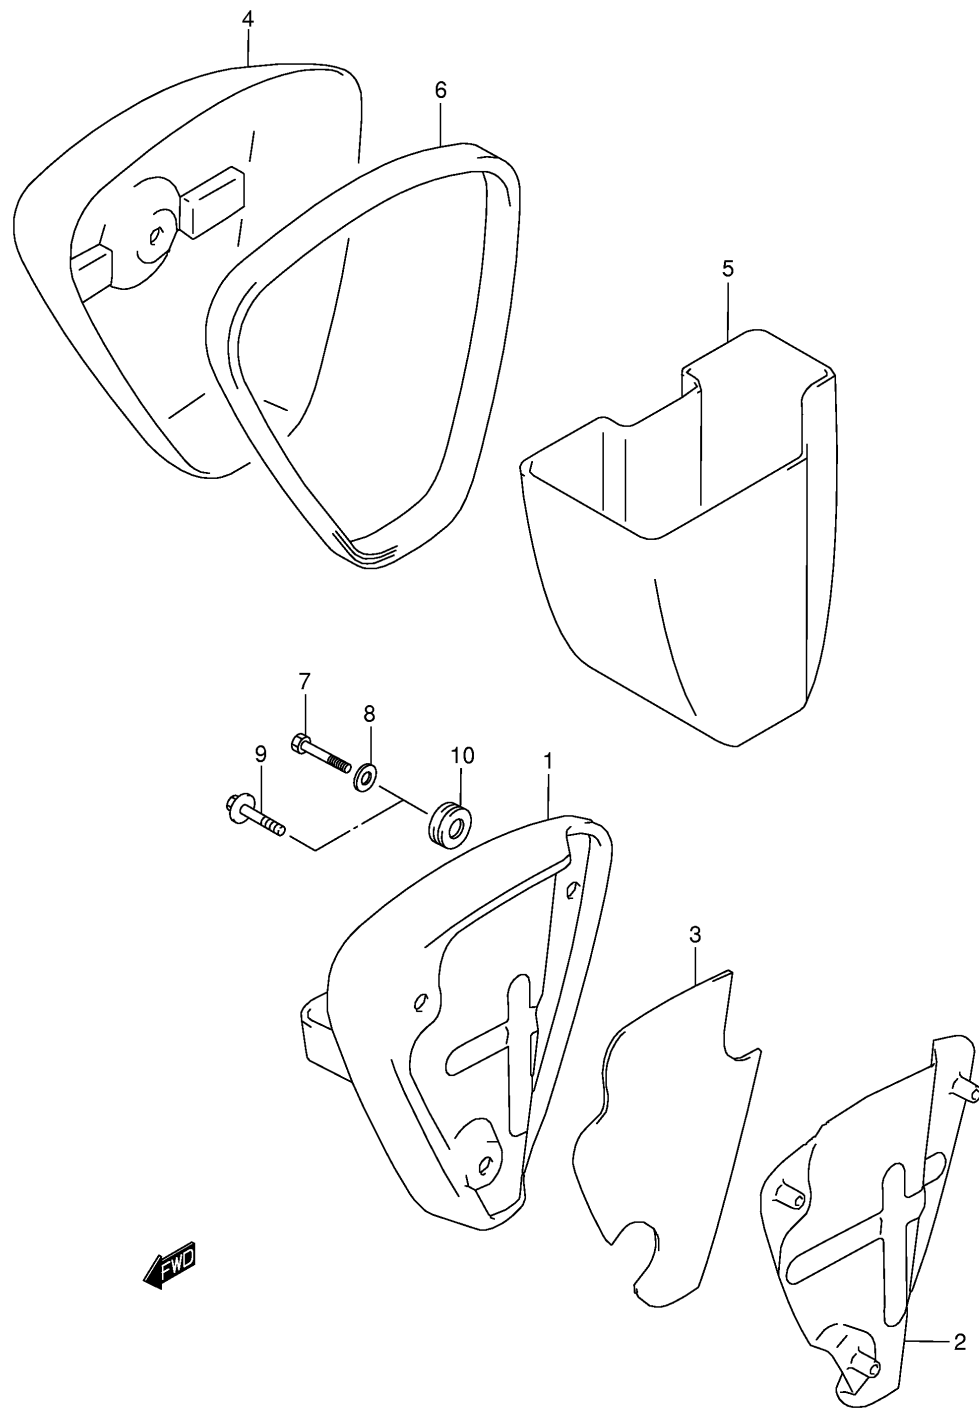 

Ref No	Part No	Description
1	18610-10F10	Bracket
2	18740-10F10	Plate
3	18745-10F10	Sheet
4	18780-10F10	Cover Assy, 2nd Air
5	18783-10F10	Holder
6	18788-48E00	Cushion
9	09116-06176	Bolt, 2nd Air Support
10	09320-10014	Cushion

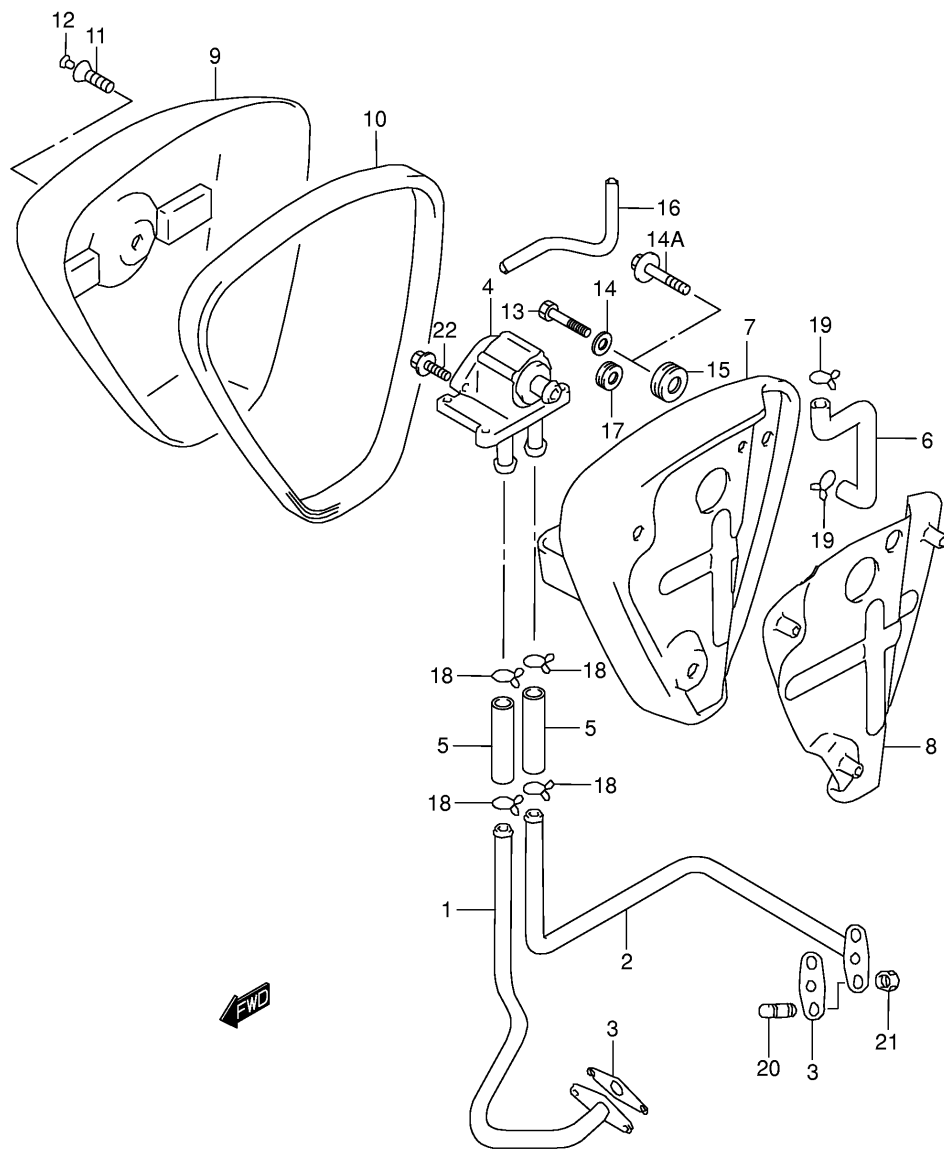 



Ref No	Part No	Description
1	18410-10F00	Pipe, 2nd Air Fr
2	18420-10F00	Pipe, 2nd Air Rr
3	18441-45C01	Gasket
4	18450-10F03	Valve Assy, 2nd Air
5	18461-10F01	Hose, 2nd Air Valve
6	18711-10F00	Hose, 2nd Air Cleaner
7	18610-10F00	Bracket
8	18740-10F00	Plate, Heat Guard
9	18780-10F00	Cover Assy, 2nd Air
10	18788-48E00	Cushion
11	09106-08089	Bolt, 2nd Air Cover (8x25)
12	09250-06011	Cap
14a	09116-06176	Bolt, 2nd Air Support
15	09320-10014	Cushion
17	09320-08013	Cushion
18	09401-13409	Clip
19	09401-15101	Clip
20	01421-06163	Bolt
21	08316-10063	Nut
22	01550-06163	Bolt

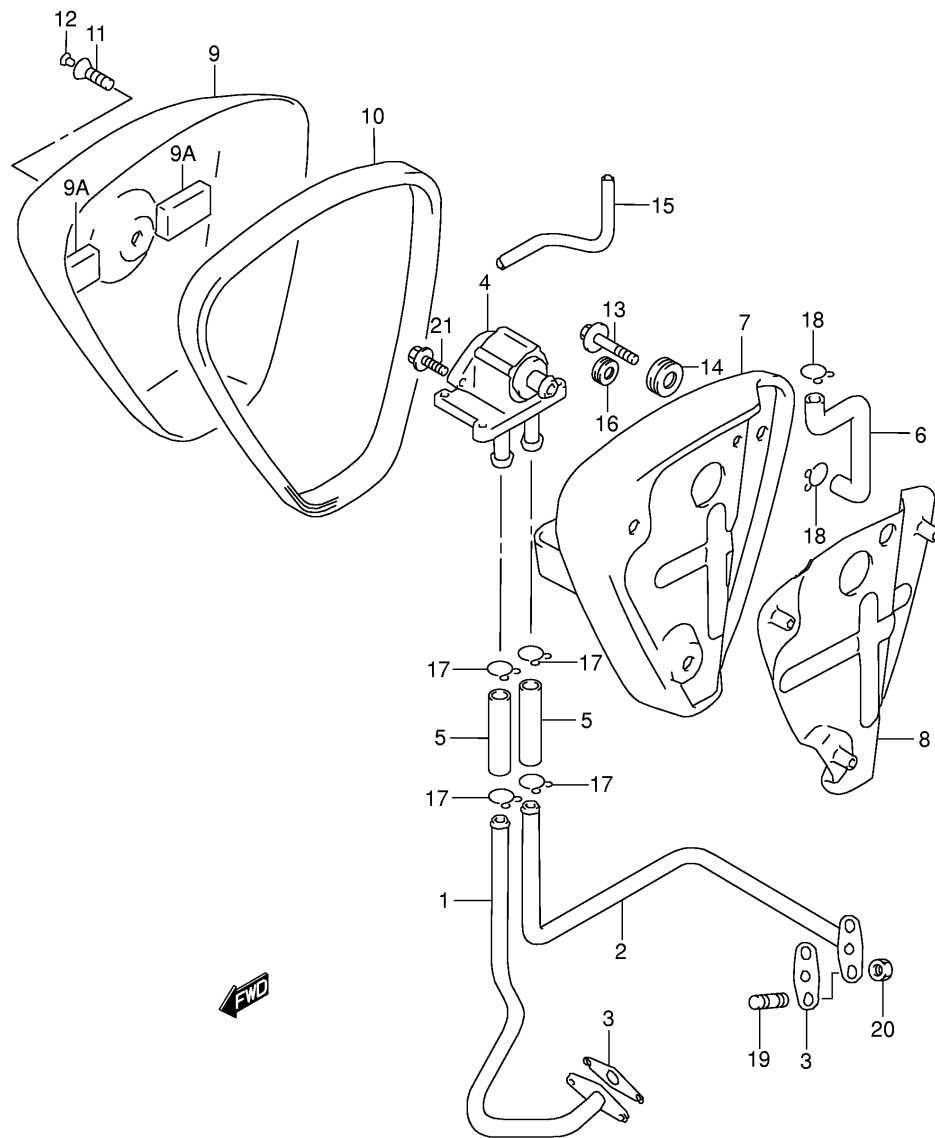 

Ref No	Part No	Description
1	18410-10F00	Pipe, 2nd Air Fr
2	18420-10F00	Pipe, 2nd Air Rr
3	18441-45C01	Gasket
4	18450-10F03	Valve Assy, 2nd Air
5	18461-10F01	Hose, 2nd Air Valve
6	18711-10F00	Hose, 2nd Air Cleaner
7	18610-10F00	Bracket
8	18740-10F00	Plate, Heat Guard
9	18780-10F00	Cover Assy, 2nd Air
9a	47161-04A00	• . Cushion, 2nd Air Cover Inner
10	18788-48E00	Cushion
11	09106-08089	Bolt, 2nd Air Cover (8x25)
12	09250-06011	Cap
13	09116-06176	Bolt, 2nd Air Support
14	09320-10014	Cushion
15	09355-35755-600	Hose (4x8x600)
16	09320-08013	Cushion
17	09401-13409	Clip
18	09401-15101	Clip
19	01421-06163	Bolt
20	08316-10063	Nut
21	01550-06163	Bolt


Ref No	Part No	Description
1	18610-10F10	Bracket
2	18740-10F10	Plate
3	18745-10F10	Sheet
4	18780-10F10	Cover Assy, 2nd Air
4a	47161-04A00	• . Cushion, 2nd Air Cover Inner
5	18783-10F10	Holder
6	18788-48E00	Cushion
7	09116-06176	Bolt, 2nd Air Support
8	09320-10014	Cushion

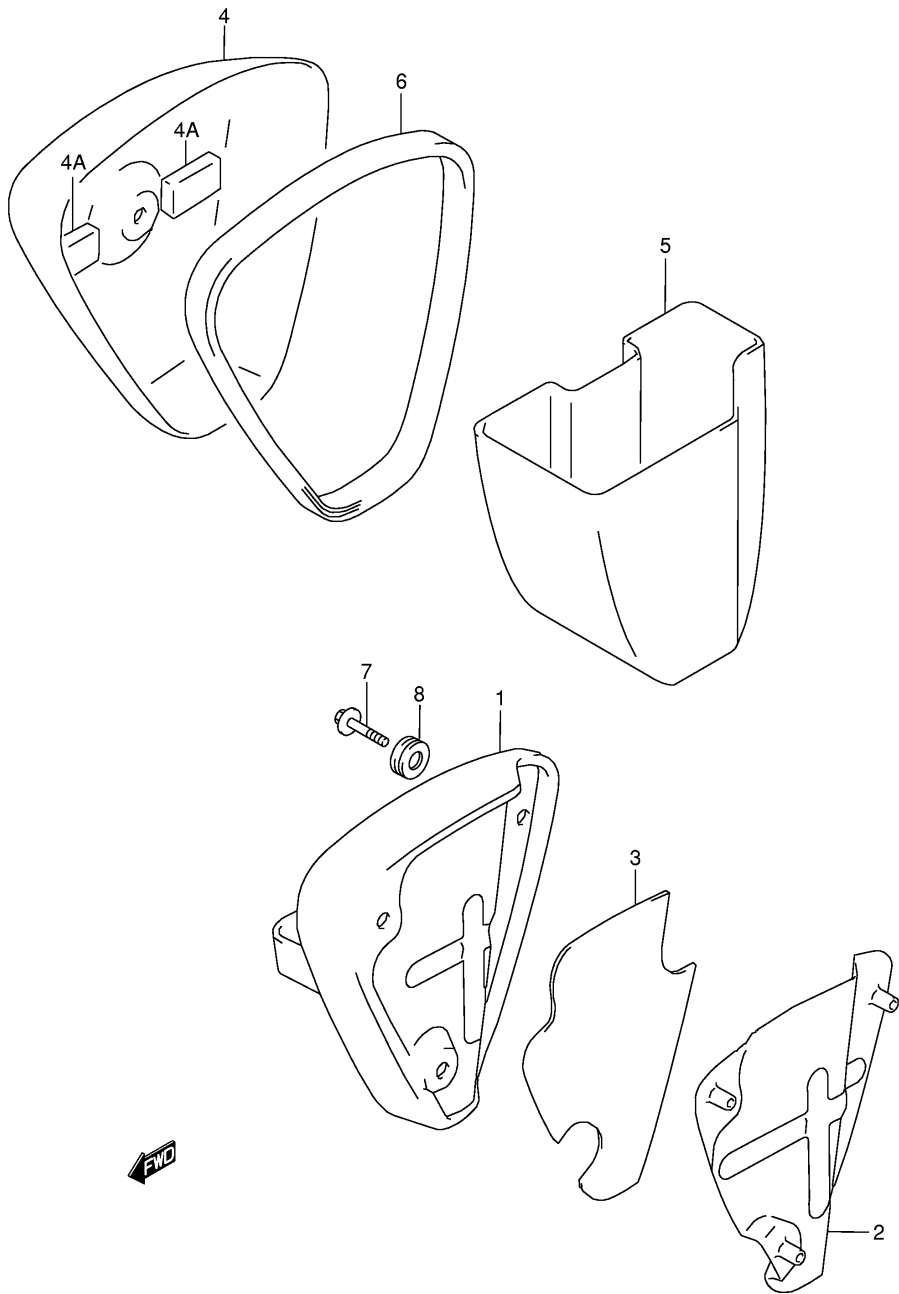 

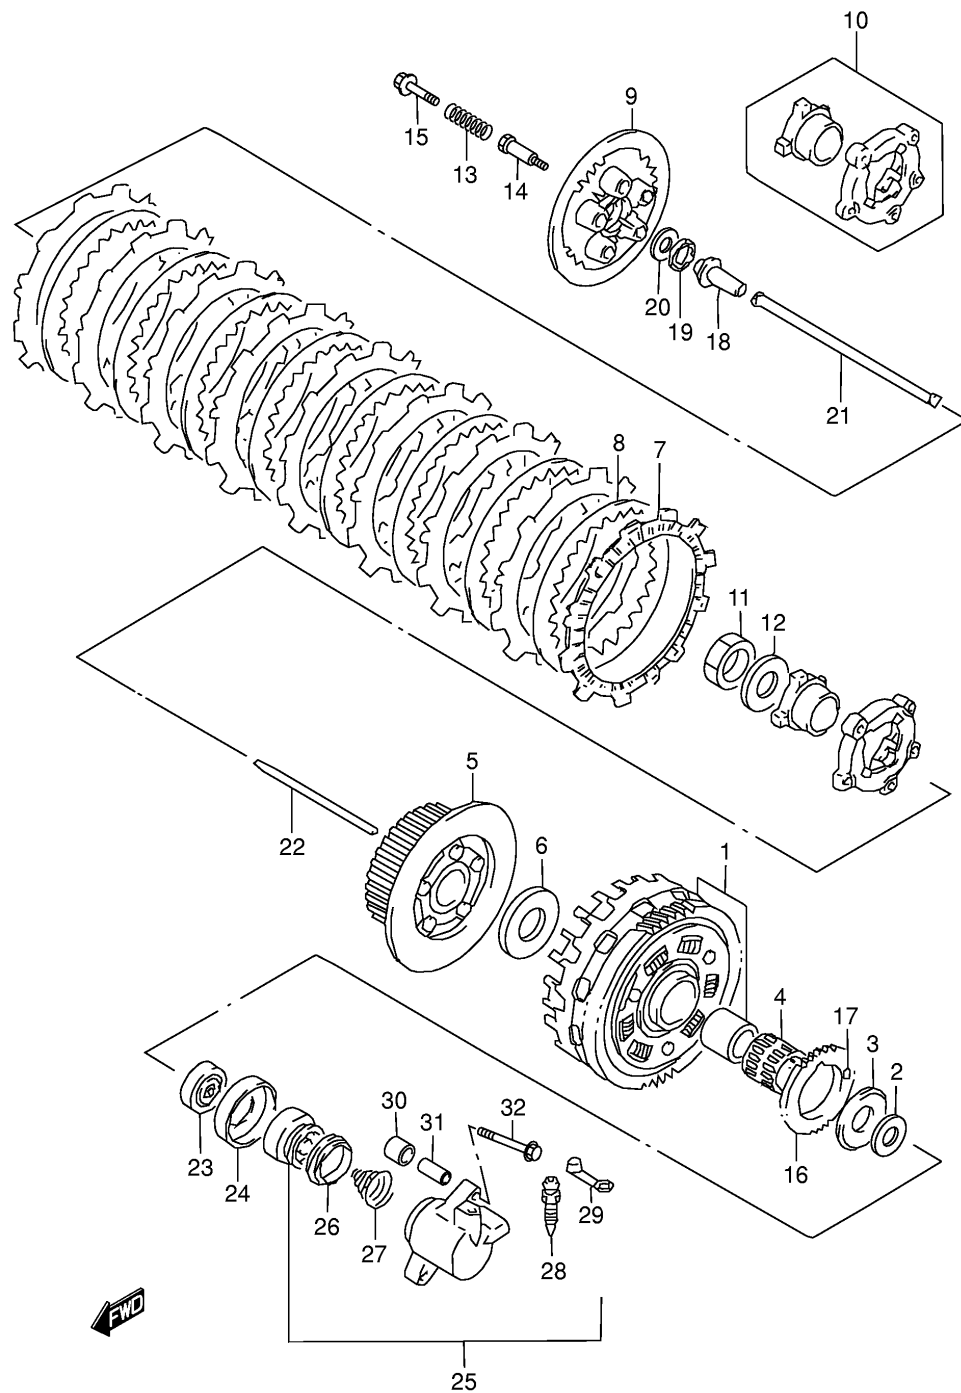 


Ref No	Part No
--------	---------


1	21200-10810	Gear, Primary Driven (nt:76)
2	09160-25066	Washer, Inner (25x38x2.5)
3	09160-25037	Washer, Thrust (25.1x54x2.5)
4	09263-35017	Bearing (35x40x35.8)
5	21410-10F00	Hub, Sleeve
6	09160-25056	Washer (25x50x2.5)
7	21441-31D20	Plate, Clutch Drive
8	21451-44B00	Plate, Clutch Driven
9	21462-10F00	Disc, Clutch Pressure
10	21610-10F00	Cam Set, Clutch
11	09159-24010	Nut, Clutch Sleeve Hub
12	09164-24006	Washer, Clutch Sleeve
13	21413-10F00	Spring, Clutch
14	21411-02F00	Bolt, Clutch Spring Sprt
15	21482-13E00	Bolt, Clutch Spring
16	16321-38B00	Gear, Oil Pump Drive (nt:40)
17	09261-06002	Pin
18	23121-38B00	Piece, Push
19	09263-15003	Bearing (15x28x2)
20	09160-15045	Washer (15.5x28x1)
21	23110-38B00	Rod, Push Rh
22	23111-24A01	Rod, Push Lh
23	09285-06017	Oil Seal (6x34x11)
24	23117-38A00	Retainer
25	23160-10F00	Cylinder, Clutch Release
26	23163-10F00	• . Cup
27	23164-10F00	• . Spring
28	59121-01A00	• . Bleeder
29	59122-01A00	• . Cap
30	09180-09019	Spacer (9x16x11)
31	09206-09011	Pin
32	01550-06403	Bolt

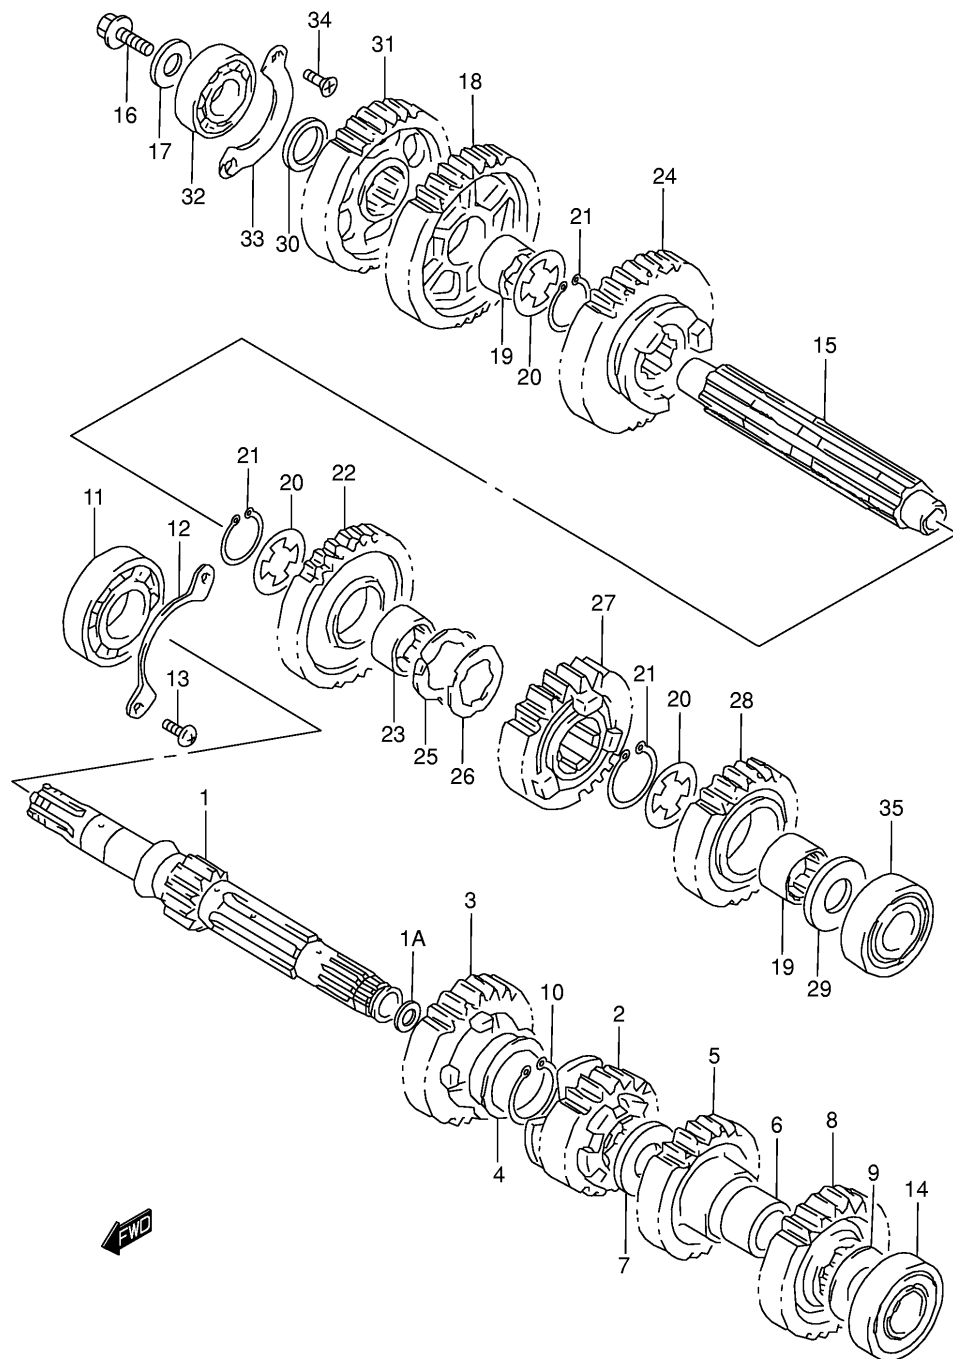 


Ref No	Part No	Description
1	24120-38B20	Countershaft (nt:12)
1a	09280-17004	O Ring (d:1.9,id:16.6)
2	24221-38B12	Gear, 2nd Drive (nt:17)
3	24231-38B11	Gear, 3rd Drive (nt:21)
4	09301-28001	Bush, 3rd Drive Gear
5	24241-38B21	Gear, 4th Drive (nt:24)
6	24242-38B10	Bush, 4th Drive Gear
7	09181-22195	Washer (22x32x1.0)
8	24251-38B20	Gear, 5th Drive (nt:26)
9	09181-20223	Washer (20x32x1.0)
10	08331-31286	Circlip
11	09262-25080	Bearing, Rh (25x62x17)
12	24741-38A00	Retainer
13	02112-06123	Screw
14	09262-20080	Bearing, Lh (20x52x15)
15	24131-38B20	Drive Shaft
16	09103-10112	Bolt (10x24)
17	08211-10305	Washer
18	24311-38B20	Gear, 1st Driven (nt:36)
19	24332-24A00	Bush, 1st & 5th
20	09167-28001	Washer
21	08331-31286	Circlip
22	24321-38B20	Gear, 2nd Driven (nt:31)
23	24332-49000	Bush, 2nd Driven Gear
24	24331-38B12	Gear, 3rd Driven (nt:28)
25	09169-28001	Lock Washer, Rh
26	09167-28002	Lock Washer, Rh
27	24341-38B12	Gear, 4th Driven (nt:25)
28	24351-38B20	Gear, 5th Driven (nt:23)
29	08211-20382	Washer
30	09160-22032	Washer (22x32x3)
31	24621-38B00	Gear, Overdriving (nt:34)
32	09262-22029	Bearing, Rh (22x56x16)
33	24741-38401	Retainer
34	02122-06123	Screw
35	09262-20080	Bearing, Lh (20x52x15)

Ref No	Part No	Description
1	24900-10810	Gear & Housing Set, Secondary
2	09262-25080	• . Bearing (25x62x17)
3	09263-20038	• . Bearing (20x34x16)
4	09283-44010	• . Oil Seal (44x68x8)
5	24931-38B00	Stopper, Bearing
6	24631-38B00	Gear, Over Driving Driven
7	24632-38B01	Bush
8	24922-38B01	Dog, Output Cam
9	24924-10F00	Spring
10	08331-31266	Circlip
11	07130-08203	Bolt
12	24935-38820	Shim Set, Sec Drive
13	24945-38810	Shim Set, Sec Drive
14	09160-57001	Washer (57x90x3)
15	09280-78003	O Ring (d:3.7,id:76.5)
16	07130-08253	Bolt
17	04221-07129	Pin

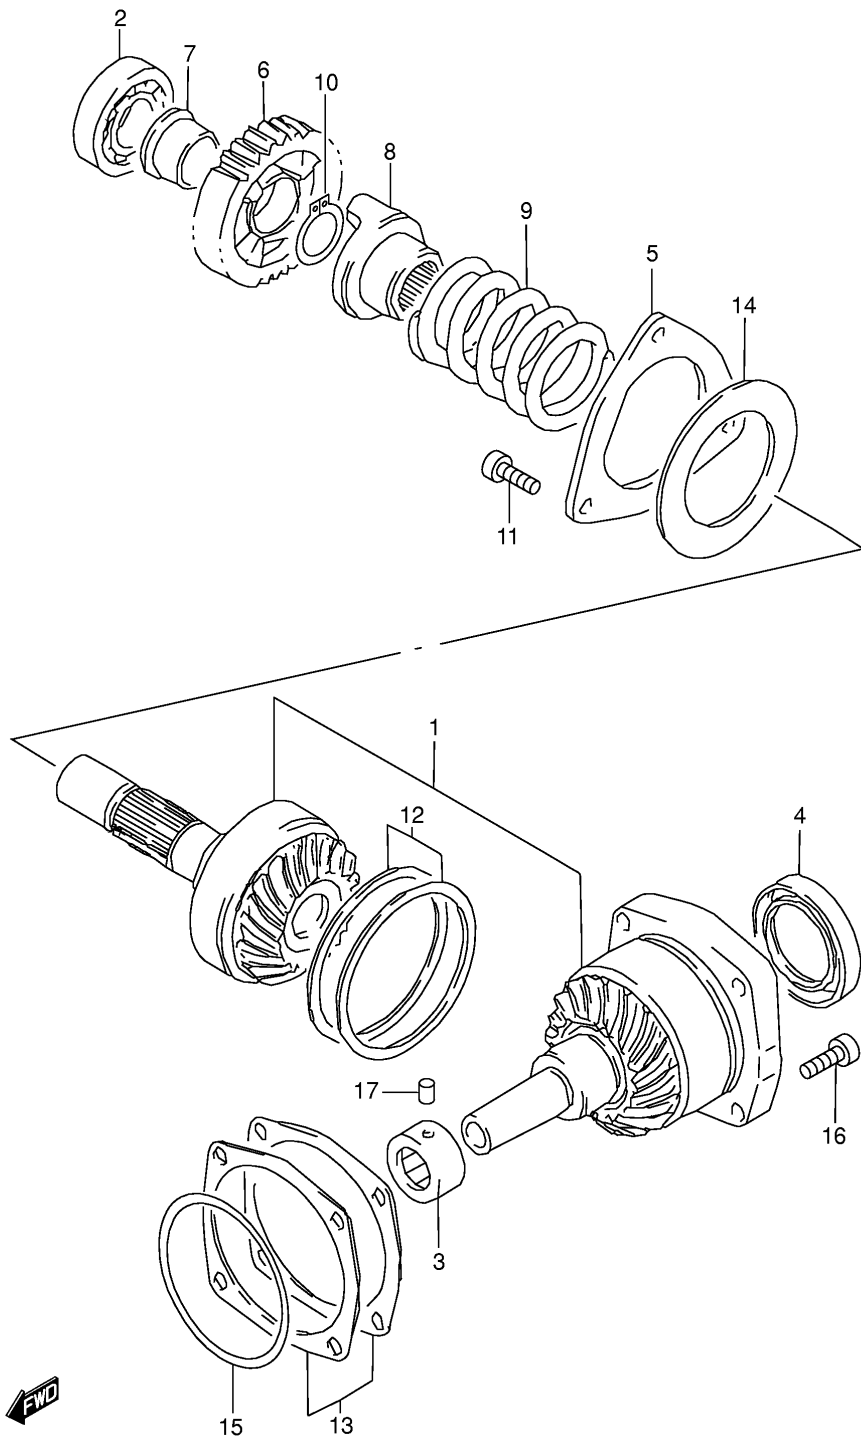 

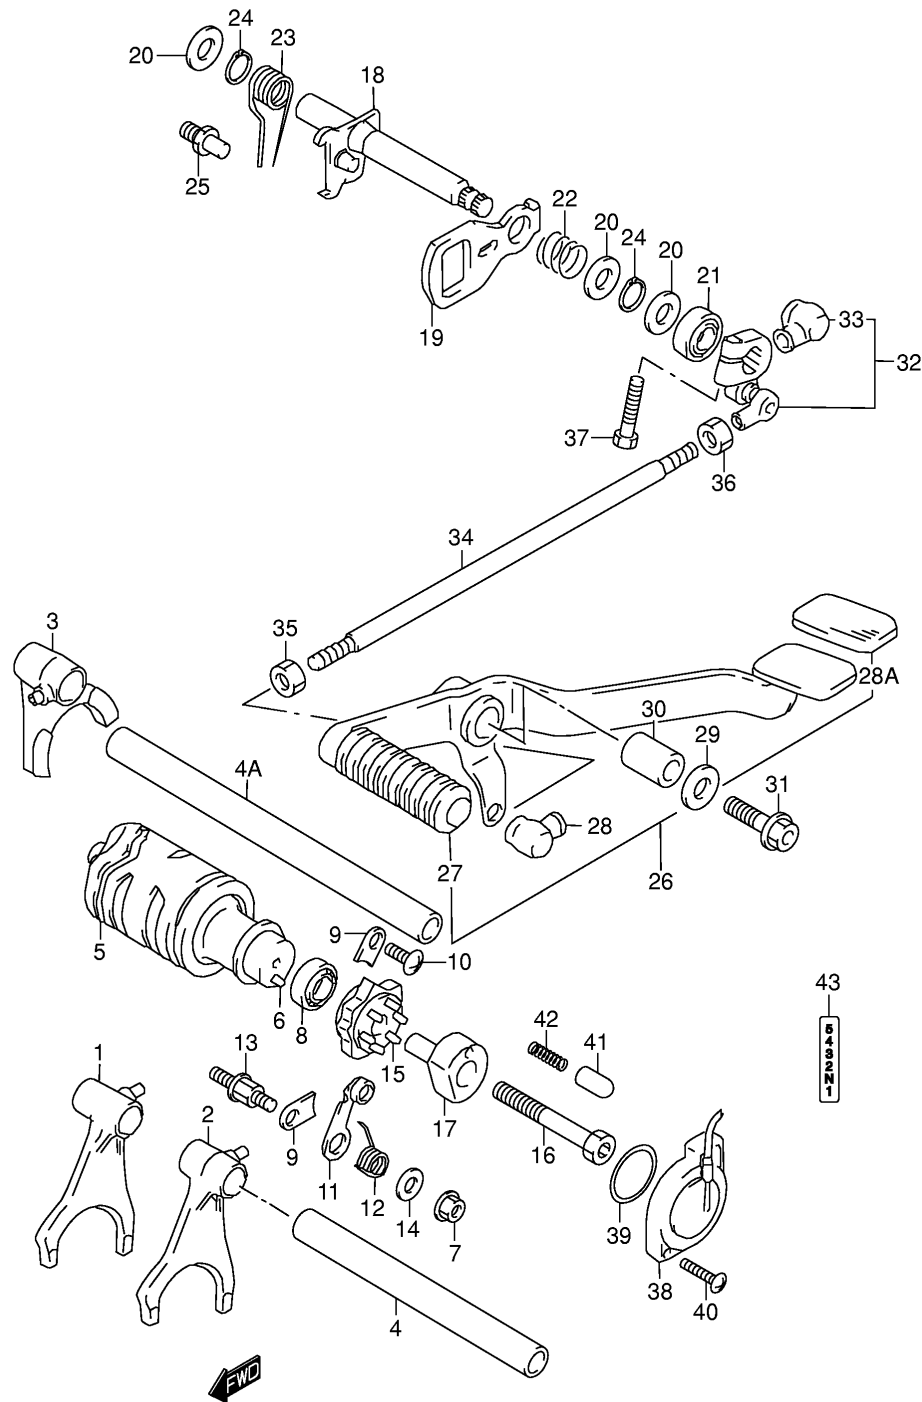 


Ref No	Part No	Description
--------	---------	-------------

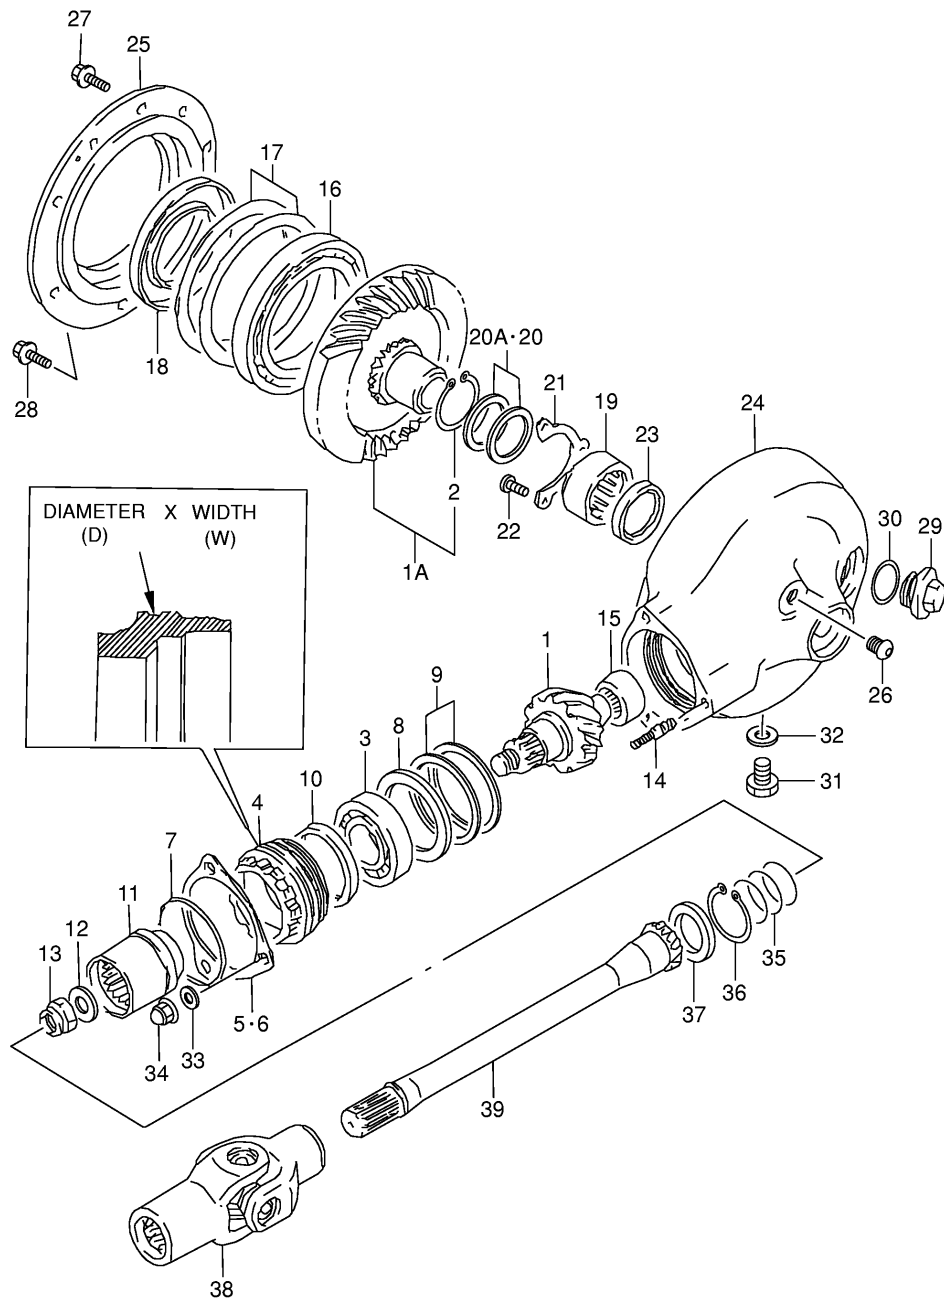 


Ref No	Part No	Description
	27300-10810	Gear & Case Set, Final Bevel
1	27311-24A03	• . Gear, Final Drive Bevel
1a	27320-38B00	• . Gear, Final Driven Bevel
2	08331-31526	•• .. Circlip
3	09262-28023	• . Bearing (28x68x18)
4	27312-24A02	• . Stopper, Bearing
5	27313-38B00	• . Plate, Stopper
6	27313-38B10	• . Plate, Stopper
7	09280-64003	• . O Ring (d:3.1,id:63.9)
8	09160-54001	• . Washer (54x68x1.5)
9	27445-24810	• . Shim Set, Final Drive Gear
10	09283-47002	• . Oil Seal (47x58x7)
11	27172-24A00	• . Coupling, Final Drive Gear
12	09160-16029	• . Washer (16x29x4)
13	09159-16003	• . Nut
14	01421-10253	• . Stud Bolt
15	09263-20062	• . Bearing (20x34x18)
16	09262-85001	• . Bearing, Rh (85x130x14)
17	27327-38810	• . Shim Set, Final Driven Gear
18	09289-70002	• . Oil Seal (70x110x14.7)
19	09263-35004	• . Bearing, Lh (35x48x23.7)
20	09160-35008	• . Shim (35x46x0.95)
20a	27326-45811	• . Shim Set, Final Drive Gear
21	27329-45100	• . Holder, Bearing
22	02112-06123	• . Screw
23	09283-35033	• . Oil Seal (35x43x5)
24	27450-38B10	• . Case, Final Gear
25	27461-38B00	• . Case, Final Gear Bearing
26	09248-16012	• . Plug
27	01550-08253	• . Bolt
28	01550-10253	• . Bolt
29	09259-30007	• . Plug, Oil Filler
30	09280-26006	• . O Ring (d:3.1,id:26.4)
31	09247-14001	• . Plug, Oil Drain
32	09168-14002	• . Gasket (13.8x18.8x0.4)
33	09164-10008	• . Washer
34	09159-10026	• . Nut
35	09440-30008	Spring
36	09381-40003	Circlip
37	09283-30026	Oil Seal (30x40.5x5.5)
38	27100-38B00	Yoke, Universal Joint
39	27151-10F00	Shaft, Propeller


Ref No	Part No	Description
1	31100-38B02	Motor Assy, Starting
2	31150-38B00	• . Bracket Set, Front
3	09280-35005	•• .. O Ring (d:2.1,id:34.7)
4	31264-31300	• . O Ring
5	31310-38B01	• . Armature
6	31132-38B00	• . Holder Set, Brush
7	31135-38B00	• . Spring, Brush
8	31130-38B00	• . Terminal Set, Brush
9	31143-49040	•• .. O Ring
10	31281-24B10	• . Bolt
11	01547-06257	Bolt
12	08361-35068	Nut

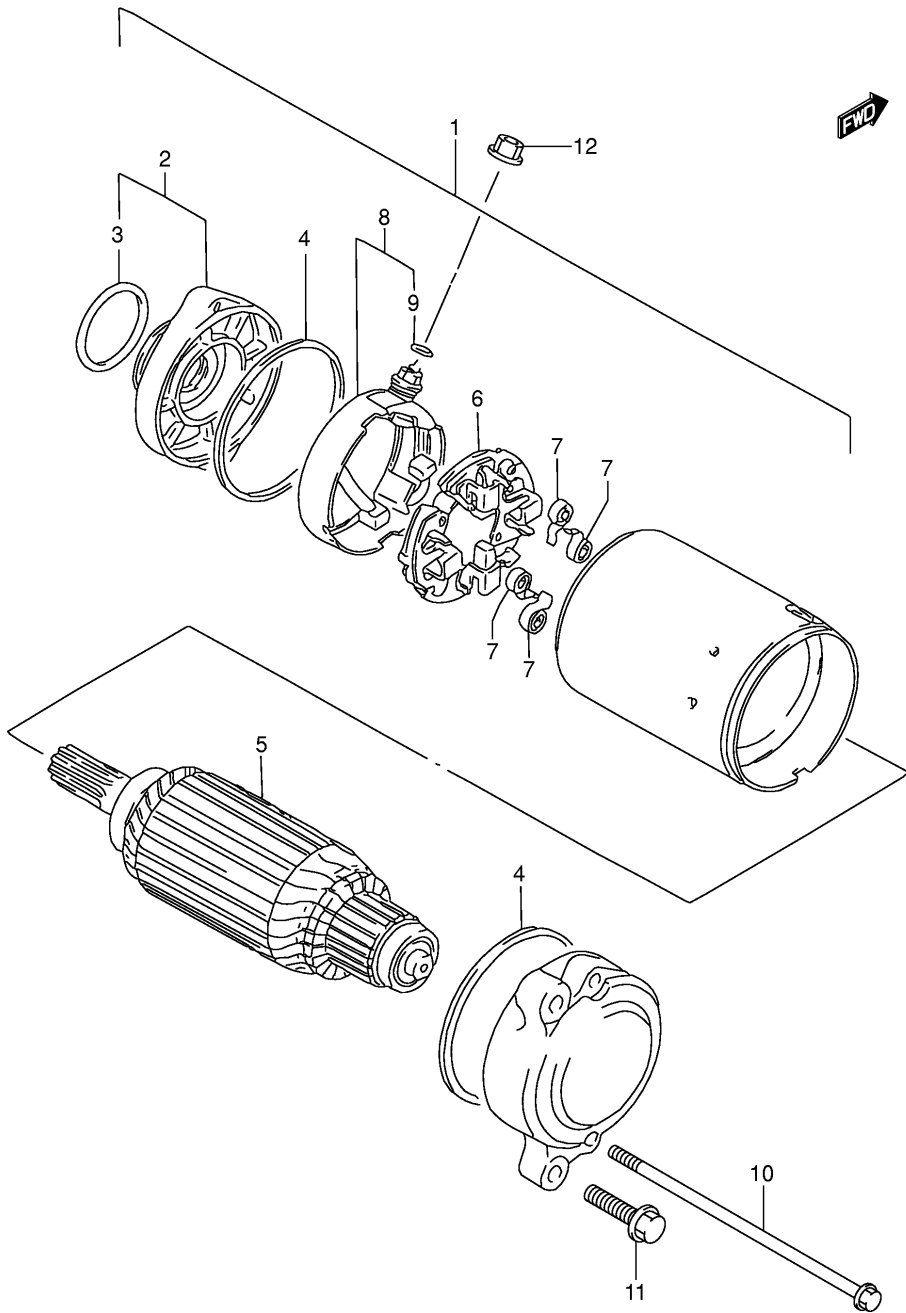 


Ref No	Part No	Description
1	31100-10F00	Motor Assy, Starting
2	09280-35005	• O Ring (d:2.1,id:34.7)
3	31264-31300	• O Ring
4	31132-38B00	• Holder Set, Brush
5	31135-38B00	• Spring, Brush
6	31130-38B00	• Terminal Set, Brush
7	31143-49040	• O Ring
8	31281-24B10	• Bolt
10	08361-35068	Nut

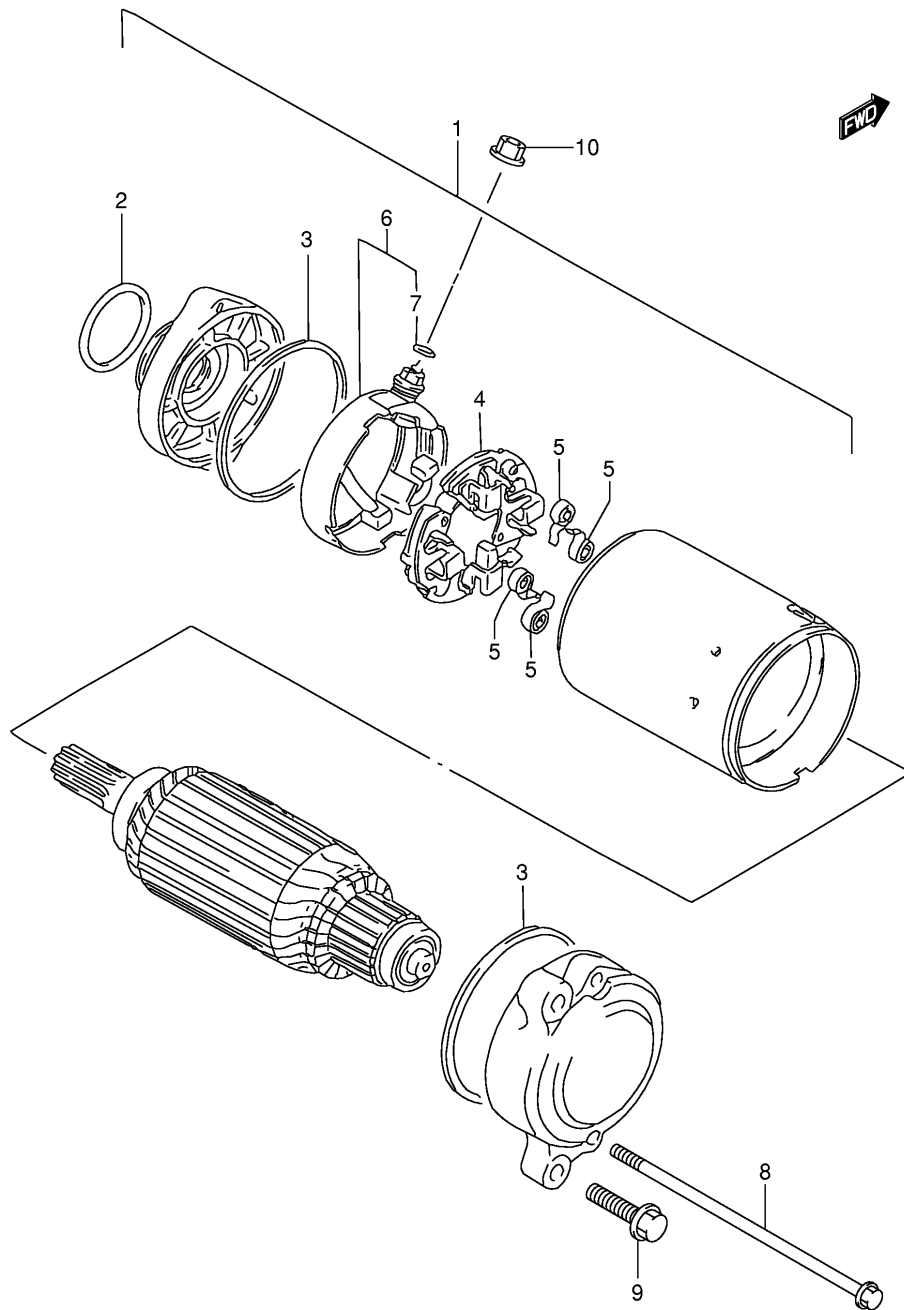 


Ref No	Part No	Description
1	32101-10F01	Stator Assy
2	32102-10F00	Rotor Assy
3	09103-14001	Bolt, Rotor (14x43)
4	09420-05007	Key
5	01547-06303	Bolt, Stator
6	01547-05103	Bolt
7	32371-45C00	Clamp, Lead Wire
8	01547-05103	Bolt
9	09404-06432	Clamp (l:80)
9	09404-08206	Clamp (l:82)

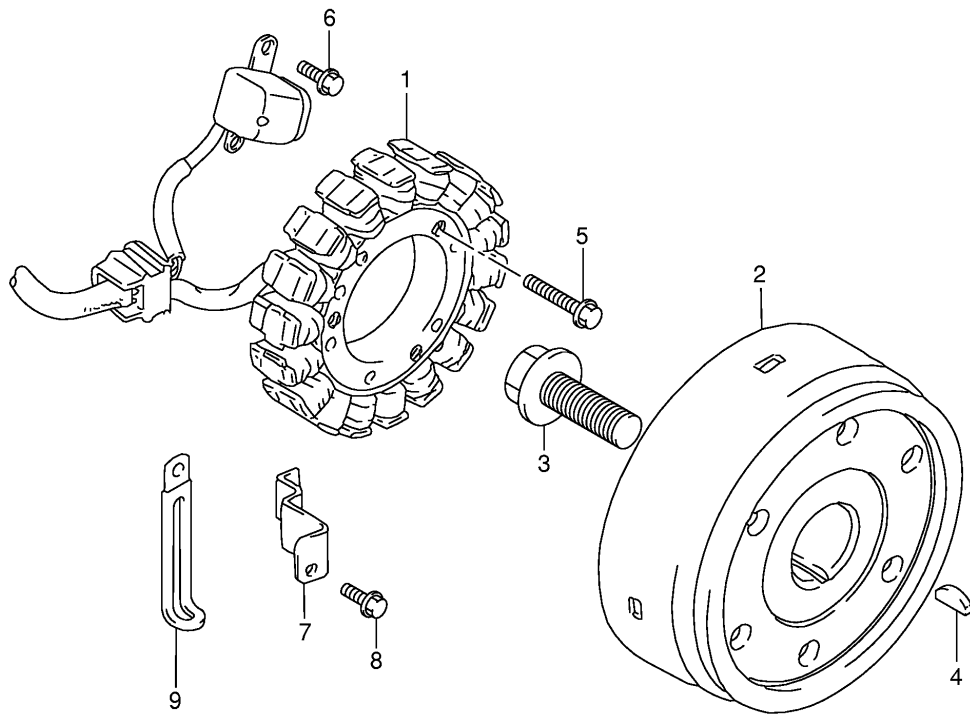 


Ref No	Part No	Description
1	33610-38B50	Battery Assy (12v,14ah)
2	33652-20C00	Protector (50x50x5)
3	33651-37000	Protector (170x95x3)
4	33652-19B00	Protector (80x27x3)
5	33820-10F00	Wire, Battery Plus Lead
6	33860-10F00	Wire, Battery Minus

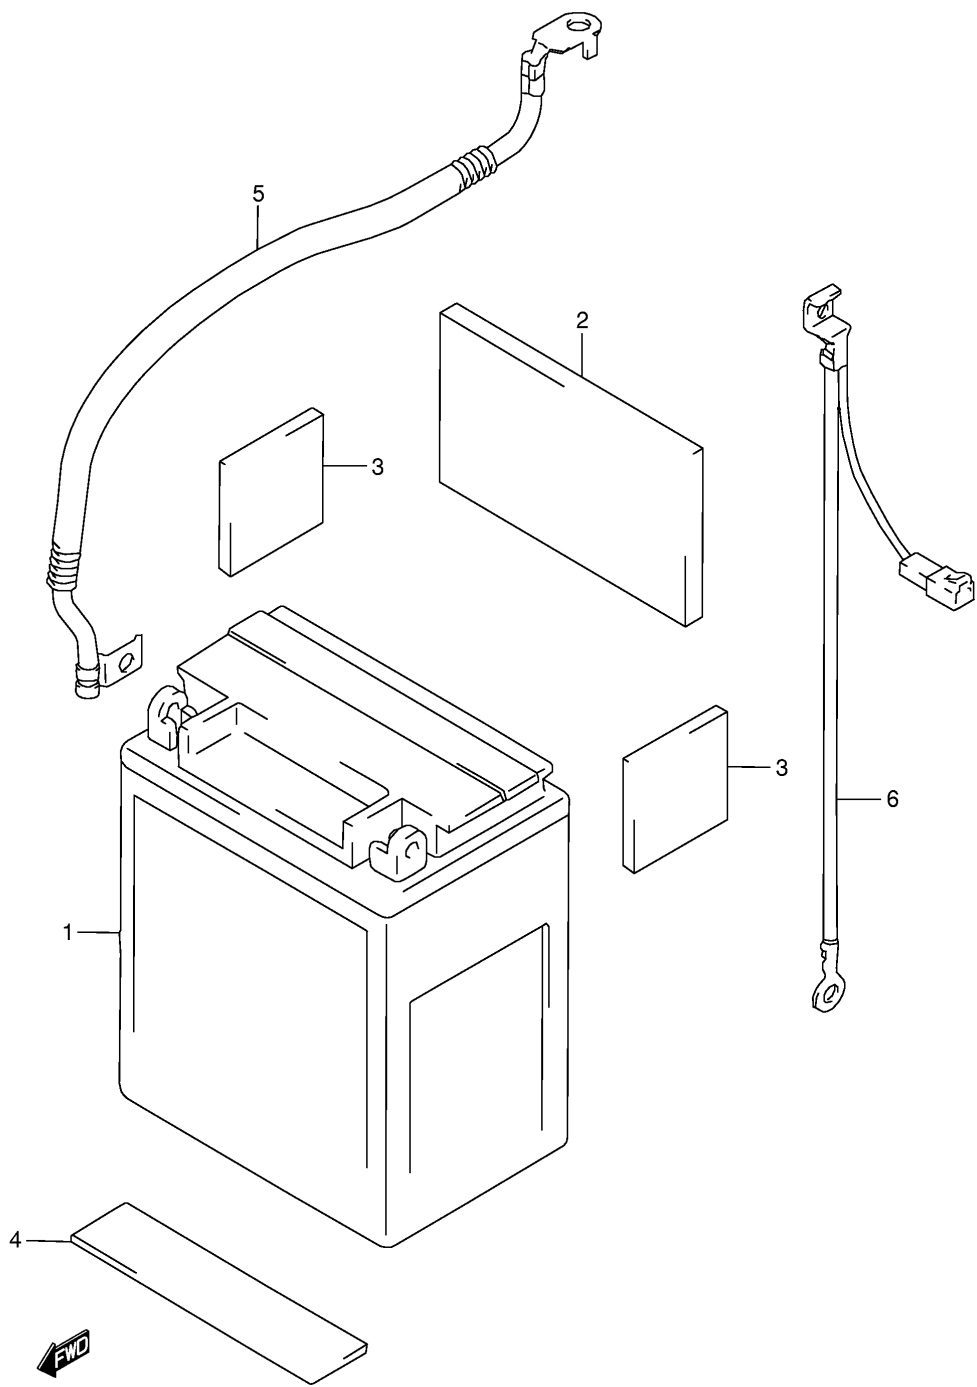 


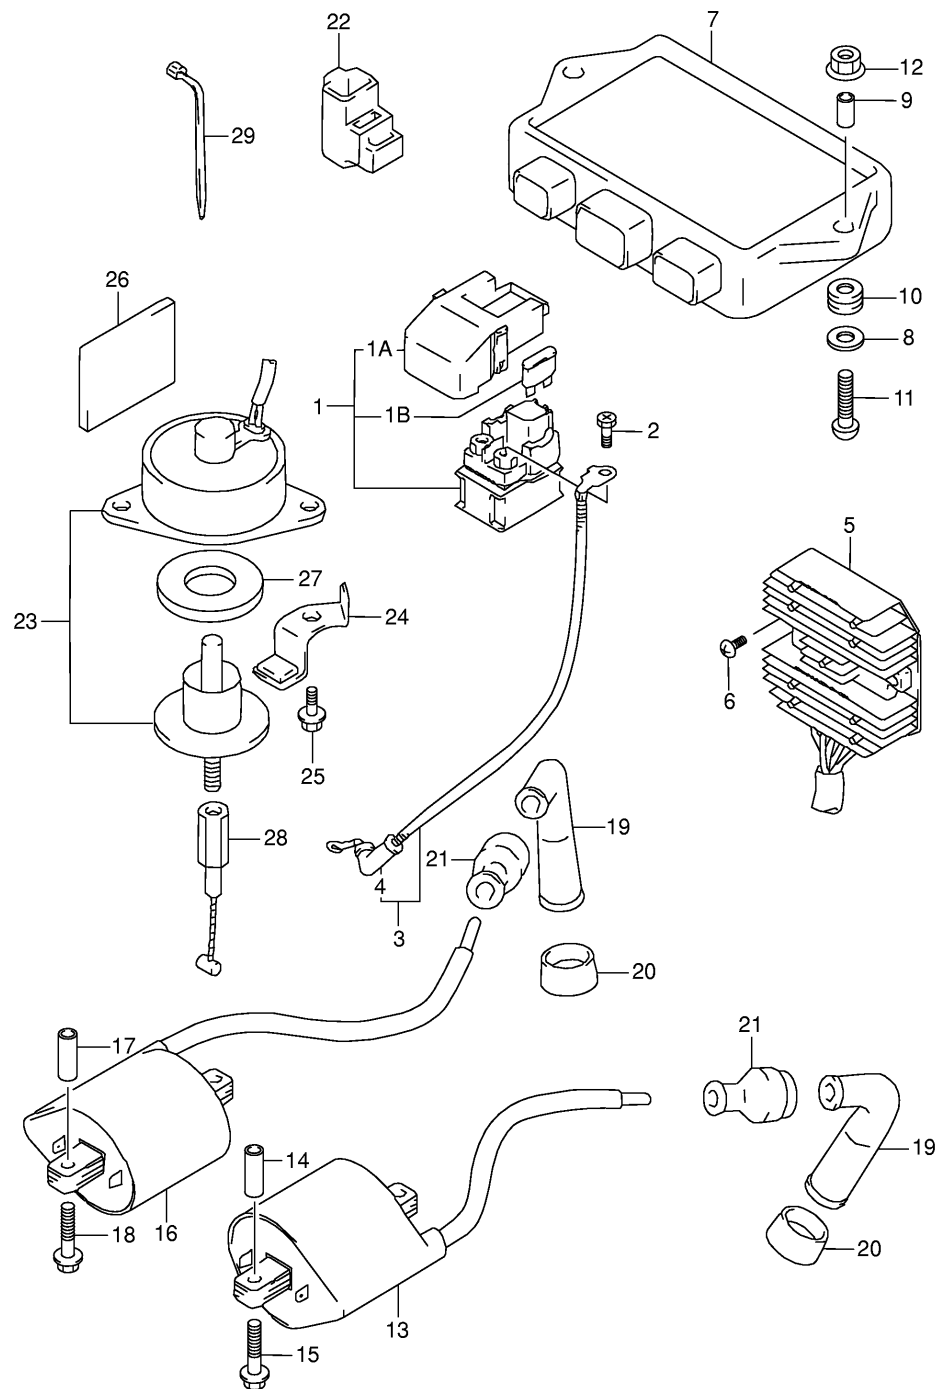 


Ref No	Part No	Description
1	31800-21E20	Relay, Starting Motor
1a	31861-21E20	• . Cover
1b	09481-30101	• . Fuse, 30a
2	09128-06013	Bolt
3	33810-10F00	Wire, Starter Motor Lead
4	31861-48B10	• . Cap
5	32800-44D10	Rectifier, Regulator
6	02142-06253	Screw
7	32900-10F50	Igniter Assy
7	32900-10F80	Igniter Assy
8	09160-06066	Washer (6.5x20x1.6)
9	09180-06248	Spacer (6.1x8x9.5)
10	09320-09009	Cushion
11	02142-06303	Screw, Igniter
12	08316-10063	Nut, Igniter
13	33420-38B00	Coil, Ignition Rear
14	09180-06195	Spacer (6.4x10x18)
15	01547-05403	Bolt
16	33420-10F00	Coil Assy, Ignition Front
17	09180-06195	Spacer (6.4x10x32)
18	01547-05403	Bolt
19	33510-38B00	Cap, Spark Plug
20	33541-47D00	Seal, Spark Plug
21	33542-38B00	Seal, High Tension Cord
22	38740-26E00	Relay Assy, Decomp
23	33970-10F00	Solenoid Assy, Decomp
24	33971-10F00	Stopper, Decomp Solenoid
25	01550-08163	Bolt
26	33652-19B00	Cushion, Decomp (80x27x3)
27	33972-31D10	Cushion, Decomp (27x46x3)
28	58900-10F00	Cable, Decomp Front
29	09407-25401	Clamp, High Tension (I:235)

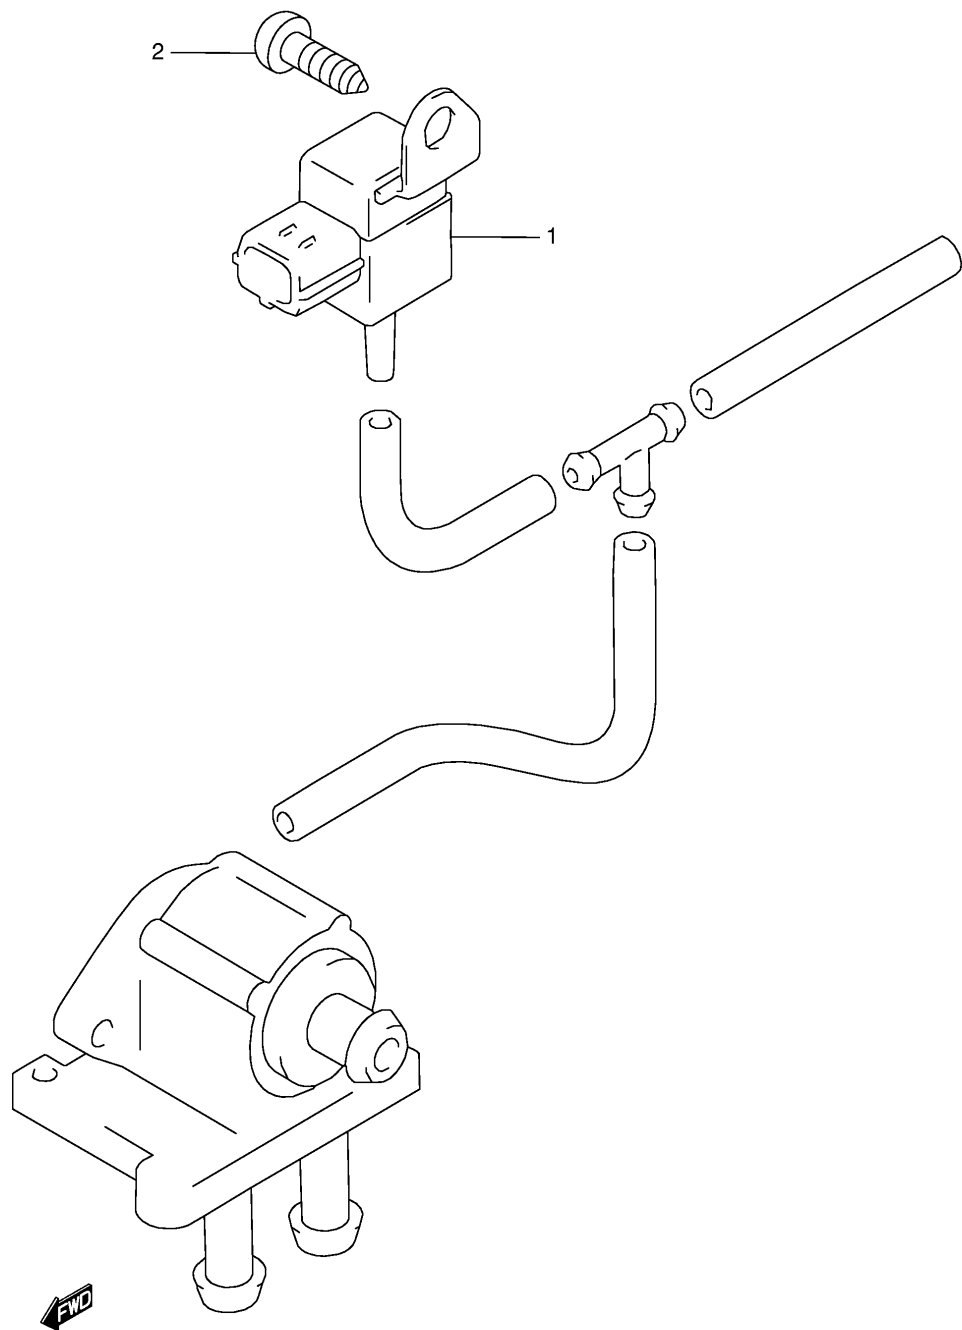 


Ref No	Part No	Description
1	15620-02F00	Sensor Assy, Boost
2	03542-06163	Screw

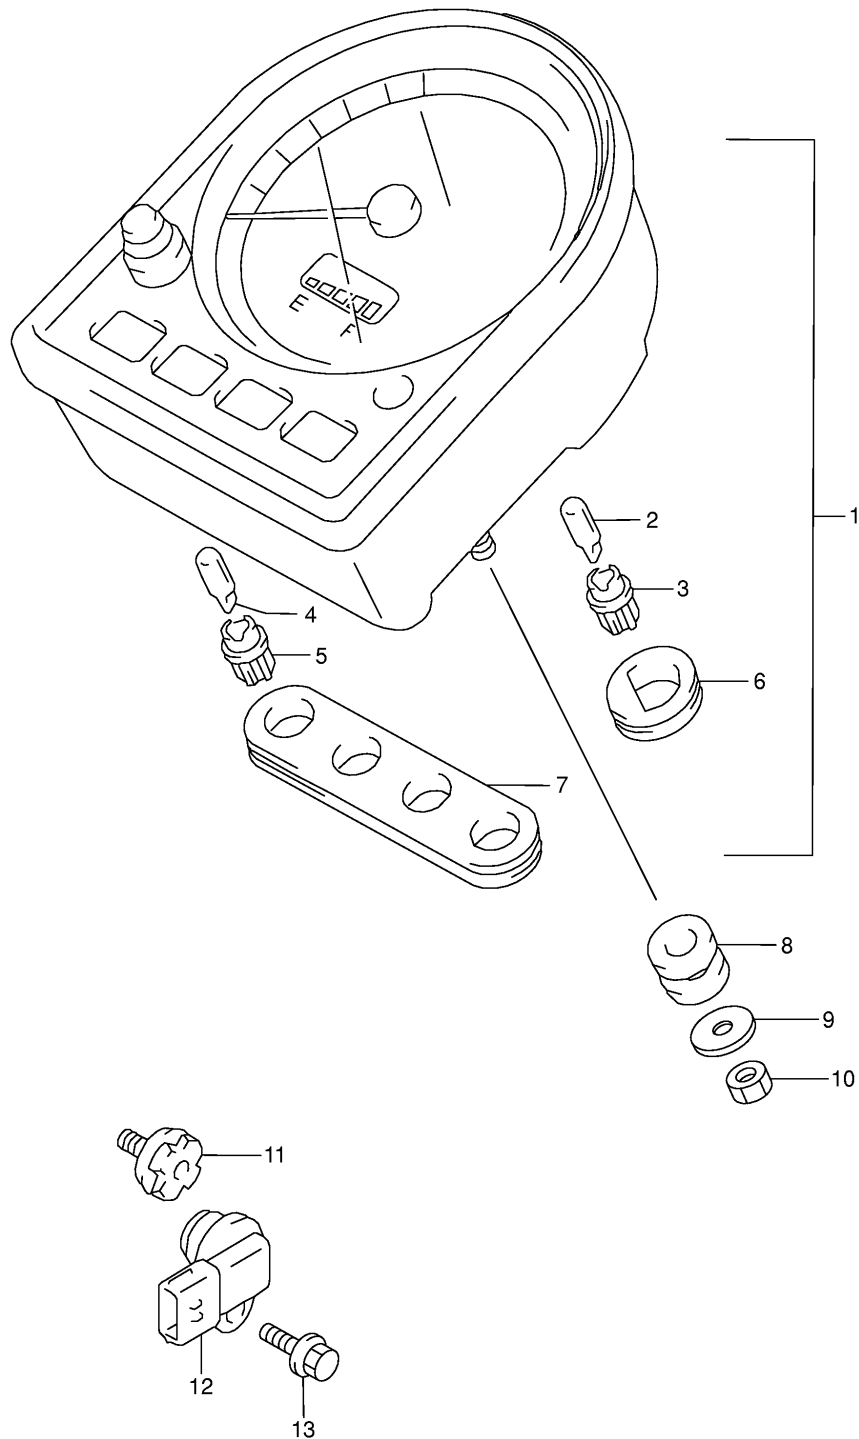 


Ref No	Part No	Description
1	34100-10F20	Speedometer (mile/kilo)
1	34100-10F10	Speedometer (kilo)
2	09471-12189	• Bulb (14v,0.84w)
3	34172-71E70	• Socket
4	09471-12100	• Bulb (12v,1.7w)
5	34173-19D00	• Socket
6	34198-02F00	• Blind, Cap
7	34198-10F00	• Blind, Cap
8	34996-45720	Cushion, Meter
9	09160-05037	Washer (5.5x16x1.2)
10	08310-00053	Nut
11	34981-10F00	Rotor, Speed
12	34990-10F00	Sensor, Speed
13	09106-06073	Bolt (6x16)

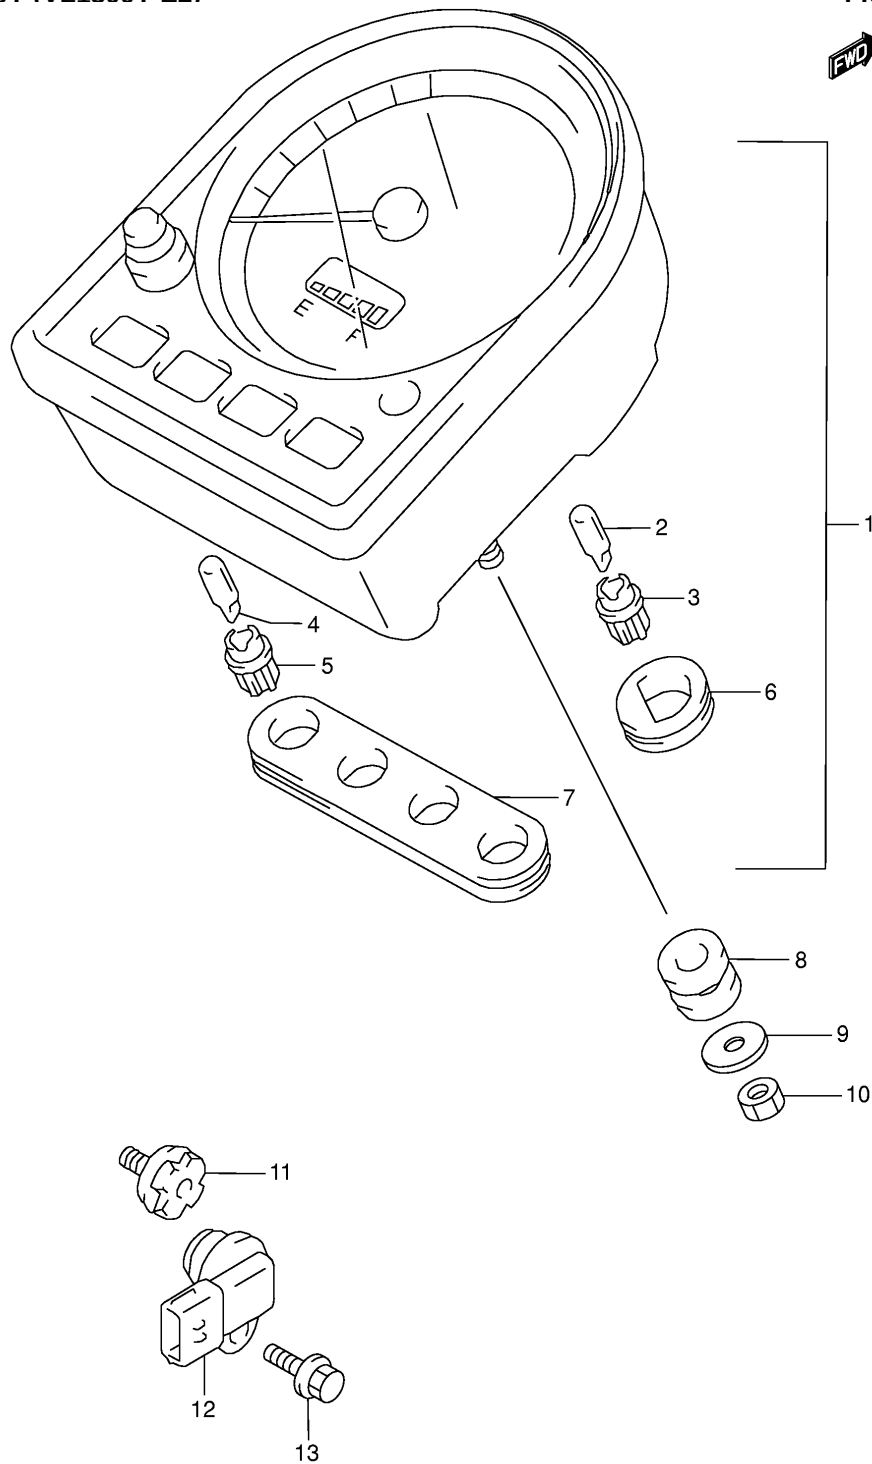 


Ref No	Part No	Description
1	34100-10F80	Speedometer (mile/kilo)
1	34100-10F70	Speedometer (kilo)
2	09471-12189	• Bulb (14v,0.84w)
3	34172-71E70	• Socket
4	09471-12100	• Bulb (12v,1.7w)
5	34173-19D00	• Socket
6	34198-02F00	• Blind, Cap
7	34198-10F00	• Blind, Cap
8	34996-45720	Cushion, Meter
9	09160-05037	Washer (5.5x16x1.2)
10	08310-00053	Nut
11	34981-10F00	Rotor, Speed
12	34990-10F00	Sensor, Speed
13	09106-06073	Bolt (6x16)

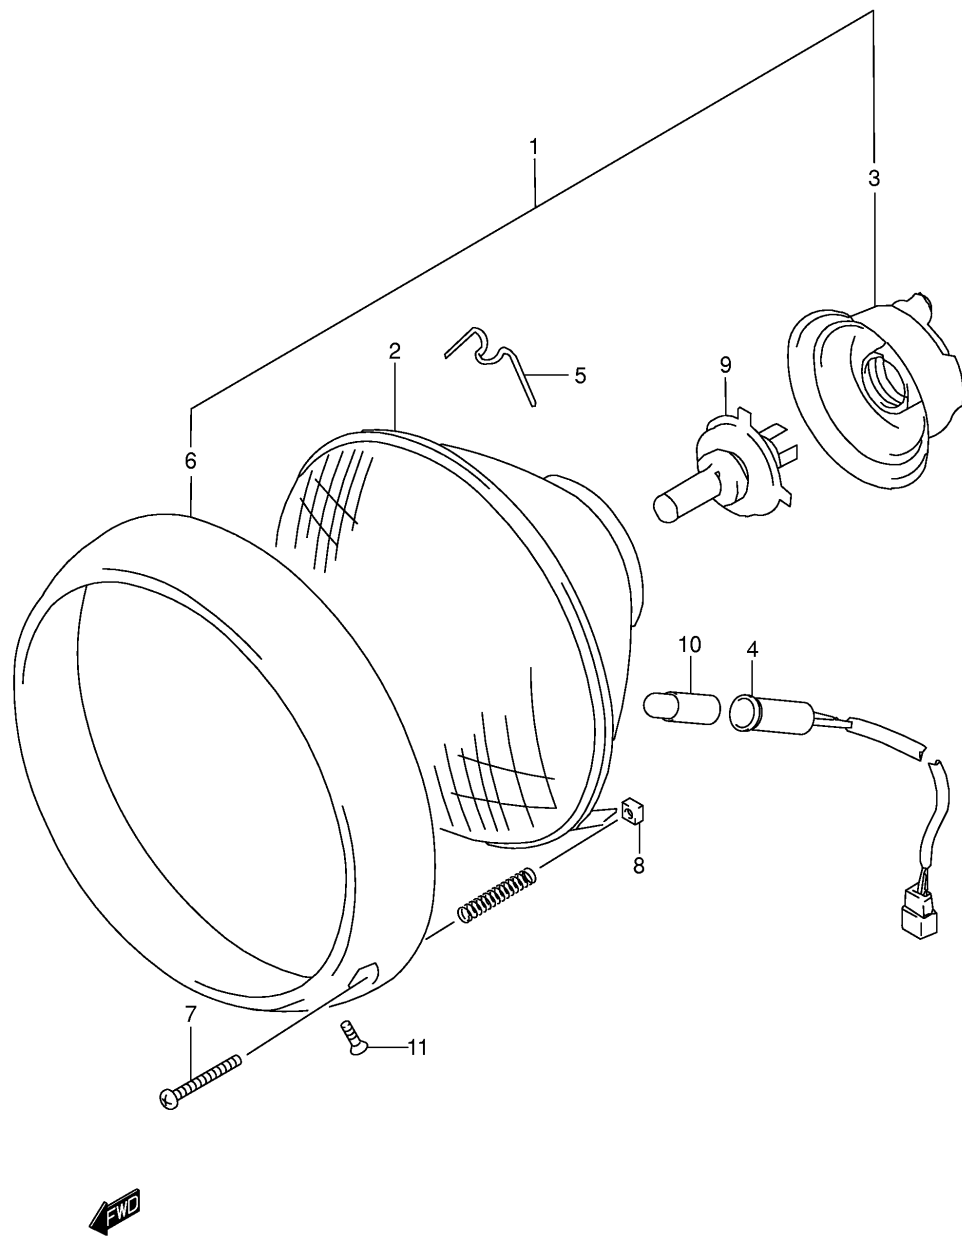 


Ref No	Part No	Description
1	35100-10F20-999	Headlamp Assy
1	35100-10F50-999	Headlamp Assy
1	35100-10F51-999	Headlamp Assy
2	35121-10F20	• . Lamp Unit
2	35121-10F50	• . Lamp Unit
2	35121-10F51	• . Lamp Unit
3	35173-20A01	• . Cover, Socket
4	36118-26D50	• . Cord Assy
5	35128-10F00	• . Spring
6	35111-10F20	• . Rim Assy
7	35151-45900	• . Screw, Adjusting
8	35152-15611	• . Nut, Adjusting
9	09471-12060	Bulb (12v,60/55w)
10	09471-12063	Bulb (12v,4w)
11	09126-05003	Screw, Headlamp (5x12)

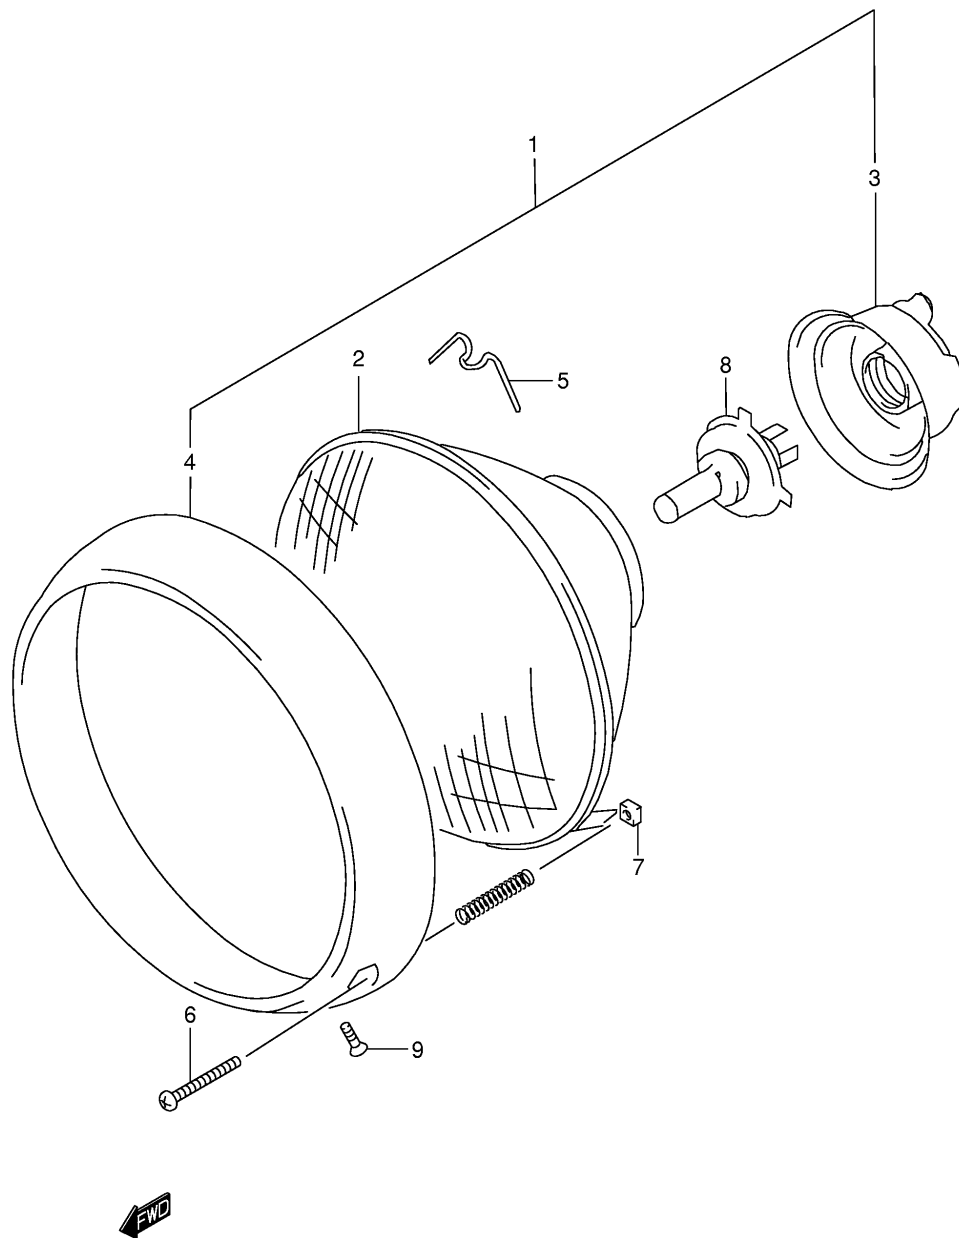 


Ref No	Part No	Description
1	35100-10F30-999	Headlamp Assy
2	35121-10F30	• . Lamp Unit
2a	35127-10F00	• . Retaining Ring Assy
3	35173-20A01	• . Cover, Socket
4	35111-10F20	• . Rim Assy
5	35128-10F00	• . Spring
6	35151-45900	• . Screw, Adjusting
7	35152-15611	• . Nut, Adjusting
8	09471-12060	Bulb (12v,60/55w)
9	09126-05003	Screw, Headlamp (5x12)

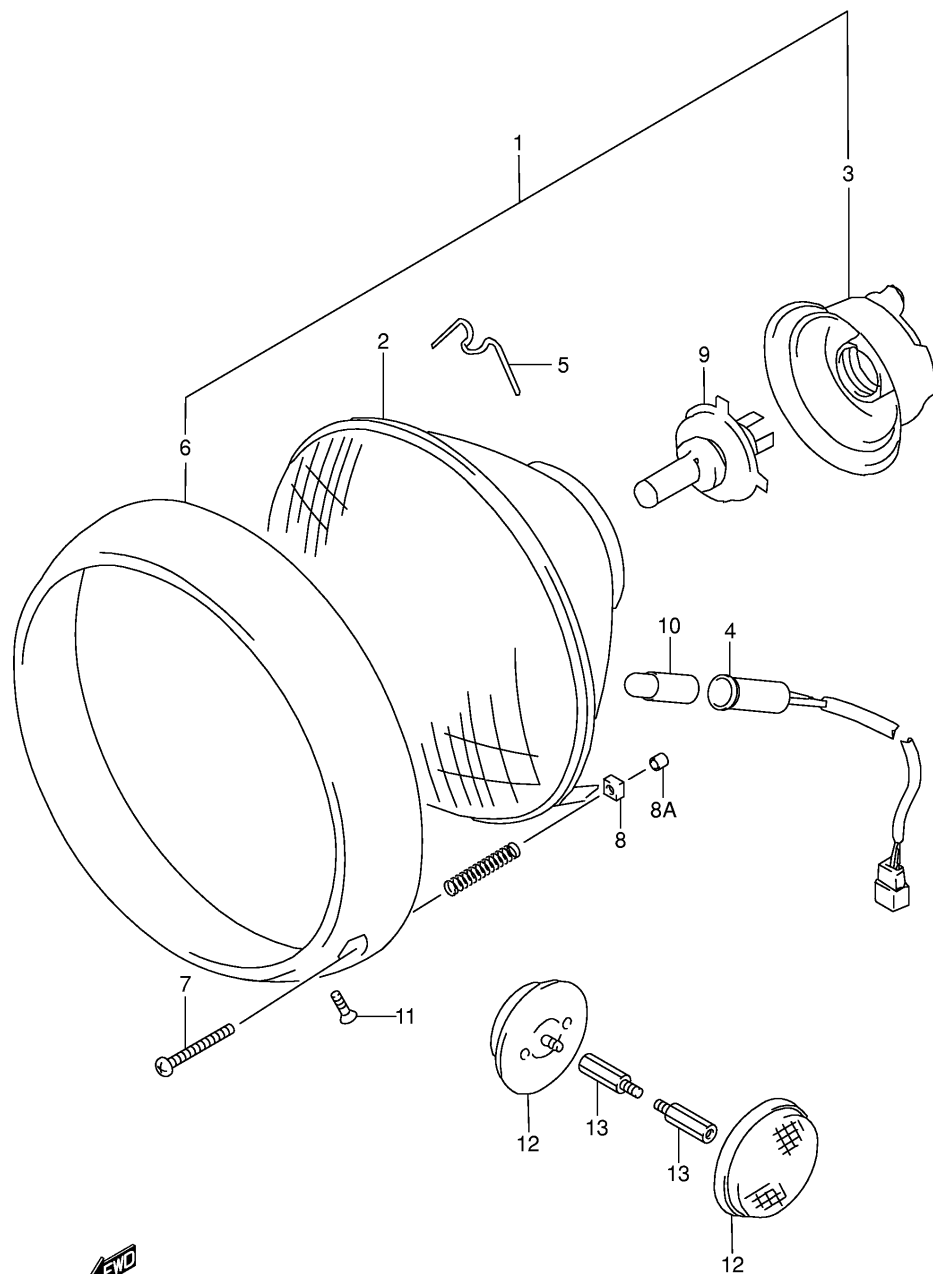 

Ref No	Part No	Description
1	35100-10F60-999	Headlamp Assy
1	35100-10F30-999	Headlamp Assy
1	35100-10F51-999	Headlamp Assy
2	35121-10F60	• . Lamp Unit
2	35121-10F30	• . Lamp Unit
2	35121-10F51	• . Lamp Unit
2a	35127-10F00	• . Retaining Ring Assy
3	35173-20A01	• . Cover, Socket
4	36118-26D50	• . Cord Assy
5	35128-10F00	• . Spring
6	35111-10F20	• . Rim Assy
7	35151-45900	• . Screw, Adjusting
8	35152-15611	• . Nut, Adjusting
8a	35158-43400	• . Cap
9	09471-12060	Bulb (12v,60/55w)
10	09471-12063	Bulb (12v,4w)
11	09126-05003	Screw, Headlamp (5x12)
13	09119-05023	Bolt

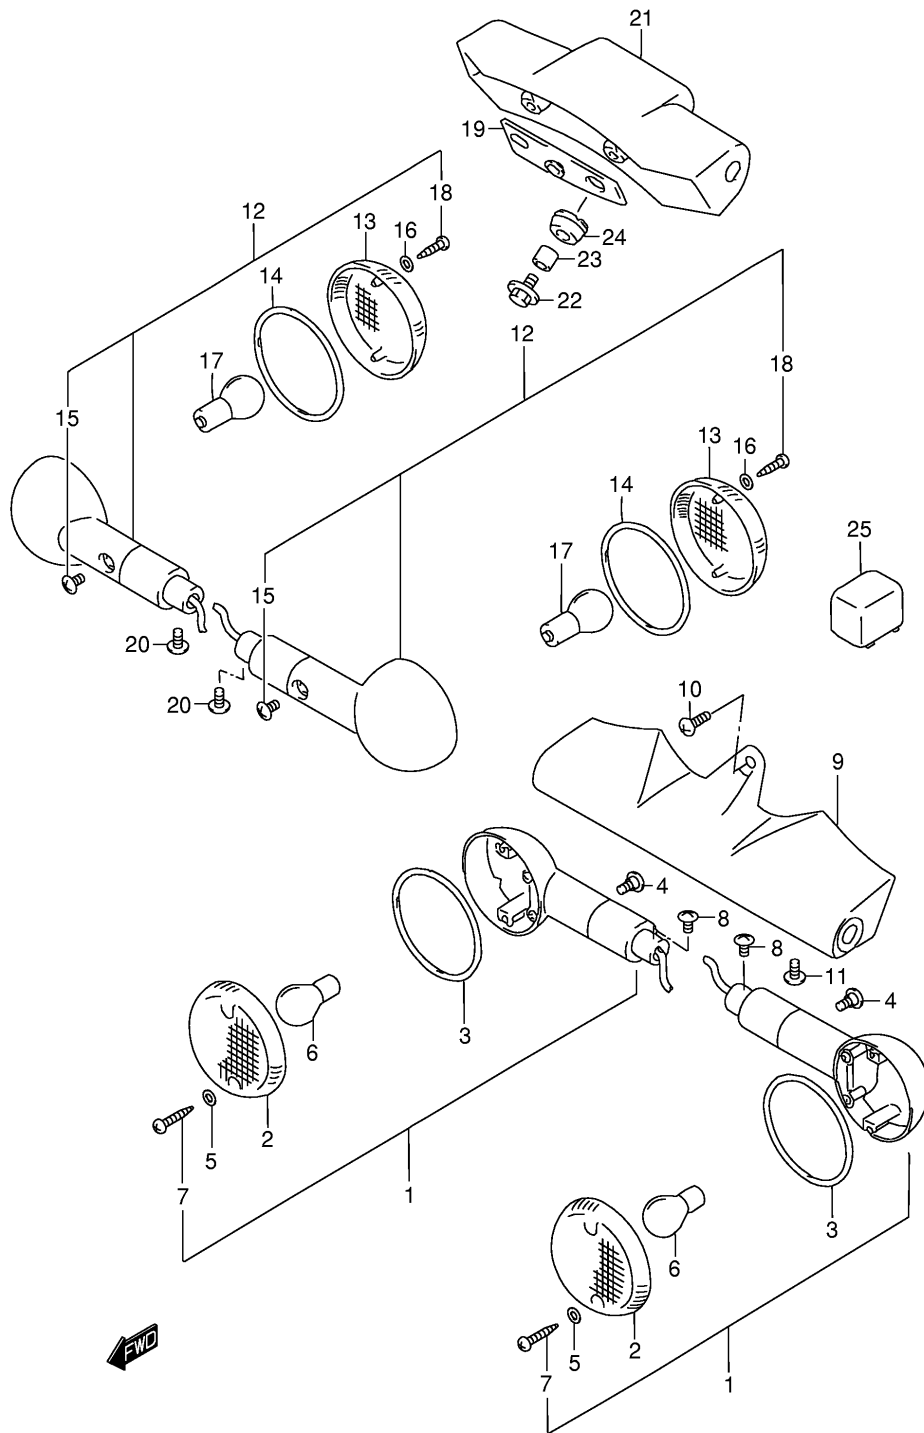 


Ref No	Part No	Description
1	35601-10F10	Lamp Assy, Front Turnsignal Rh
1	35602-10F10	Lamp Assy, Front Turnsignal Lh
2	35612-38A01	. Lens
3	35613-38A00	. Gasket
4	35623-38A01	. Screw
5	35627-43010	. Gasket
6	09471-12045	. Bulb (12v,21w)
7	03211-04253	. Screw
8	02142-06107	Screw
9	35671-10F00	Stay, Front Turnsignal
10	09139-06030	Bolt, Front Turn Stay
10	09139-06027	Bolt, Front Turn Stay
11	09139-08007	Bolt, Front Turn Stay
12	35603-10F10	Lamp Assy, Rear Turnsignal Rh
12	35604-10F10	Lamp Assy, Rear Turnsignal Lh
13	35652-38A21	. Lens
14	35613-38A00	. Gasket
15	35623-38A01	. Screw
16	35627-43010	. Gasket
17	09471-12045	. Bulb (12v,21w)
18	03211-04253	. Screw
19	35674-10F00	Cushion, Rear Turn Stay
20	02142-06107	Screw
21	35621-10F00	Stay, Rear Turnsignal Lamp
22	09116-06115	Bolt (6x20)
23	09180-06310	Spacer (6.5x10x10)
24	09320-09010	Cushion
25	38610-03F00	Relay Assy, Turnsignal Lamp

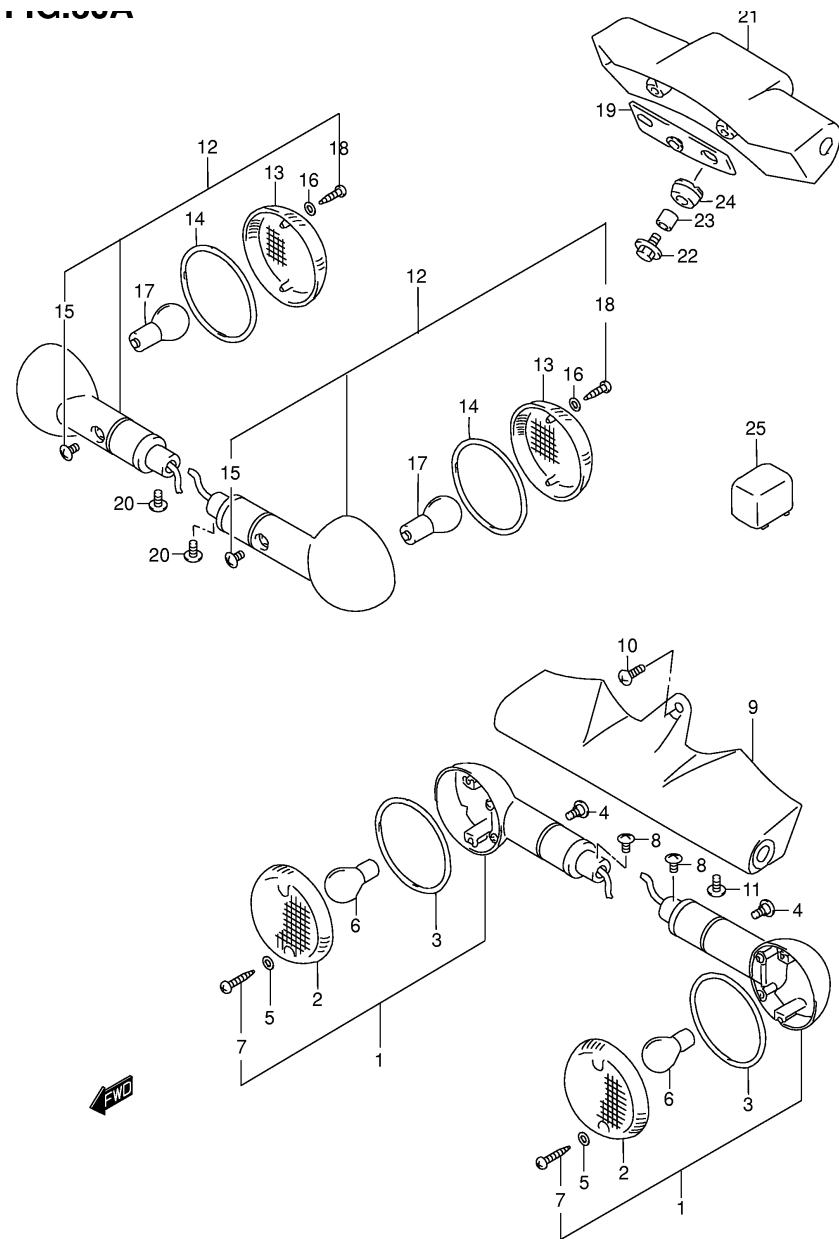 


VL1500Y E02_030A
TURNSIGNAL LAMP

Ref No	Part No	Description
1	35601-10F50	Lamp Assy, Front Turnsignal Rh
1	35602-10F50	Lamp Assy, Front Turnsignal Lh
2	35612-38A01	• . Lens
3	35613-38A00	• . Gasket
4	35623-38A01	• . Screw
5	35627-43010	• . Gasket
6	09471-12045	• . Bulb (12v,21w)
7	03211-04253	• . Screw
8	02142-06107	Screw
9	35671-10F00	Stay, Front Turnsignal
10	09139-06027	Bolt, Front Turn Stay
11	09139-08007	Bolt, Front Turn Stay
12	35603-10F50	Lamp Assy, Rear Turnsignal Rh
12	35604-10F50	Lamp Assy, Rear Turnsignal Lh
13	35652-38A21	• . Lens
14	35613-38A00	• . Gasket
15	35623-38A01	• . Screw
16	35627-43010	• . Gasket
17	09471-12045	• . Bulb (12v,21w)
18	03211-04253	• . Screw
19	35674-10F00	Cushion, Rear Turn Stay
20	02142-06107	Screw
21	35621-10F00	Stay, Rear Turnsignal Lamp
22	09116-06115	Bolt (6x20)
23	09180-06310	Spacer (6.5x10x10)
24	09320-09010	Cushion
25	38610-03F00	Relay Assy, Turnsignal Lamp

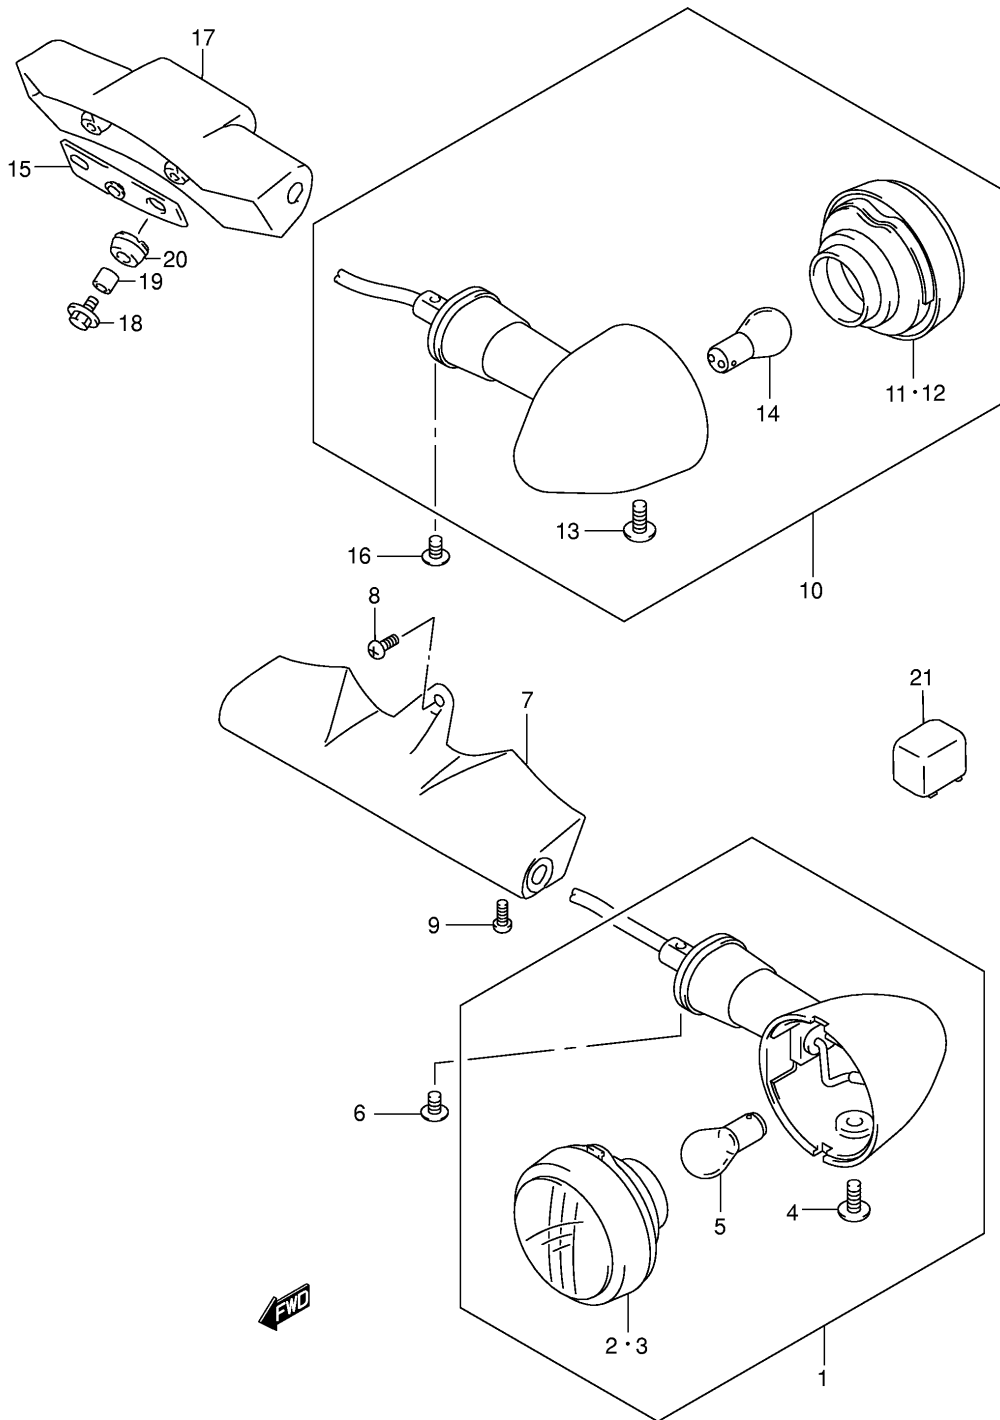 


Ref No	Part No	Description
1	35601-38AA0	Lamp Assy, Front Turnsignal Rh
1	35602-38AA0	Lamp Assy, Front Turnsignal Lh
2	35610-38AE0	. Lens
3	35630-38AE0	. Lens
4	35623-38AA0	. Screw
5	09471-12045	. Bulb (12v,21w)
6	02142-06107	Screw
7	35671-10F00	Stay, Front Turnsignal
8	09139-06027	Bolt, Front Turn Stay
9	09139-08007	Bolt, Front Turn Stay
10	35603-38AB0	Lamp Assy, Rear Turnsignal Rh
10	35604-38AB0	Lamp Assy, Rear Turnsignal Lh
11	35630-38AE0	. Lens
12	35610-38AE0	. Lens
13	35623-38AA0	. Screw
14	09471-12045	. Bulb (12v,21w)
15	35674-10F00	Cushion, Rear Turn Stay
16	02142-06107	Screw
17	35621-10F00	Stay, Rear Turnsignal Lamp
18	09116-06115	Bolt (6x20)
19	09180-06310	Spacer (6.5x10x10)
20	09320-09010	Cushion
21	38610-03F00	Relay Assy, Turnsignal Lamp

 ■ ■ 〰 ■ ■

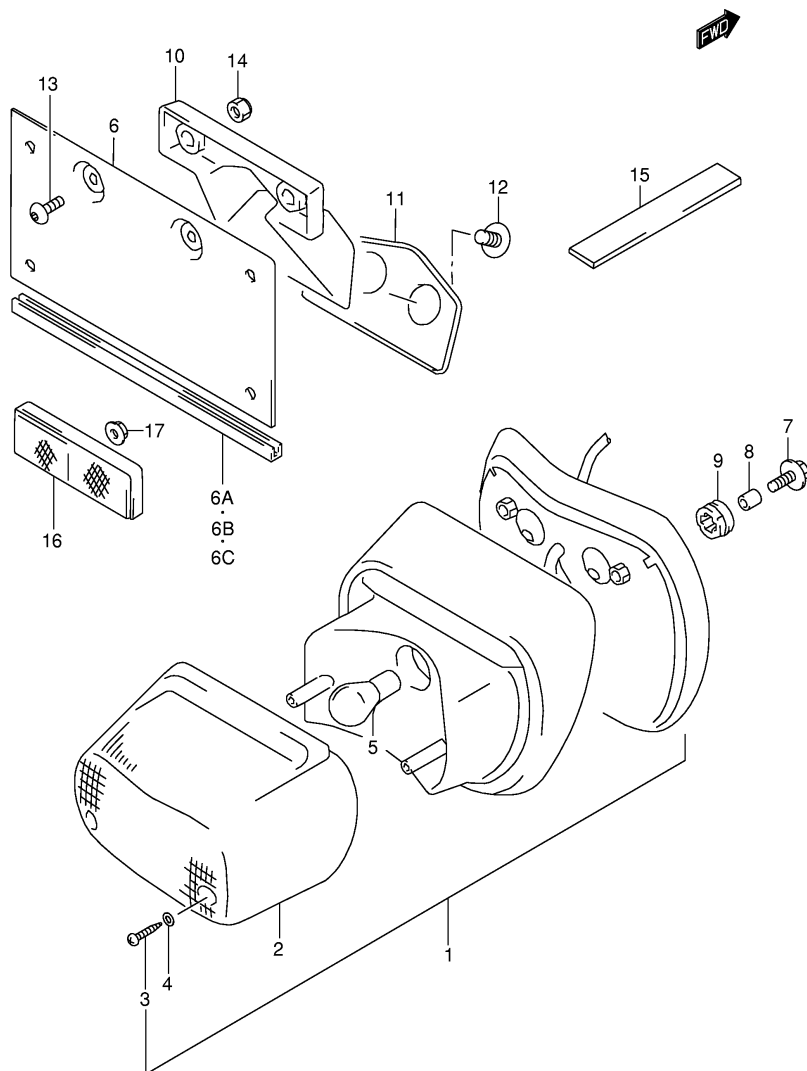


Ref No	Part No	Description
1	35710-10F00	Lamp Assy, Rear Combination
2	35712-10F00	• . Lens
3	03211-04207	• . Screw
4	35627-43010	• . Gasket
5	09471-12083	• . Bulb (12v,21/5w)
6	63461-10F21	Holder, License Plate
6	63461-10F21	Holder, License Plate
6	63461-10F11	Holder, License Plate
6	63461-10F00	Holder, License Plate
6a	94635-10F00	Molding, License Plate
6b	94635-10F00	Molding, License Plate
6c	94635-19C00	Molding, License Plate Holder
7	09116-06115	Bolt (6x20)
8	09180-06310	Spacer (6.5x10x10)
9	09320-09010	Cushion
10	35928-10F00	Stay, License Plate Holder
11	35929-10F00	Cushion, License Plate Holder
12	09116-06168	Bolt, License Plate Bracket
13	09139-06067	Screw, License Plate (6x16)
14	08313-10067	Nut, License Plate
15	33652-26E00	Protector (20x90x1.0)
16	35970-07F00	Reflex Reflector Assy, Rear
17	08316-10053	Nut

 
VL1500Y E02_031
REAR COMBINATION LAMP

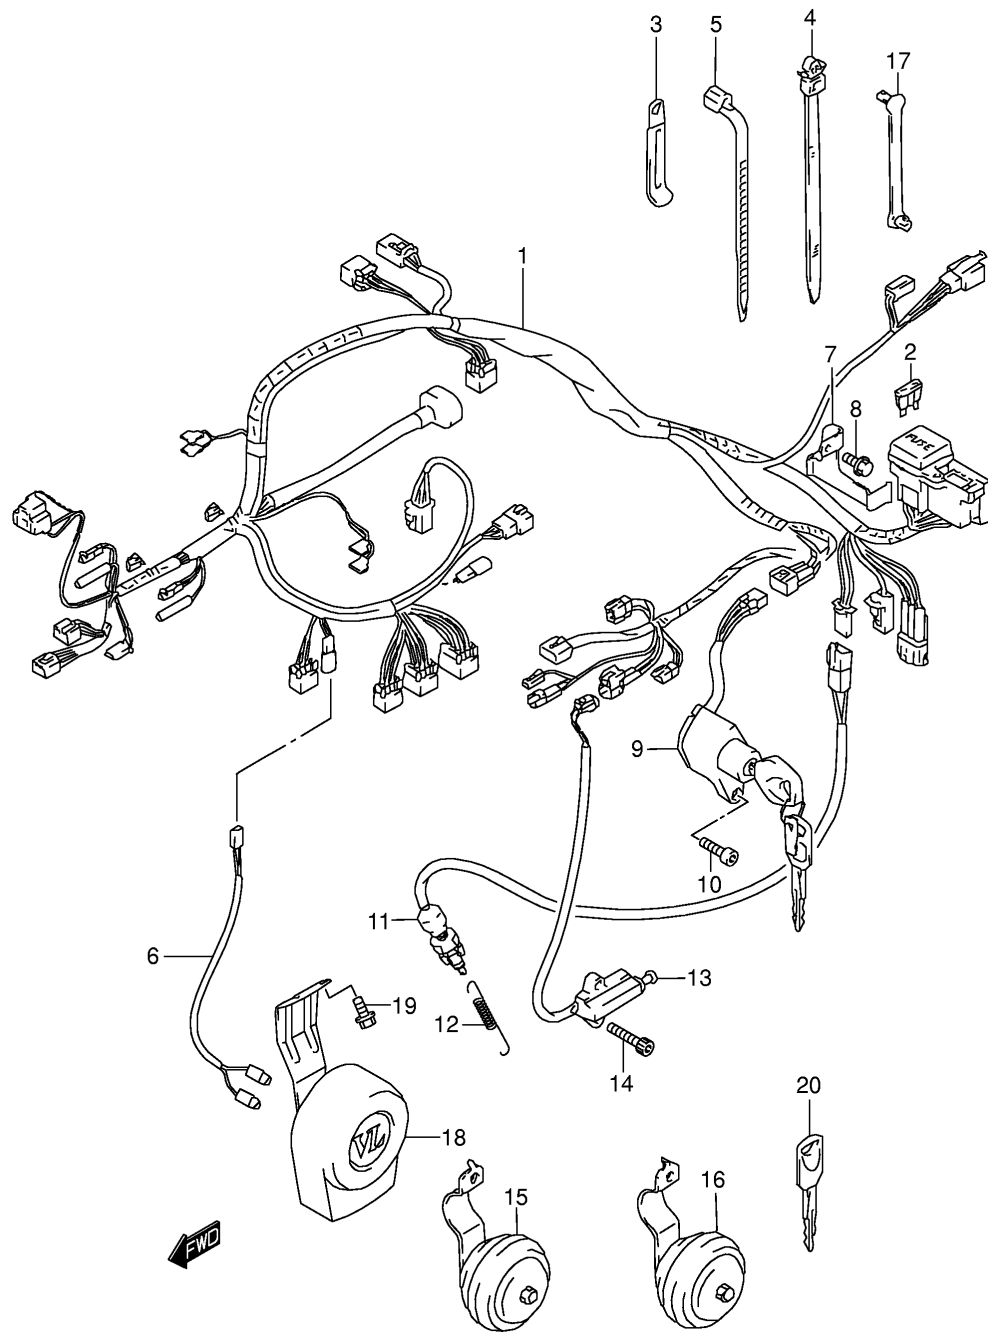


Ref No	Part No	Description
1	36610-10F61	Harness, Wiring
2	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	09404-06432	Clamp (l:80)
3	09404-06434	Clamp (l:95)
4	09407-11402	Clamp (l:90)
5	09407-14403	Clamp (l:125)
5	09407-25401	Clamp (l:235)
5	09407-18402	Clamp (l:165)
6	36854-10F00	Wire, Horn Lead
6	36852-21E10	Wire, Horn Lead
7	36744-10F00	Bracket, Fuse
8	01550-06123	Bolt
9	37110-10F00	Switch Assy, Ignition
9	37110-10F10	Switch Assy, Ignition
10	07130-06163	Bolt
11	37740-10F00	Switch Assy, Stop Lamp
12	43139-10F00	Spring, Stop Lamp
13	37840-10F00	Switch Assy, Side Stand
14	02142-06203	Screw
15	38501-10F00	Horn Assy, Rh
16	38502-10F00	Horn Assy, Lh
17	09407-03401	Clamp (l:33)
18	38500-10F00	Horn Assy
19	01550-06163	Bolt, Horn
20	37146-48E00	Key, Blank

Ref No	Part No	Description
2	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	09404-06432	Clamp (l:80)
3	09404-06434	Clamp (l:95)
4	09407-11402	Clamp (l:90)
5	09407-14403	Clamp (l:125)
5	09407-25401	Clamp (l:235)
5	09407-18402	Clamp (l:165)
6	36854-10F00	Wire, Horn Lead
6	36852-21E10	Wire, Horn Lead
7	36744-10F00	Bracket, Fuse
8	01550-06123	Bolt
11	07130-06163	Bolt
12	37740-10F00	Switch Assy, Stop Lamp
13	43139-10F00	Spring, Stop Lamp
14	37840-10F00	Switch Assy, Side Stand
15	02142-06203	Screw
16	38501-10F00	Horn Assy, Rh
17	38502-10F00	Horn Assy, Lh
18	09407-03401	Clamp (l:33)
18	09407-03401	Clamp (l:33)
19	38500-10F00	Horn Assy
20	01550-06163	Bolt, Horn

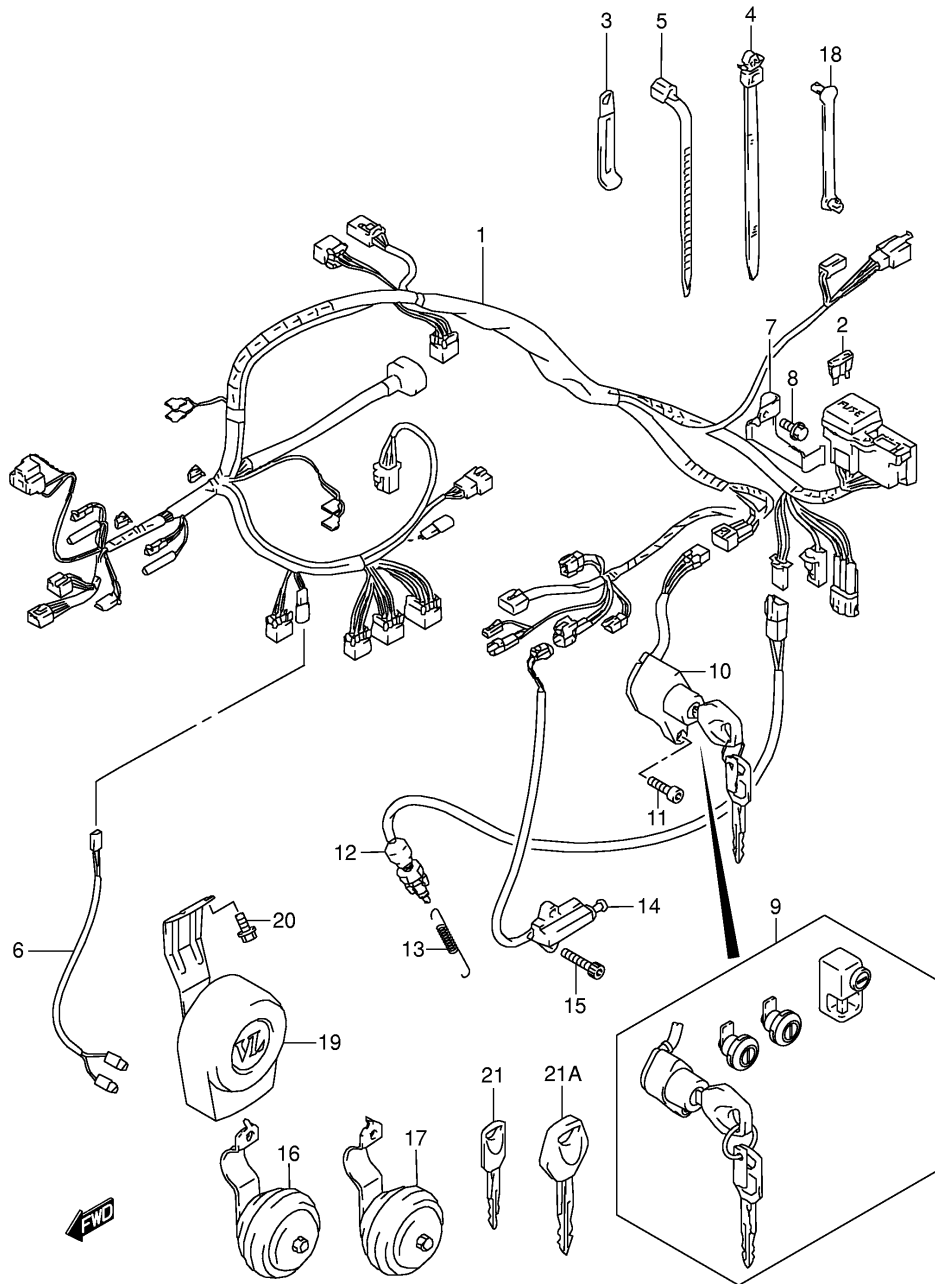 

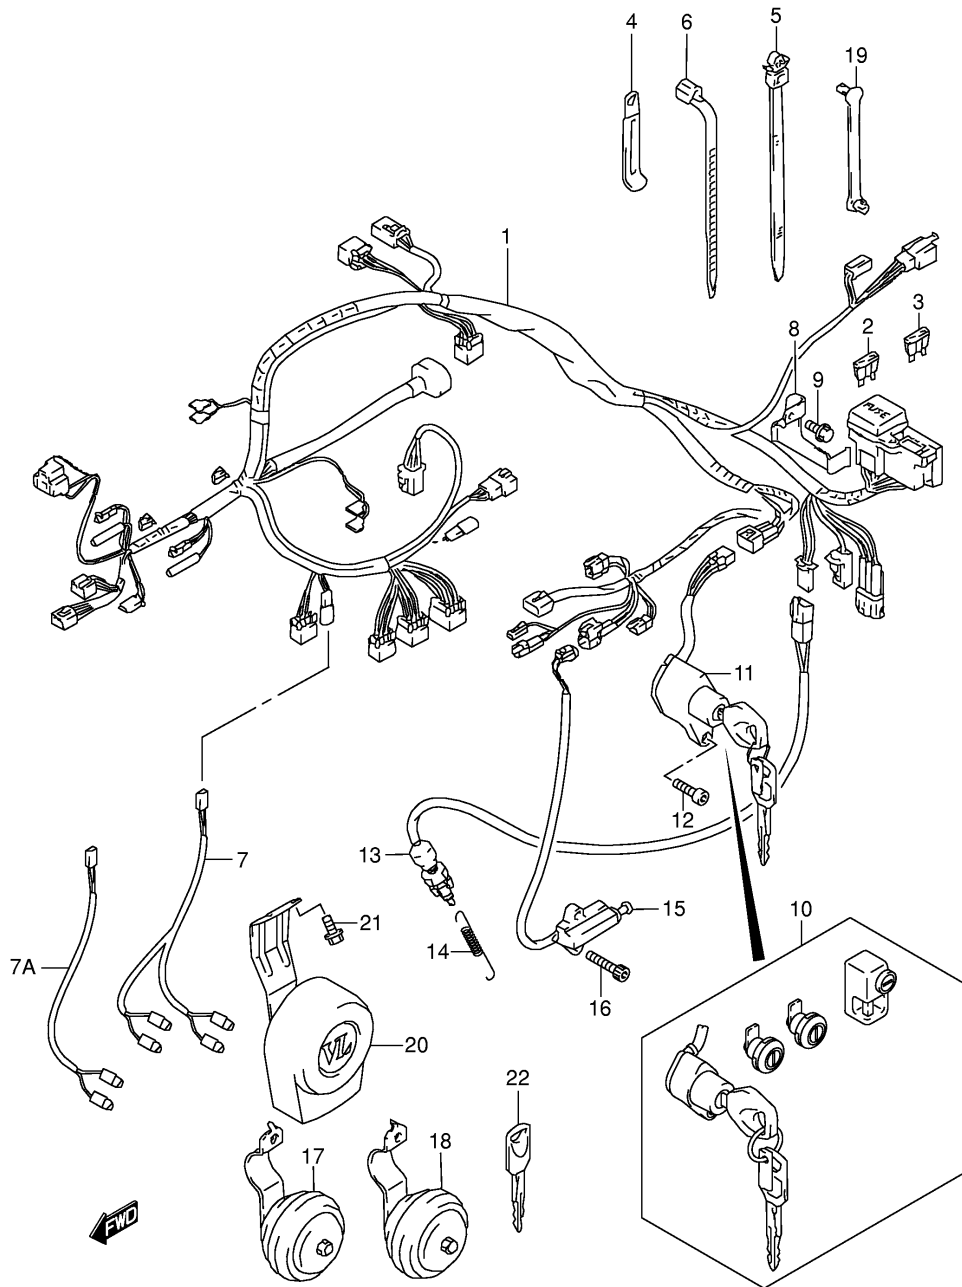 


Ref No	Part No	Description
1	36610-10FA0	Harness, Wiring
1	36610-10F90	Harness, Wiring
2	09481-10501	• . Fuse (10a)
3	09481-15501	• . Fuse (15a)
3	09481-15501	• . Fuse (15a)
4	09404-06433	Clamp (l:80)
5	09407-11402	Clamp (l:90)
6	09407-14403	Clamp (l:125)
6	09407-25401	Clamp (l:235)
6	09407-18402	Clamp (l:165)
7	36854-10F00	Wire, Horn Lead
7a	36852-21E10	Wire, Horn Lead
8	36744-10F00	Bracket, Fuse
9	01550-06123	Bolt
10	37100-26880	Lock Set
10	37000-26841	Lock Set
11	37110-26F20	Switch Assy, Ignition
11	37110-26F11	Switch Assy, Ignition
12	07130-06163	Bolt
13	37740-10F00	Switch Assy, Stop Lamp
14	43139-10F00	Spring, Stop Lamp
15	37840-10F00	Switch Assy, Side Stand
16	02142-06203	Screw
17	38501-10F00	Horn Assy, Rh
18	38502-10F00	Horn Assy, Lh
19	09407-03401	Clamp (l:33)
19	09407-03401	Clamp (l:33)
20	38500-10F00	Horn Assy
21	01550-06163	Bolt, Horn
22	37146-48E00	Key, Blank

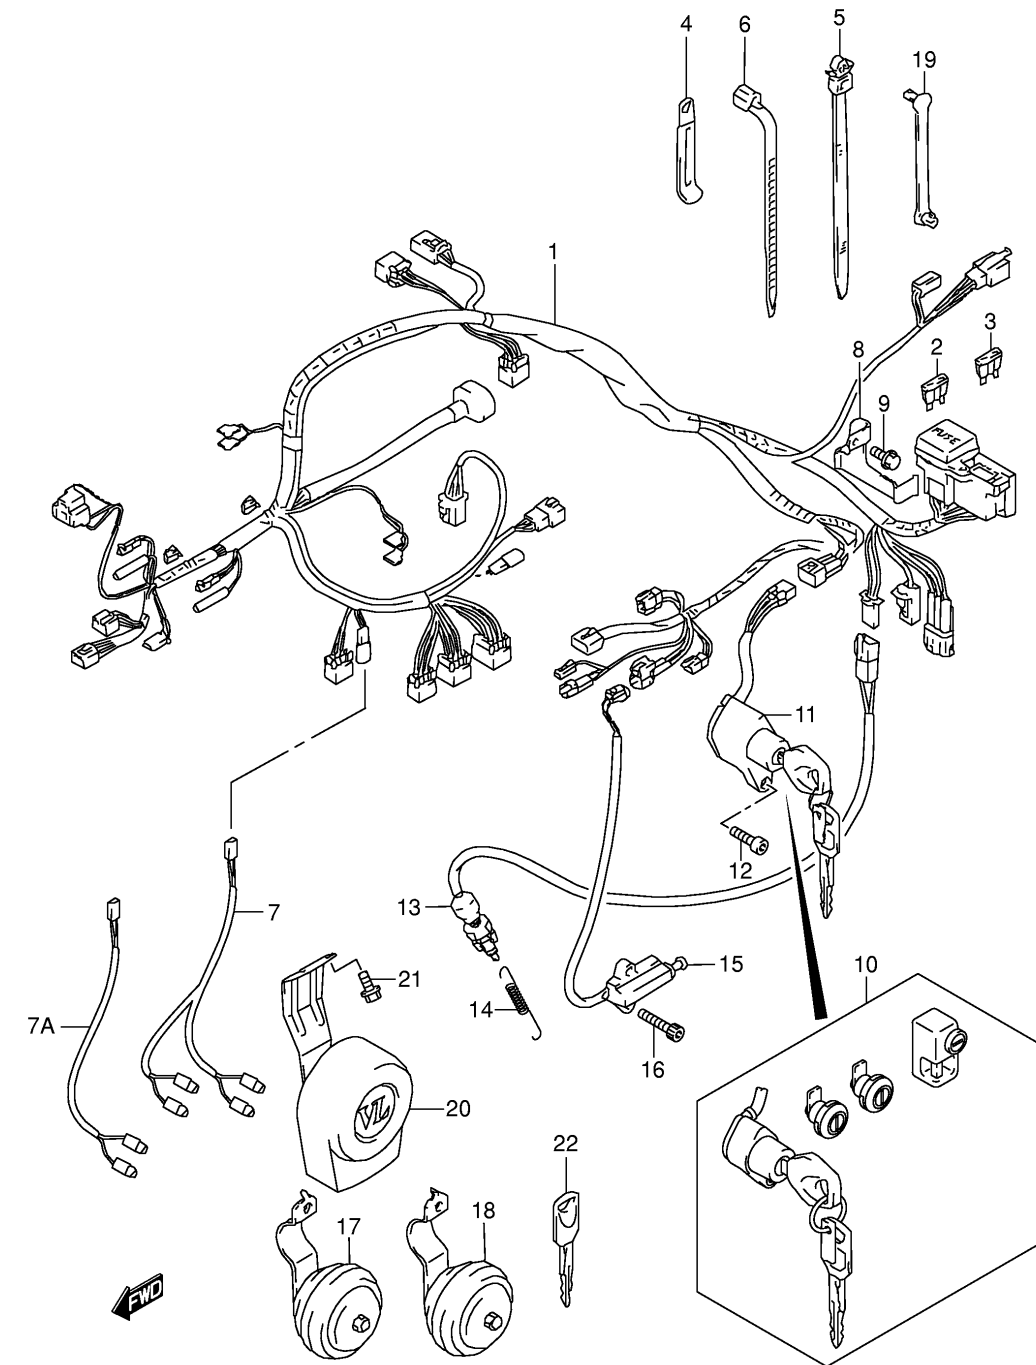 


Ref No	Part No	Description
1	36610-10FA0	Harness, Wiring
1	36610-10FB0	Harness, Wiring
2	09481-10501	• . Fuse (10a)
3	09481-15501	• . Fuse (15a)
4	09404-06433	Clamp (l:80)
5	09407-11402	Clamp (l:90)
6	09407-14403	Clamp (l:125)
6	09407-25401	Clamp (l:235)
6	09407-18402	Clamp (l:165)
7	36854-10F00	Wire, Horn Lead
7a	36852-21E10	Wire, Horn Lead
8	36744-10F00	Bracket, Fuse
9	01550-06123	Bolt
10	37100-26880	Lock Set
11	37110-26F02	Switch Assy, Ignition
12	07130-06163	Bolt
13	37740-10F00	Switch Assy, Stop Lamp
14	43139-10F00	Spring, Stop Lamp
15	37840-10F00	Switch Assy, Side Stand
16	02142-06203	Screw
17	38501-10F00	Horn Assy, Rh
18	38502-10F00	Horn Assy, Lh
19	09407-03401	Clamp (l:33)
19	09407-03401	Clamp (l:33)
20	38500-10F00	Horn Assy
21	01550-06163	Bolt, Horn
22	37146-48E00	Key, Blank



Ref No	Part No	Description
1	37200-48E10	Switch Assy, Handle Rh
1	37200-48E30	Switch Assy, Handle Rh
2	02112-05167	• . Screw
3	09407-14407	Clamp (I:145)
4	37400-10F10	Switch Assy, Handle Lh
5	02112-05167	• . Screw
6	09407-14407	Clamp (I:145)

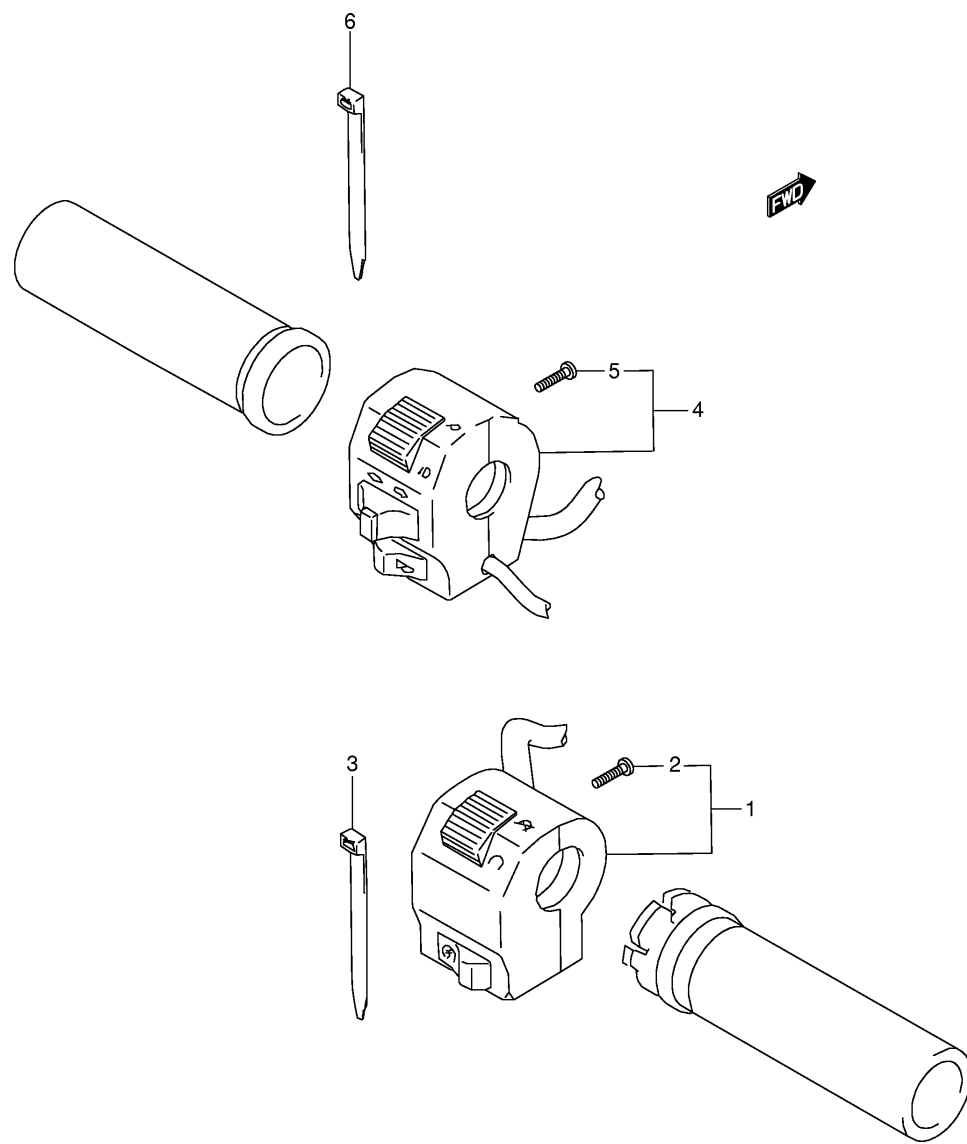 


Ref No	Part No	Description
1	37200-48E90	Switch Assy, Handle Rh
2	37200-48E80	Switch Assy, Handle Rh
3	02112-05167	• . Screw
4	09407-14407	Clamp (I:145)
5	37400-10F60	Switch Assy, Handle Lh
6	02112-05167	• . Screw
7	09407-14407	Clamp (I:145)

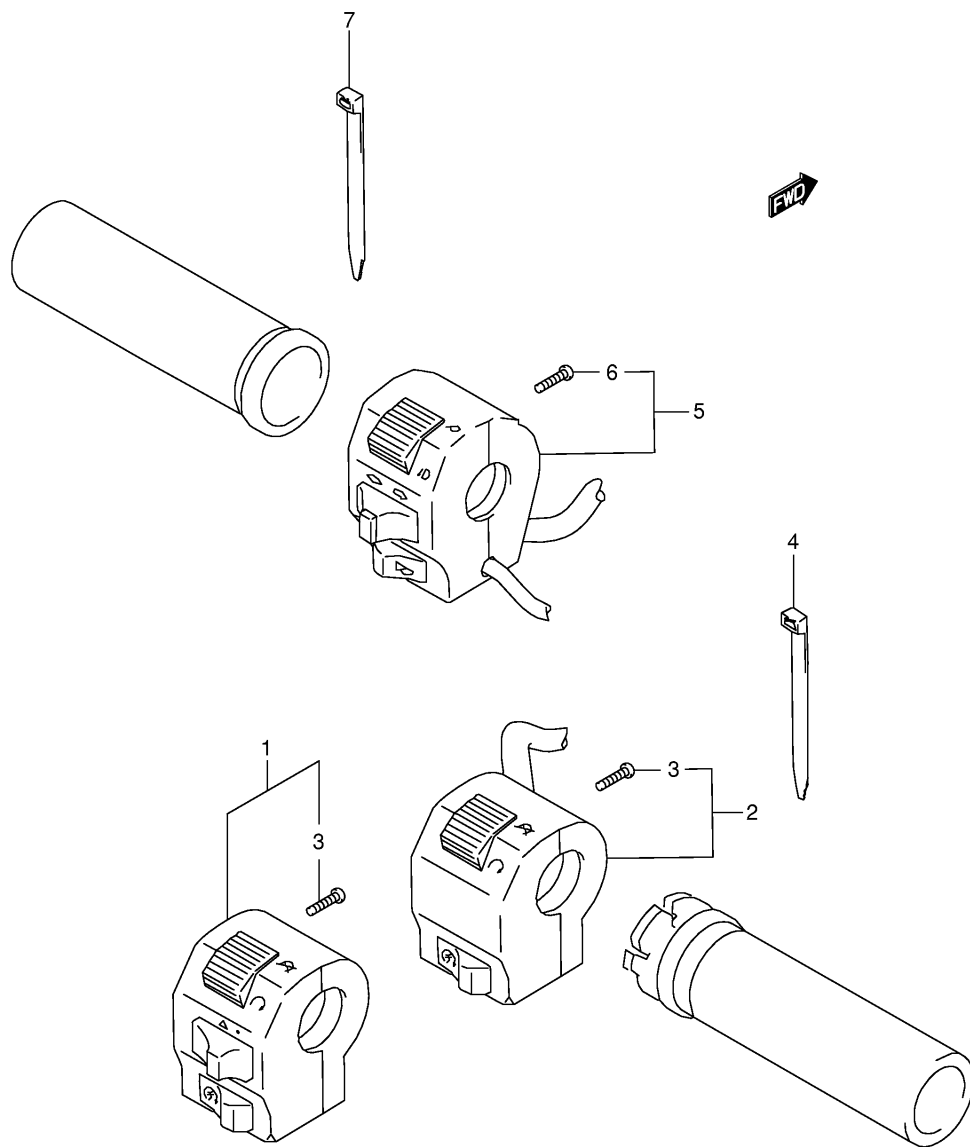 


Ref No	Part No	Description
1	37200-48E90	Switch Assy, Handle Rh
2	02112-05167	• . Screw
3	09407-14407	Clamp (l:145)
4	37400-10F60	Switch Assy, Handle Lh
5	02112-05167	• . Screw
6	09407-14407	Clamp (l:145)

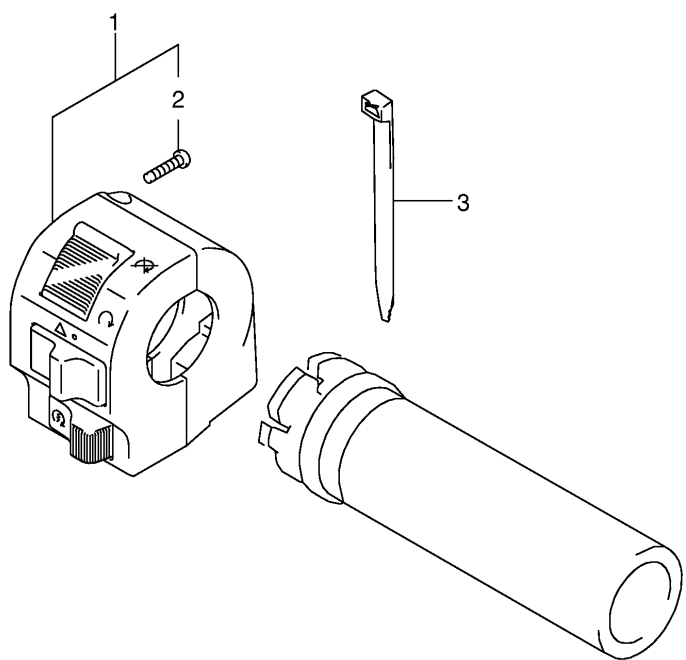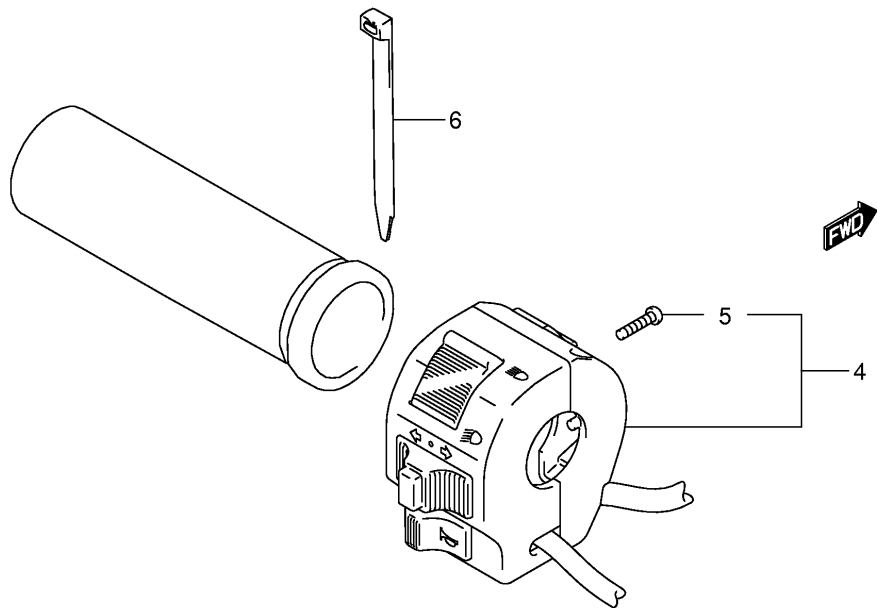  


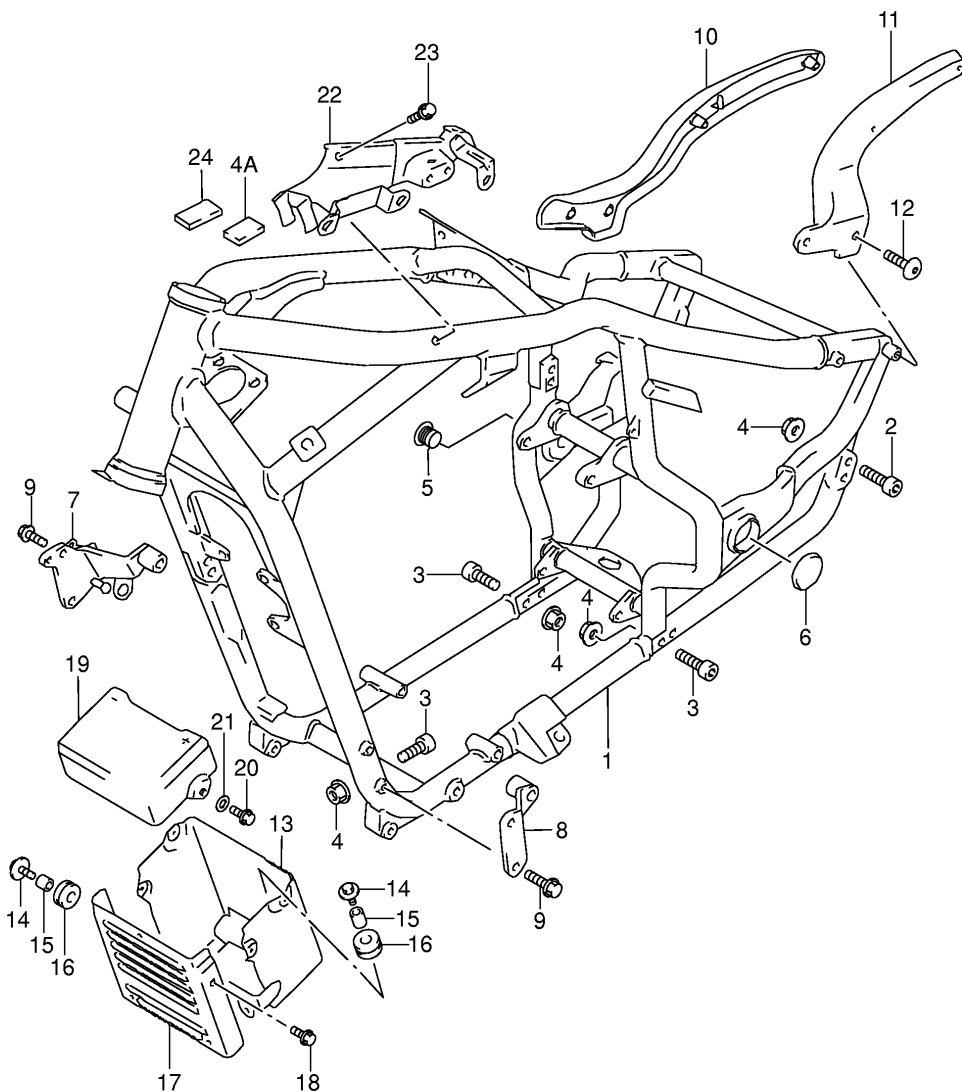 


Ref No	Part No	Description
1	41100-10F01-019	Frame (black)
2	07130-10253	Bolt
3	07130-10353	Bolt
4	08319-31103	Nut
4a	61374-08010	Cushion
5	41898-10F00	Cap, Frame Hole
6	41899-10F00	Cap, Pivot Rh
7	41910-10F00	Plate, Engine Mount Rh
8	41920-10F00	Plate, Engine Mount Lh
9	01580-08303	Bolt
10	41610-10F01	Grip, Frame Handle Rh
11	41620-10F01	Grip, Frame Handle Lh
12	41629-10F10	Bolt
13	41540-10F00	Holder, Battery
14	09116-06168	Bolt
15	09180-06261	Spacer
16	09320-08021	Cushion
17	41548-10F00	Holder, Battery Front
18	02142-06083	Screw
19	41549-10F00	Cover, Upper
20	01550-06123	Bolt
21	09169-06071	Washer
22	47410-10F00	Holder, Electric Parts
23	01550-06163	Bolt
24	11179-45D00	Cushion

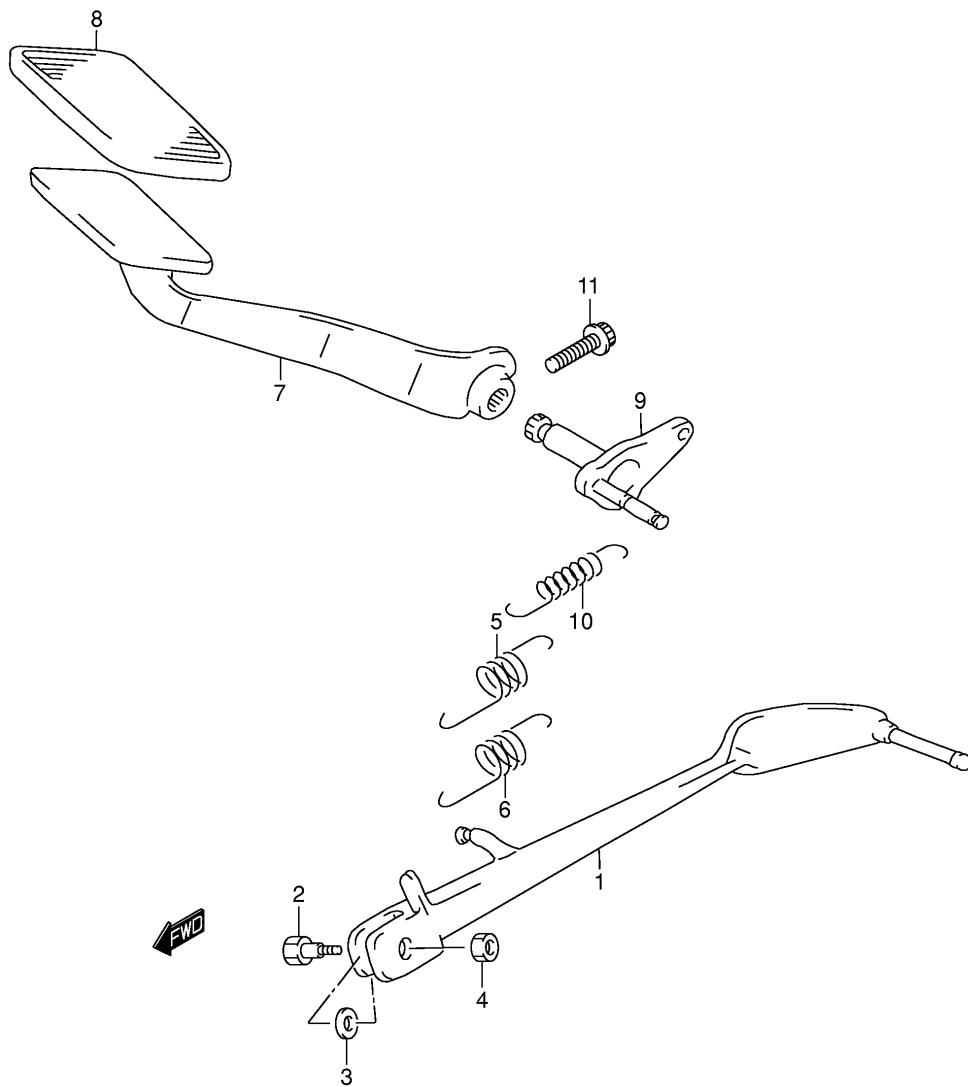 


Ref No	Part No	Description
1	42310-10F01	Stand, Prop
2	09111-10027	Bolt
3	08221-12224	Shim
4	08319-21103	Nut
5	09443-14066	Spring, Inner
6	09443-19012	Spring, Outer
7	43110-10F00	Pedal, Brake
8	43151-10F00	Rubber
9	43120-10F00	Arm, Pedal Rod
10	09443-11030	Spring
11	07120-06253	Bolt

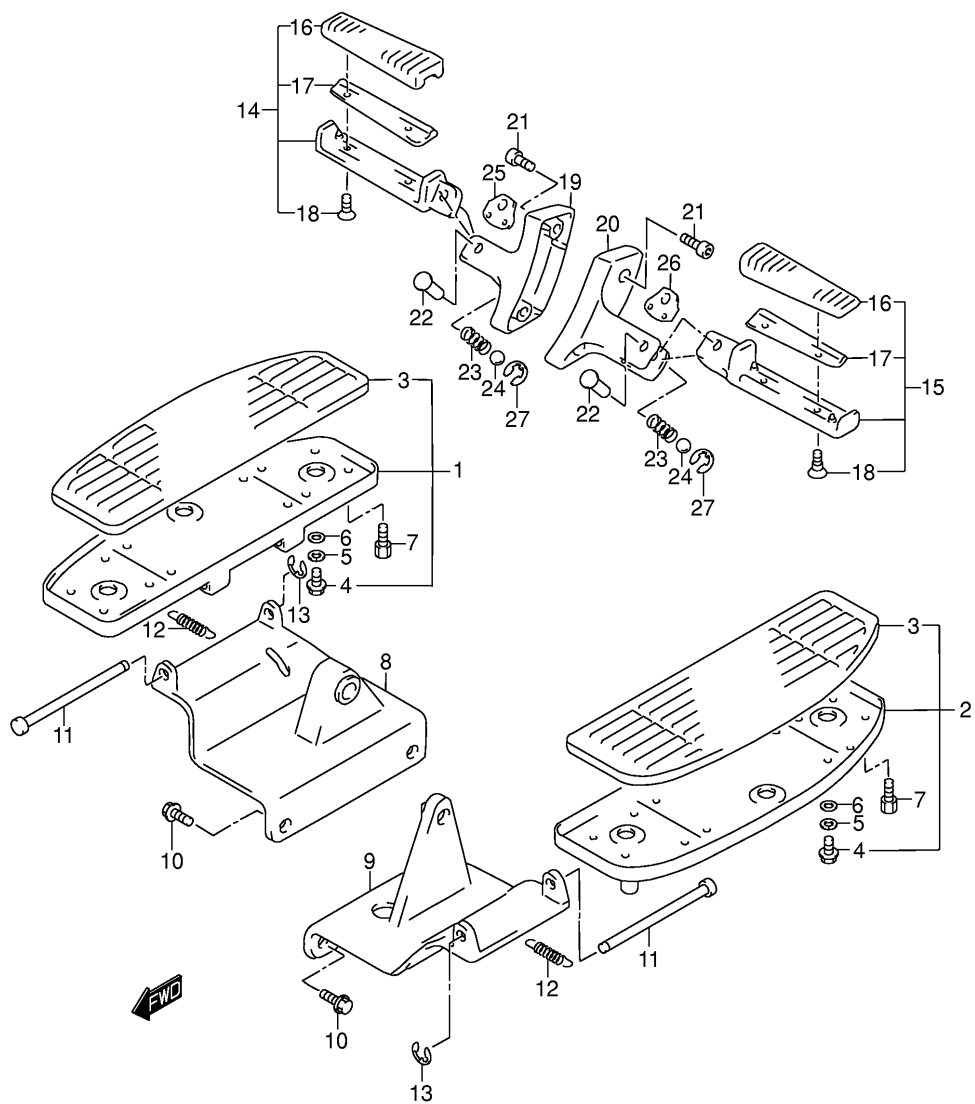 

Ref No	Part No	Description
1	43501-10F00	Footrest Assy, Front Rh
2	43502-10F00	Footrest Assy, Front Lh
3	43550-10F00	• . Rubber
4	01550-06103	• . Bolt
5	09160-06503	• . Washer
6	09320-10016	• . Cushion
7	43576-07D01	• . Bolt, Bank Sensor
8	43510-10F00	Bracket, Front Footrest Rh
9	43520-10F00	Bracket, Front Footrest Lh
10	01580-10353	Bolt
11	43539-10F00	Pin
12	09443-11033	Spring
13	08332-11063	E Ring
14	43600-48E10	Footrest Assy, Pillion Rh
15	43700-48E10	Footrest Assy, Pillion Lh
16	43612-38A00	• . Rubber
17	43632-38A00	• . Plate, Rubber Stop
18	09127-05017	• . Screw
19	43811-10F00	Bracket, Pillion Footrest Rh
20	43821-10F00	Bracket, Pillion Footrest Lh
21	09106-08104	Bolt, Bracket
22	09208-08014	Pin
23	09440-05005	Spring
24	06111-07004	Ball
25	43816-10F00	Plate, Rh
26	43826-10F00	Plate, Lh
27	08332-11063	E Ring

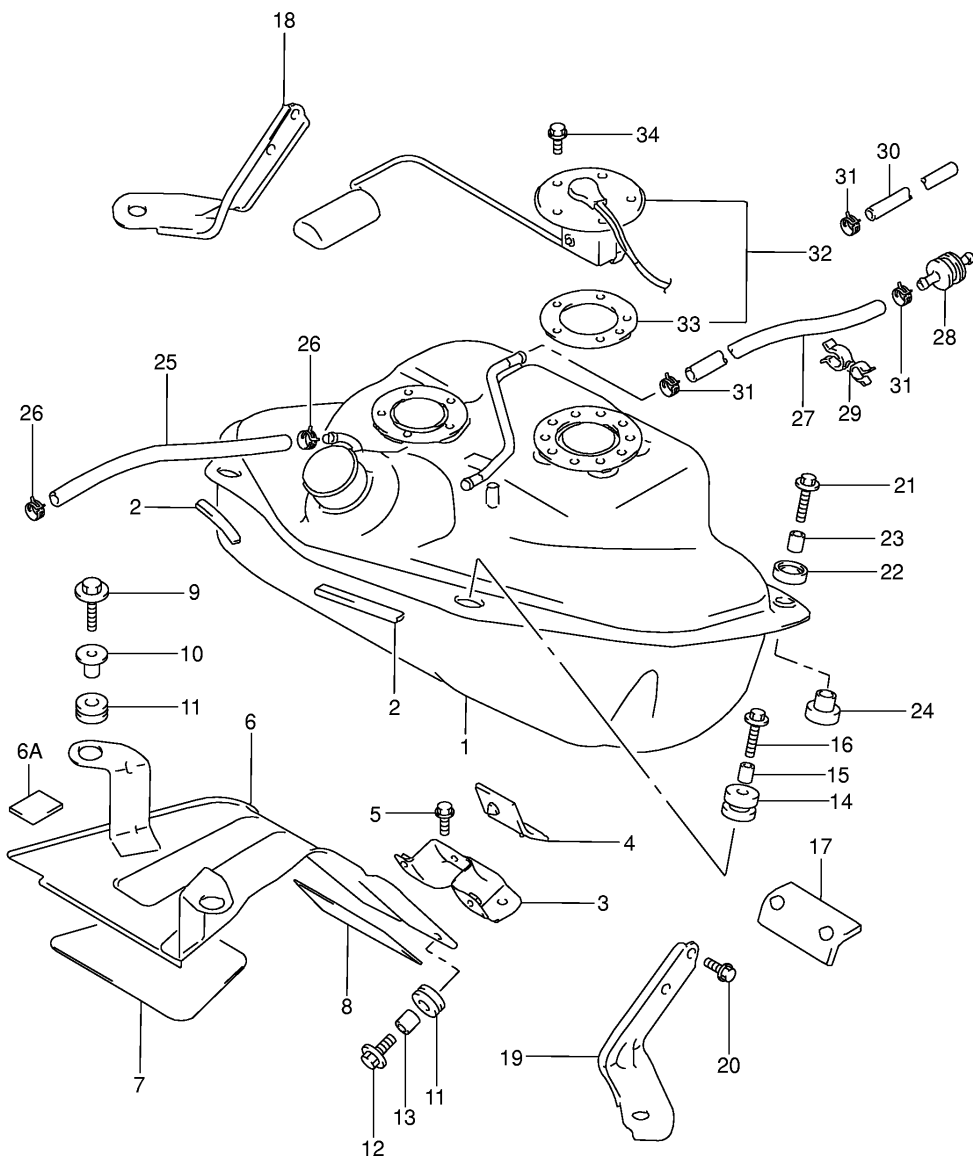 

Ref No	Part No	Description
1	44110-10F00	Tank, Fuel
2	68241-04X50-00B	Molding
3	44130-10F00	Bracket, Front
4	44511-10F00	Cushion, Bracket
5	01550-06103	Bolt
6	44270-10F01	Cover, Fuel Tank Front
6a	61544-94500	Cushion, Rh
7	44267-10F00	Shield, Cover Upper
8	44268-10F00	Shield, Cover Lower
9	09116-06172	Bolt, Cover Upper
10	09169-06070	Washer
11	09320-08001	Cushion
12	09116-06115	Bolt, Cover Lower
13	09180-06248	Spacer
14	44512-04F00	Cushion, Front
15	09180-06267	Spacer
16	09116-06172	Bolt
17	44541-10F00	Cushion, Rear Center
18	44150-10F00	Bracket, Rear Rh
19	44160-10F00	Bracket, Rear Lh
20	01550-06103	Bolt, Bracket
21	09116-06172	Bolt, Fuel Tank Rear
22	09320-14022	Cushion, Upper
23	09180-06271	Spacer
24	09320-10020	Cushion, Lower
25	09355-11165-600	Hose, Air Vent (l:600->90)
26	09401-15404	Clip
27	09355-54116-600	Hose, Tank & Valve (l:600->50)
28	85451-75100	Check Valve, 2 Way
29	09408-00140	Clip
30	09355-54116-600	Hose, Valve & Catch (l:600->40)
31	09401-10409	Clip
32	34810-10F10	Gauge Assy, Fuel Level
33	34825-45100	• Gasket
34	09117-05003	Bolt

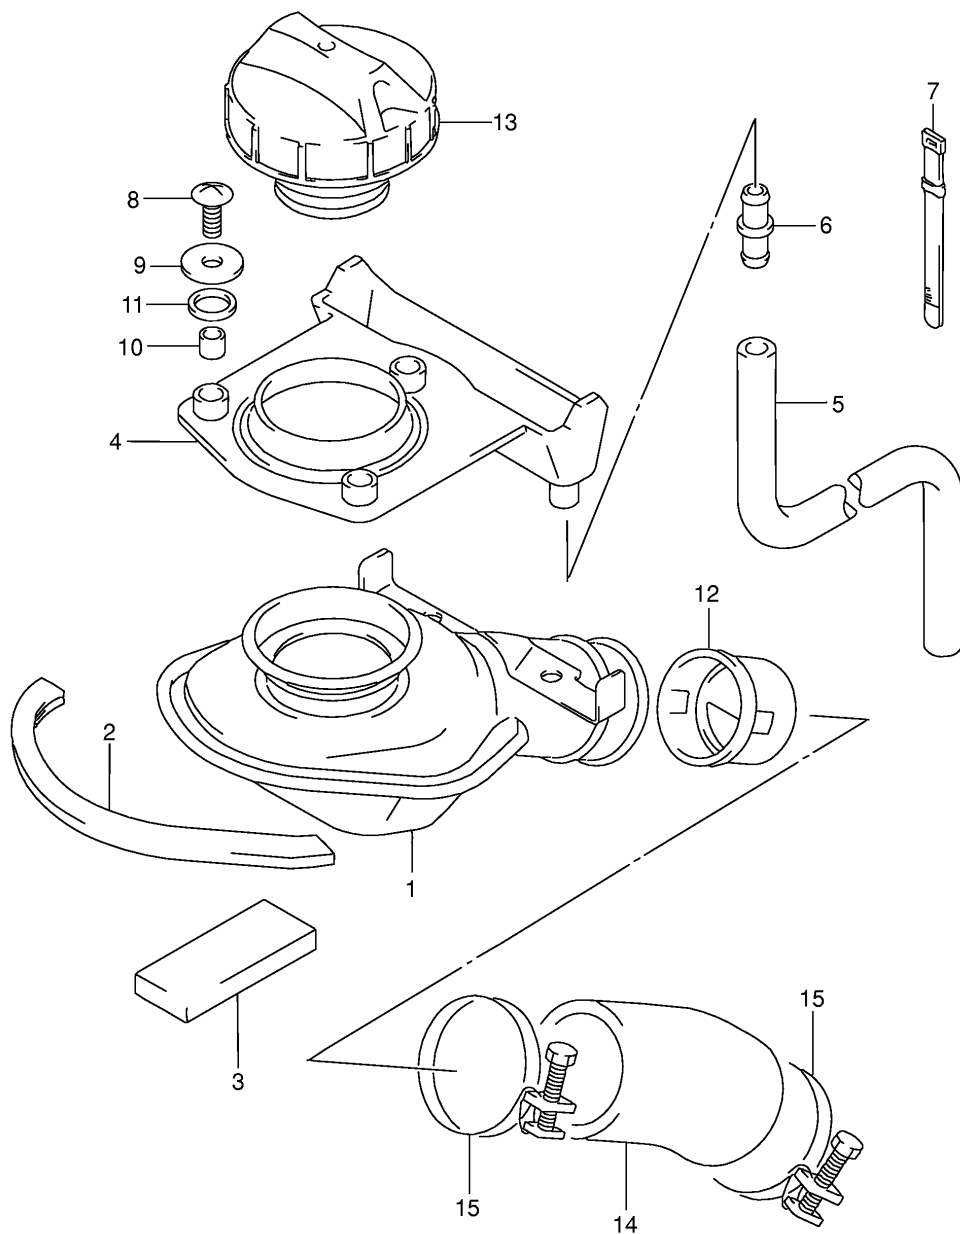 


Ref No	Part No	Description
1	44190-10F00	Inlet, Fuel Tank
2	68241-04X50-00B	Molding
3	11179-45D00	Cushion
4	44261-10F00	Tray, Fuel Inlet
5	09352-70103-00B	Hose, Water Drain (l:2000->70)
6	09367-08001	Joint
7	09407-18402	Clamp
8	02142-05163	Screw
9	09160-05046	Washer
10	09180-05047	Spacer
11	44559-10F00	Cushion
12	89280-50F00	Valve, Fuel Inlet
13	44200-10F01	Cap Assy, Fuel Tank
14	44422-10F00	Hose, Inlet
15	09400-52312	Clamp




FUEL FILTER

1	89485-65D00	Valve, Fuel Cut
2	09117-05003	Bolt
3	09355-70125-600	Hose, No.1 (I:600->80)
4	44451-10F00	Joint
5	44432-10F00	Hose, Fuel No.2
6	09401-11407	Clip
7	44330-10F00	Filter, Fuel
8	44339-10F00	Clamp, Filter
9	01550-06123	Bolt, Clamp
10	44831-10F00	Cushion
11	09355-70125-600	Hose, Pump (I:600->80)
12	09440-14047	Spring
13	09367-08001	Joint
14	09401-11407	Clip
15	09407-18402	Clamp

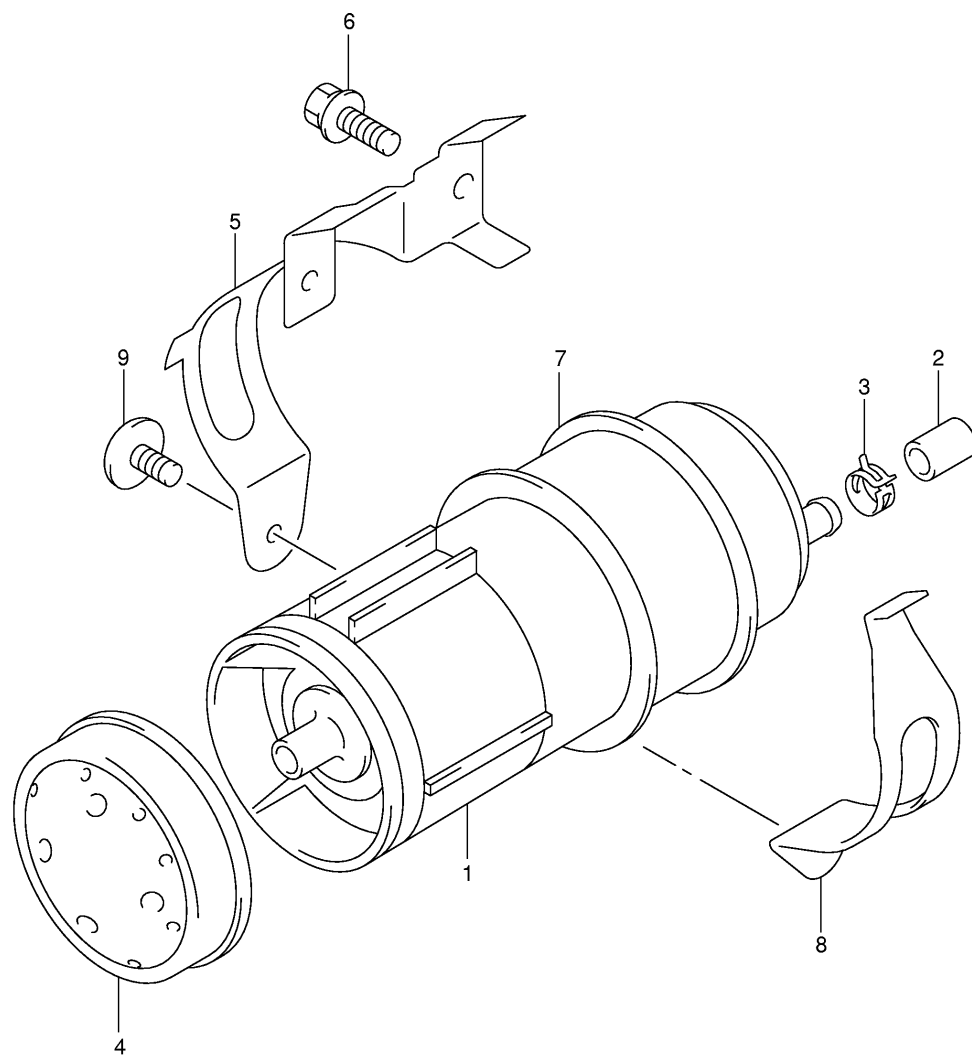 


Ref No	Part No	Description
1	44390-10F00	Tank, Fuel Catch
2	09251-07003	Cap
3	09401-11407	Clip
4	17211-48E00	Cap, Outer
5	44881-10F00	Bracket, Catch Tank
6	09116-06168	Bolt, Bracket
7	44883-26E00	Cushion
8	44882-10F00	Holder
9	02142-06123	Screw, Holder




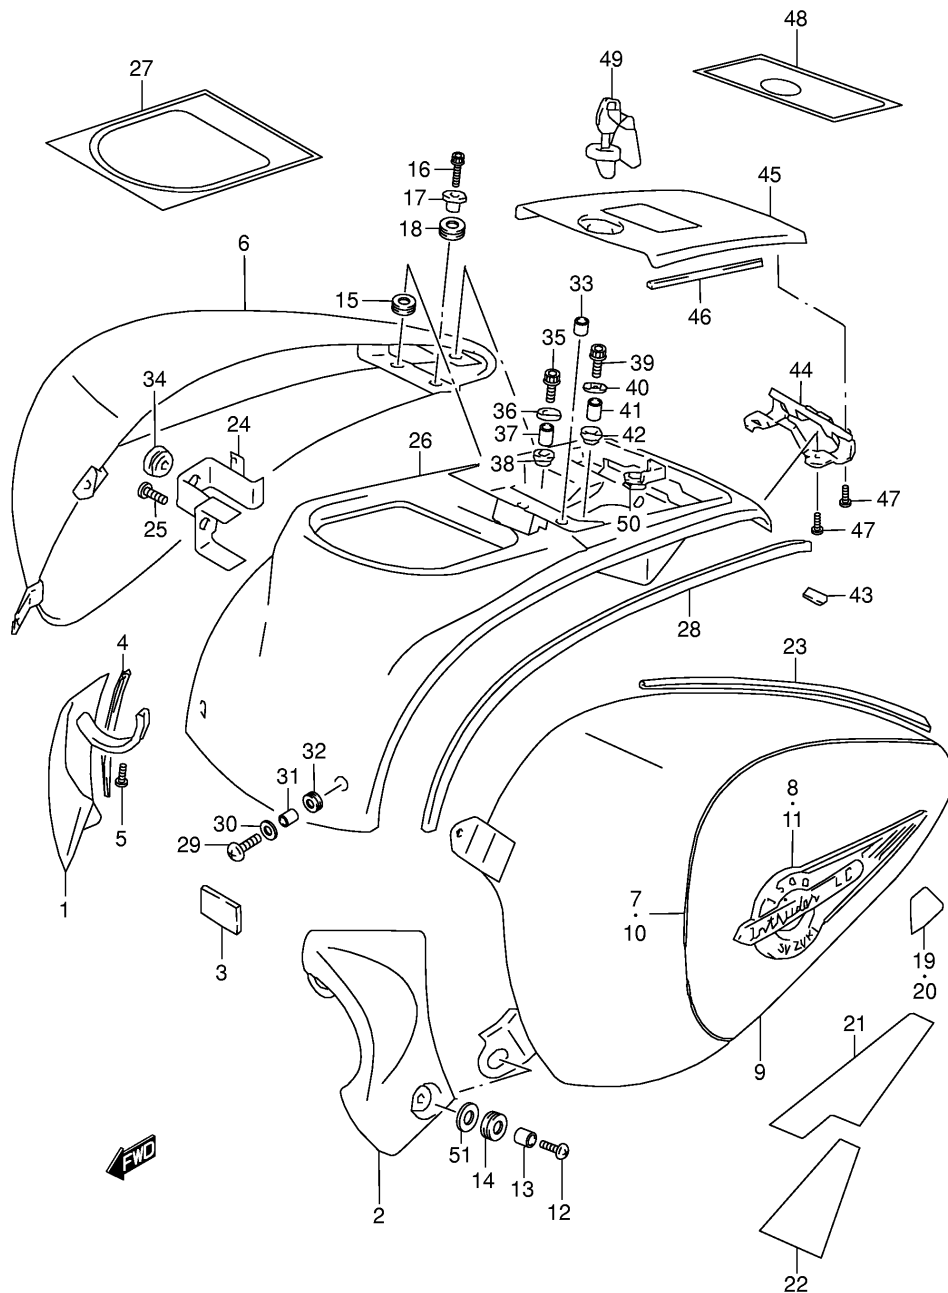 


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F00	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F00-E6M	Cover Assy, Side Upper Rh
6	47800-10F00-K7D	Cover Assy, Side Upper Rh
6	47800-10F00-K7E	Cover Assy, Side Upper Rh
6	47800-10F00-K7F	Cover Assy, Side Upper Rh
7	68135-10F00-K7W	• . Tape, Rh
7	68135-10F00-K7Y	• . Tape, Rh
7	68135-10F00-K8A	• . Tape, Rh
7	68135-10F00-K8B	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F00-E6M	Cover Assy, Side Upper Lh
9	47900-10F00-K7D	Cover Assy, Side Upper Lh
9	47900-10F00-K7E	Cover Assy, Side Upper Lh
9	47900-10F00-K7F	Cover Assy, Side Upper Lh
10	68145-10F00-K7W	• . Tape, Lh
10	68145-10F00-K7Y	• . Tape, Lh
10	68145-10F00-K8A	• . Tape, Lh
10	68145-10F00-K8B	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F00	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer

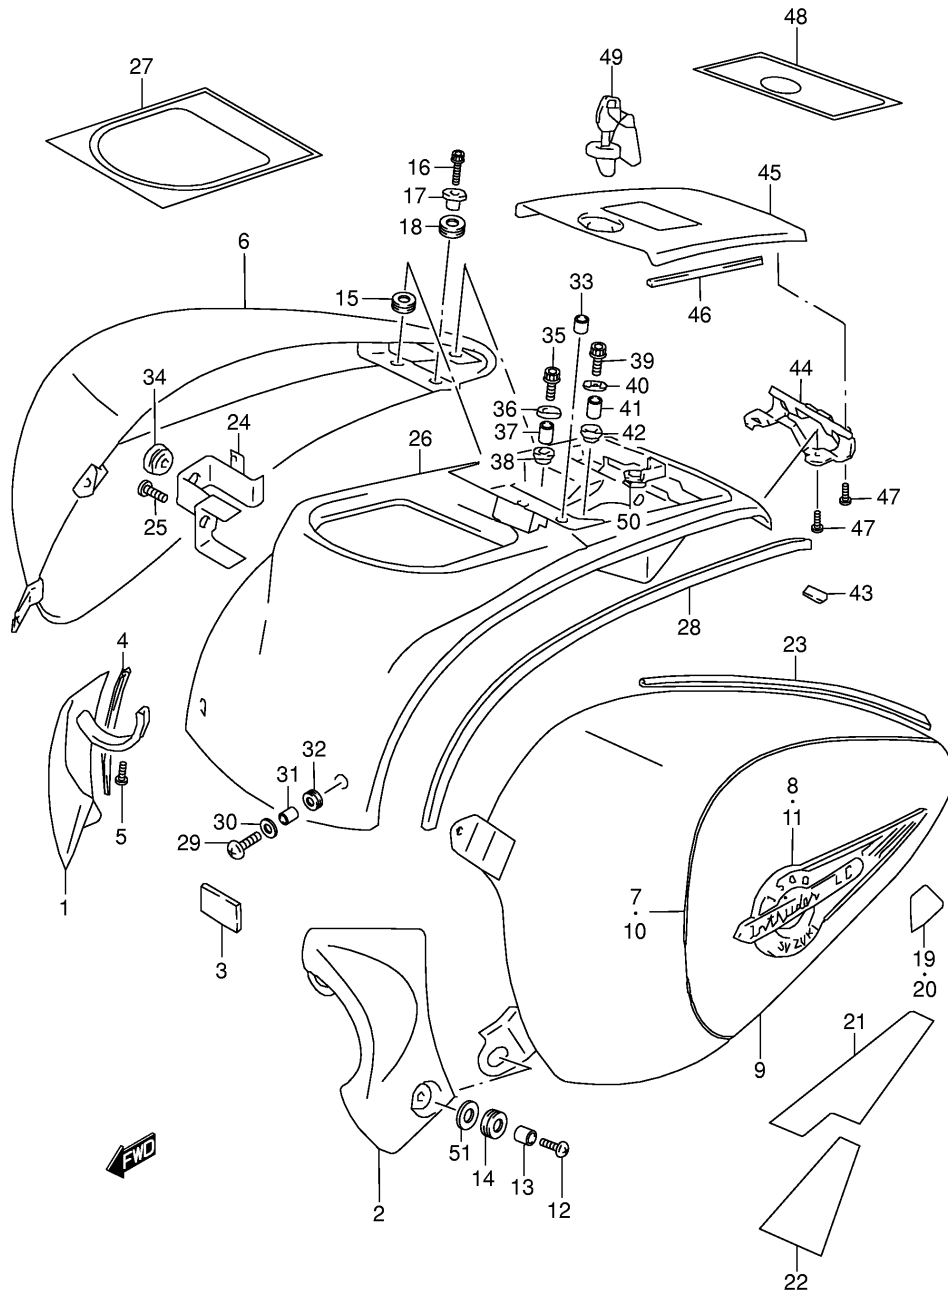 


Ref No	Part No	Description
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F00	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

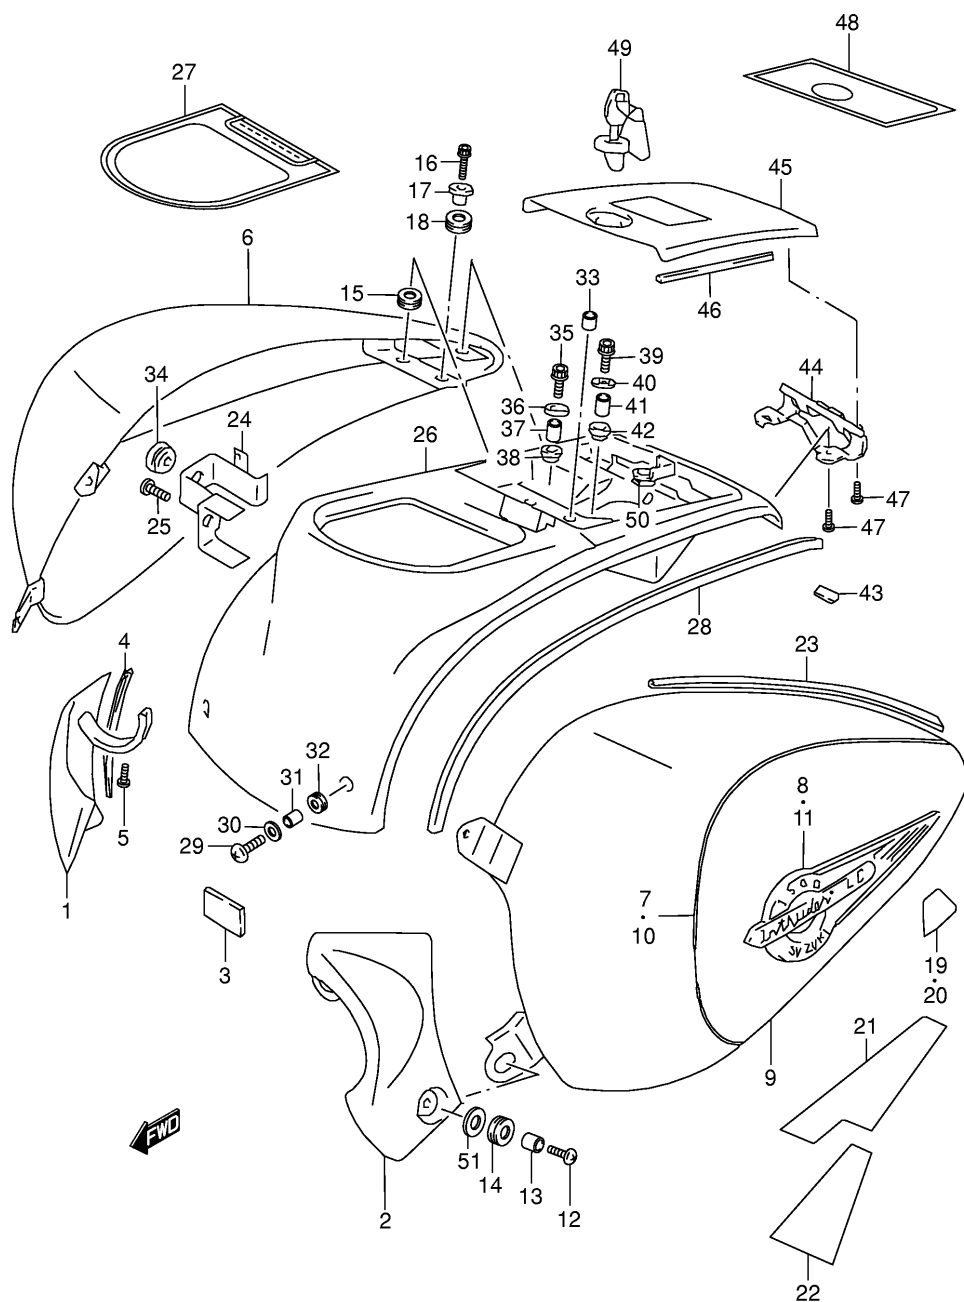 


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F00-E6M	Cover Assy, Side Upper Rh
6	47800-10F00-K7E	Cover Assy, Side Upper Rh
6	47800-10F00-M4P	Cover Assy, Side Upper Rh
6	47800-10F00-M4R	Cover Assy, Side Upper Rh
7	68135-10F00-K7W	• . Tape, Rh
7	68135-10F00-K8A	• . Tape, Rh
7	68135-10F00-M5M	• . Tape, Rh
7	68135-10F00-M5N	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F00-E6M	Cover Assy, Side Upper Lh
9	47900-10F00-K7E	Cover Assy, Side Upper Lh
9	47900-10F00-M4P	Cover Assy, Side Upper Lh
9	47900-10F00-M4R	Cover Assy, Side Upper Lh
10	68145-10F00-K7W	• . Tape, Lh
10	68145-10F00-K8A	• . Tape, Lh
10	68145-10F00-M5M	• . Tape, Lh
10	68145-10F00-M5N	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer

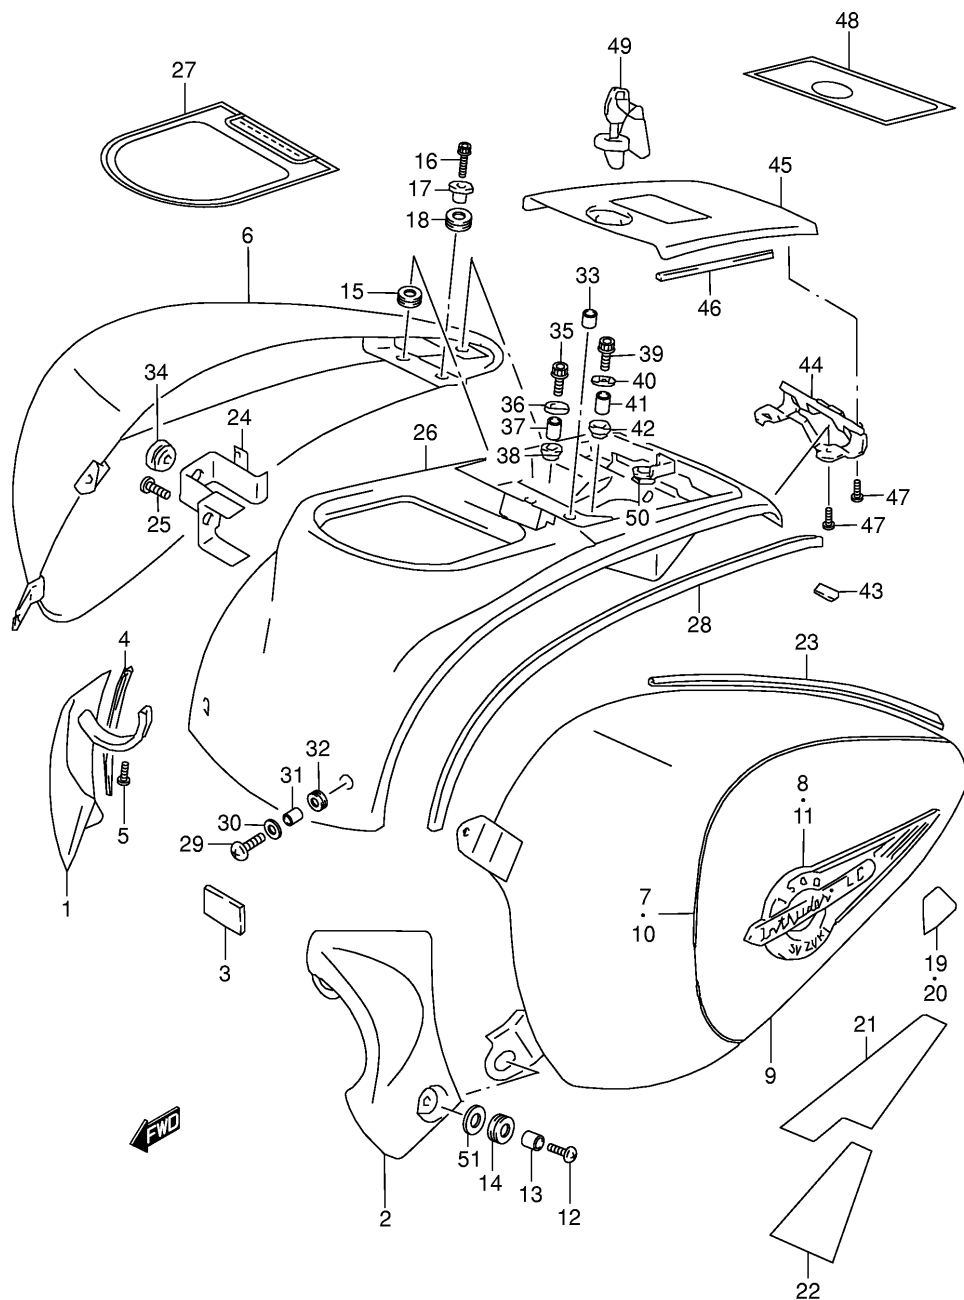 


Ref No	Part No	Description
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

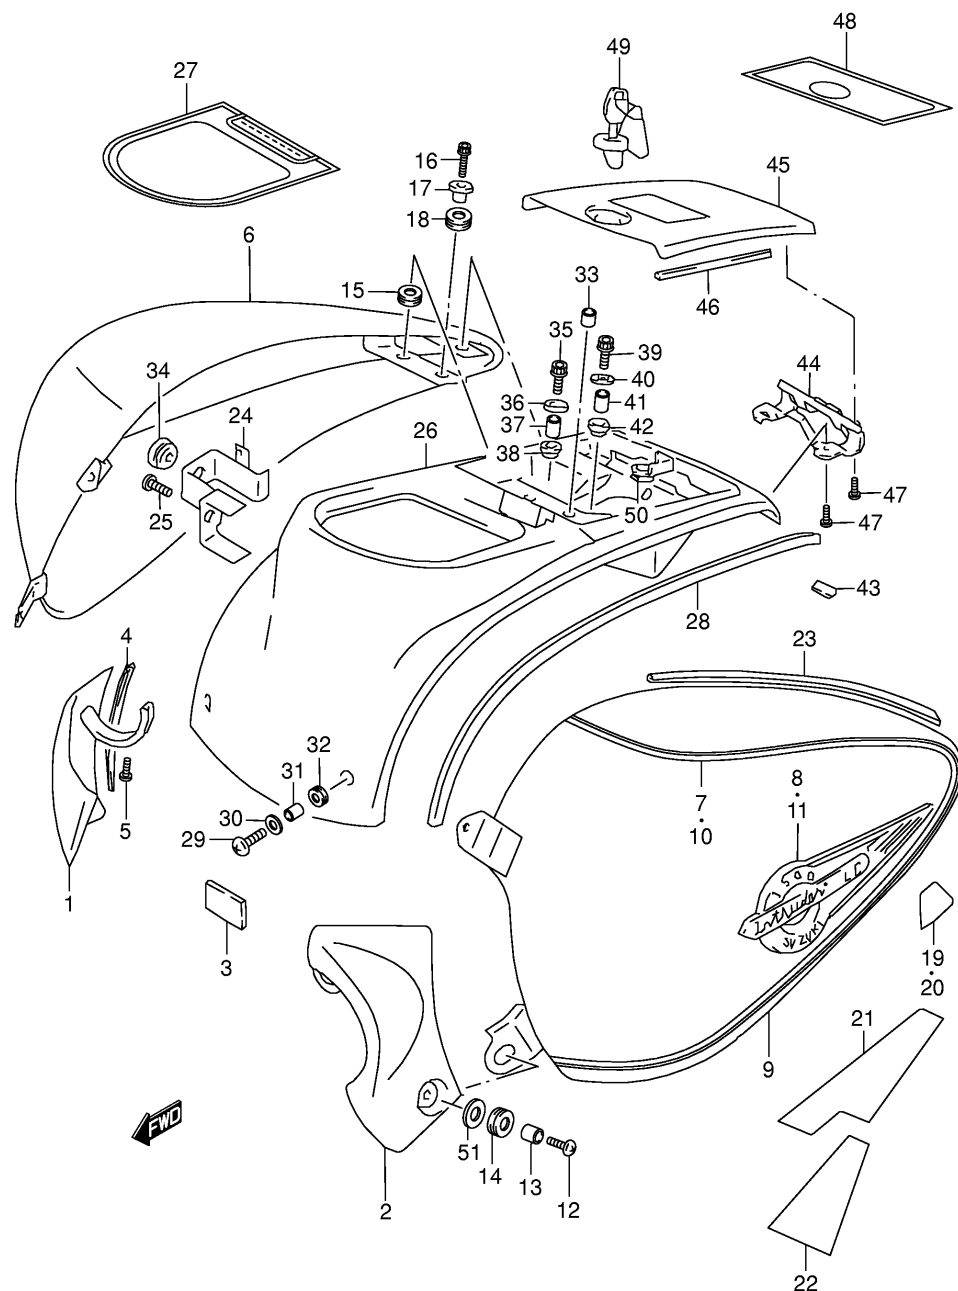 


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F10-33J	Cover Assy, Side Rh (black)
6	47800-10F10-K7E	Cover Assy, Side Rh
6	47800-10F10-BU6	Cover Assy, Side Rh
6	47800-10F10-BU7	Cover Assy, Side Rh
7	68135-10F10-BU8	• . Tape, Rh
7	68135-10F10-K8A	• . Tape, Rh
7	68135-10F10-BU9	• . Tape, Rh
7	68135-10F10-BV1	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F10-33J	Cover Assy, Side Lh (black)
9	47900-10F10-K7E	Cover Assy, Side Lh
9	47900-10F10-BU6	Cover Assy, Side Lh
9	47900-10F10-BU7	Cover Assy, Side Lh
10	68145-10F10-BU8	• . Tape, Lh
10	68145-10F10-K8A	• . Tape, Lh
10	68145-10F10-BU9	• . Tape, Lh
10	68145-10F10-BV1	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer

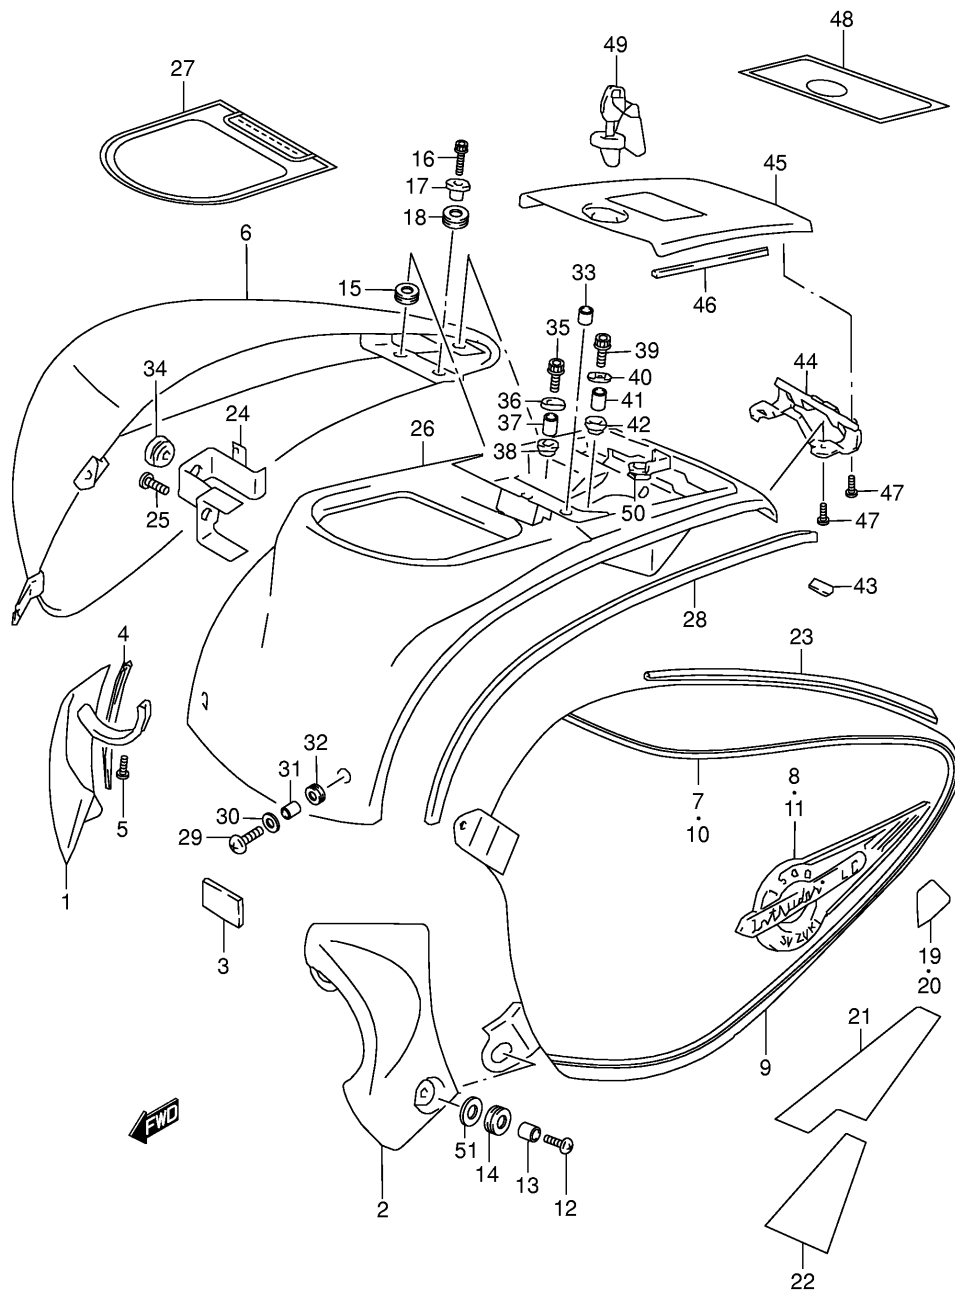 

Ref No	Part No	Description
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

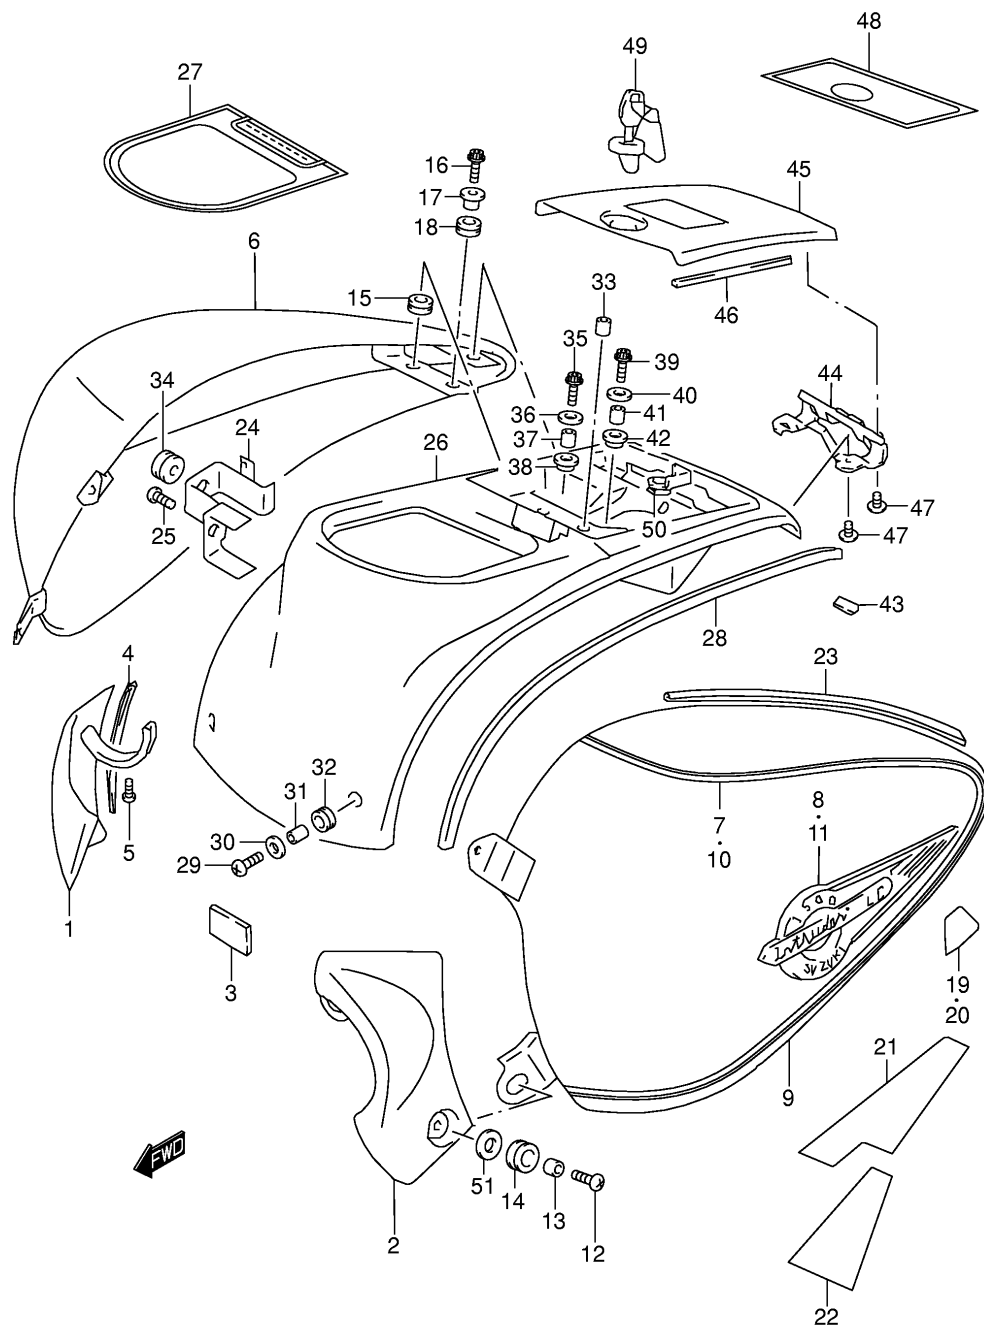 


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F10-33J	Cover Assy, Side Rh (black)
6	47800-10F10-FG1	Cover Assy, Side Rh
6	47800-10F10-FG2	Cover Assy, Side Rh
7	68135-10F10-BU8	• . Tape, Rh
7	68135-10F10-EZ7	• . Tape, Rh
7	68135-10F10-EZ9	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F10-33J	Cover Assy, Side Lh (black)
9	47900-10F10-FG1	Cover Assy, Side Lh
9	47900-10F10-FG2	Cover Assy, Side Lh
10	68145-10F10-BU8	• . Tape, Lh
10	68145-10F10-EZ7	• . Tape, Lh
10	68145-10F10-EZ9	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet

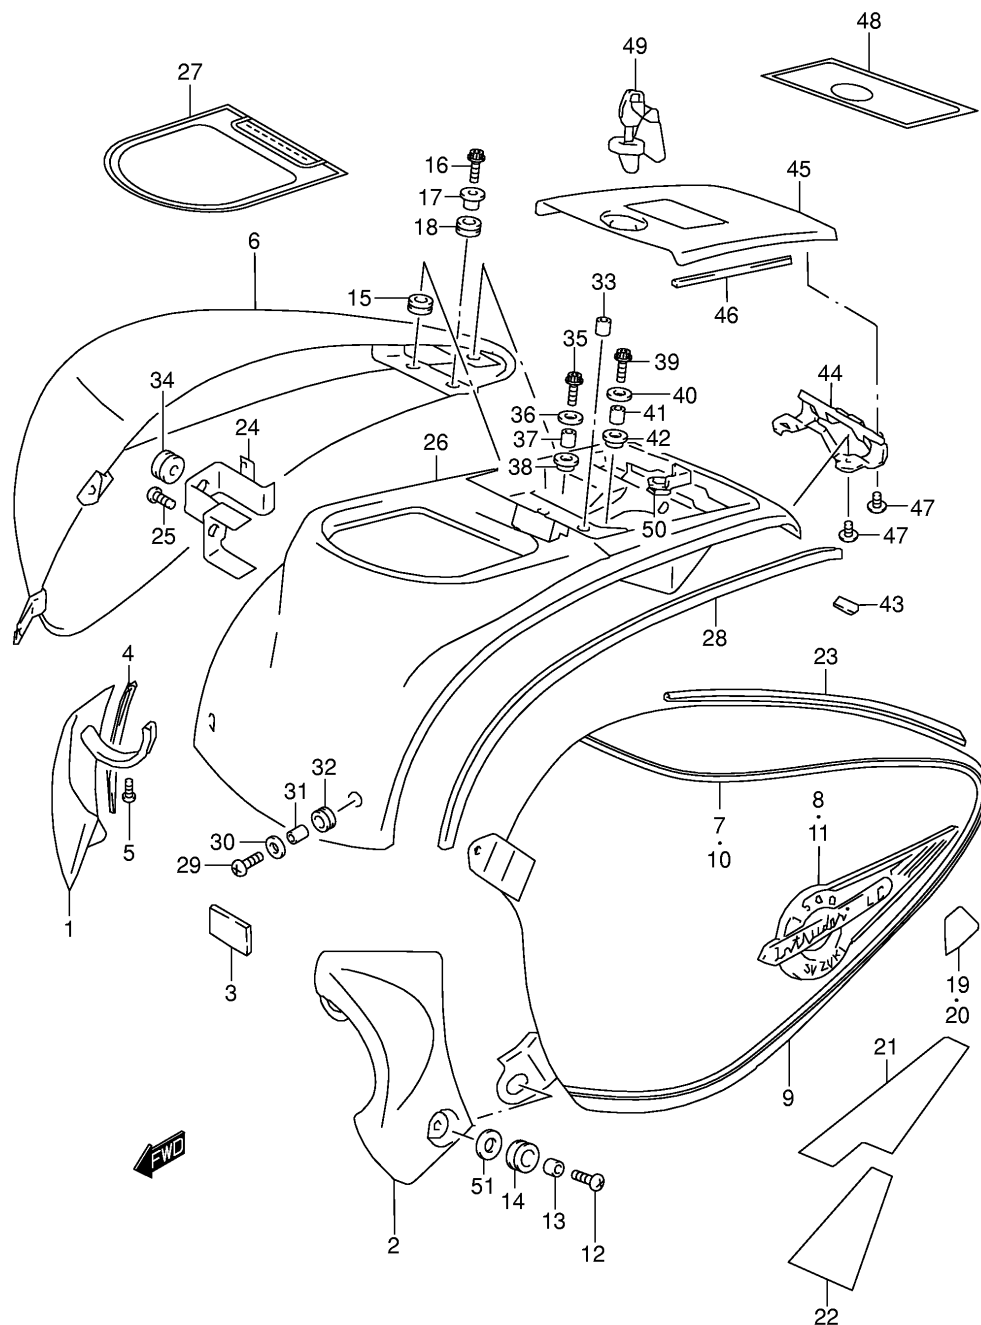 

Ref No	Part No	Description
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

 
FIG.41D

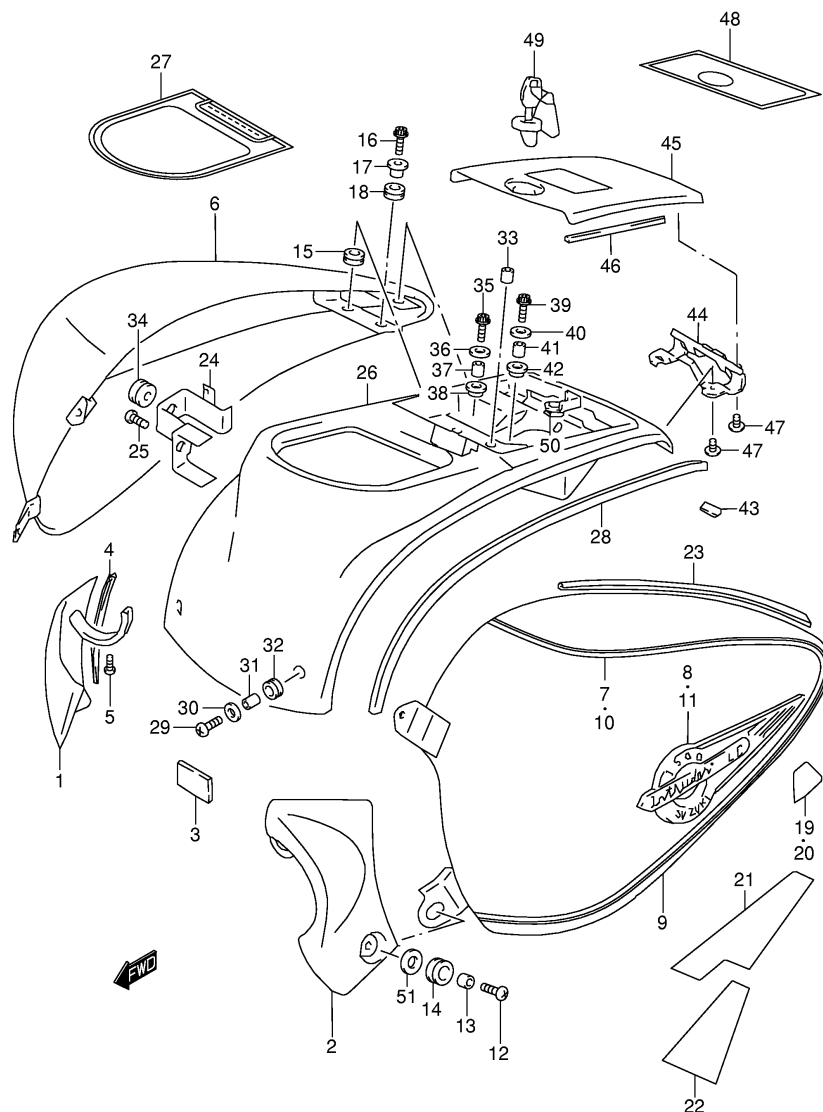

VL1500Y E02_041D
SIDE COVER


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F20-2AX	Cover Assy, Side Rh (black)
6	47800-10F20-JE2	Cover Assy, Side Rh
6	47800-10F20-JE3	Cover Assy, Side Rh
7	68135-10F20-FH5	• . Tape, Rh
7	68135-10F20-JE5	• . Tape, Rh
7	68135-10F20-JE4	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F20-2AX	Cover Assy, Side Lh (black)
9	47900-10F20-JE2	Cover Assy, Side Lh
9	47900-10F20-JE3	Cover Assy, Side Lh
10	68145-10F20-FH5	• . Tape, Lh
10	68145-10F20-JE5	• . Tape, Lh
10	68145-10F20-JE4	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet

 ש.ד.מ.ו

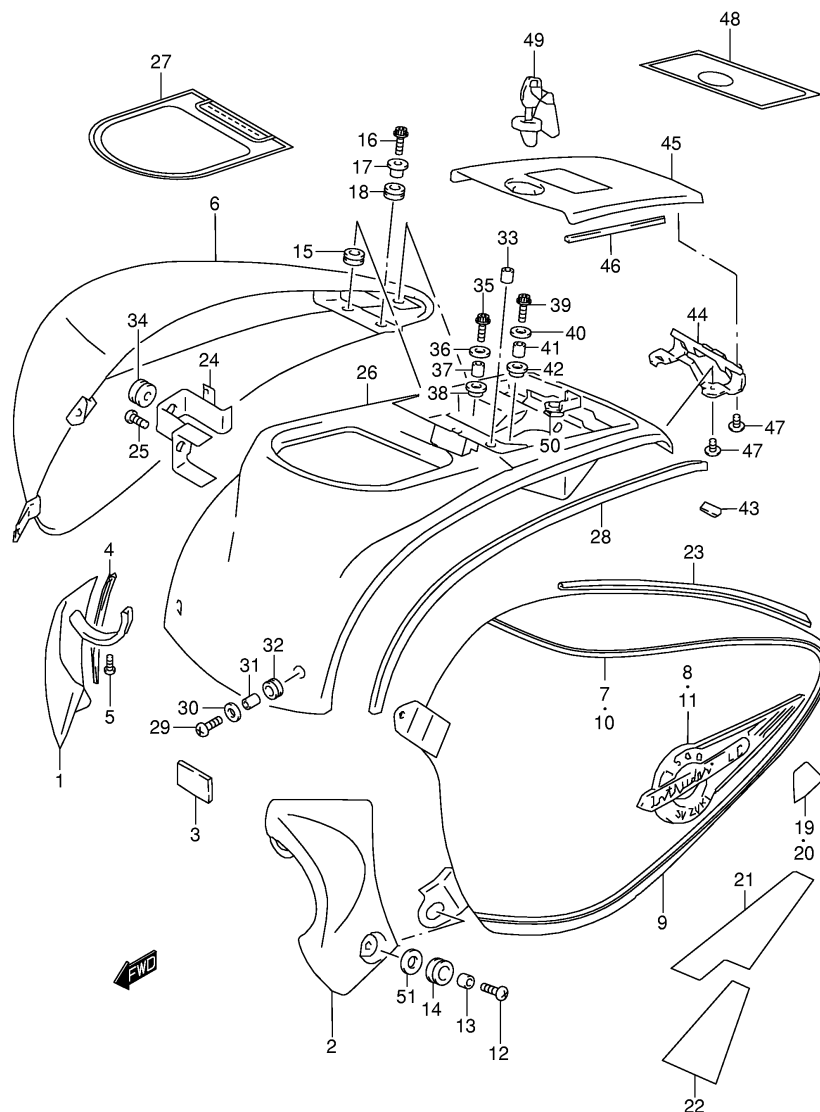


Ref No	Part No	Description
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

 
VL1500Y E02_041D
SIDE COVER

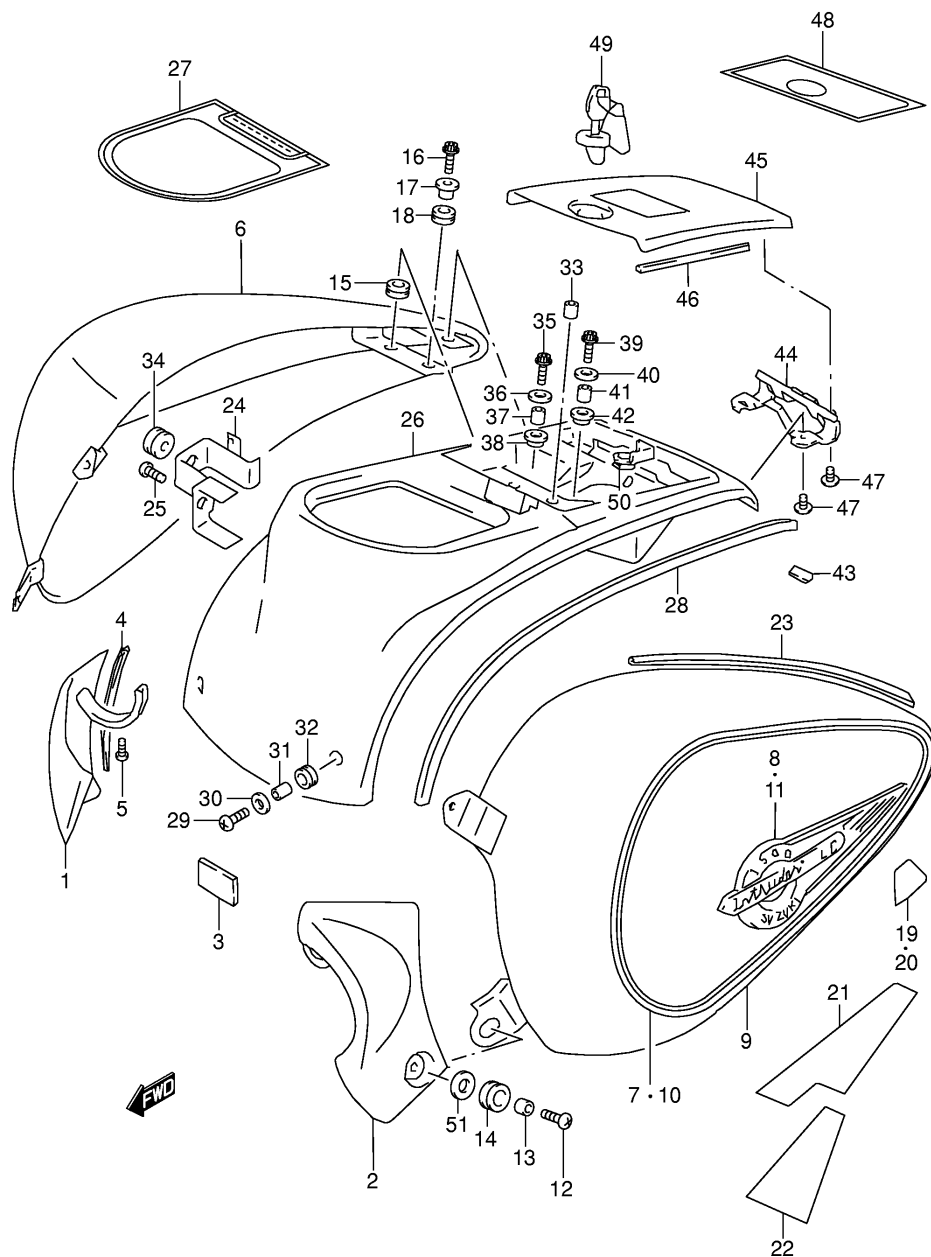


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F30-33J	Cover Assy, Side Rh (black)
6	47800-10F40-LA1	Cover Assy, Side Rh
6	47800-10F40-LT9	Cover Assy, Side Rh
7	68135-10F30-LW9	• . Tape, Rh
7	68135-10F40-LA1	• . Tape, Rh
7	68135-10F40-LT9	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F30-33J	Cover Assy, Side Lh (black)
9	47900-10F40-LA1	Cover Assy, Side Lh
9	47900-10F40-LT9	Cover Assy, Side Lh
10	68145-10F30-LW9	• . Tape, Lh
10	68145-10F40-LA1	• . Tape, Lh
10	68145-10F40-LT9	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet

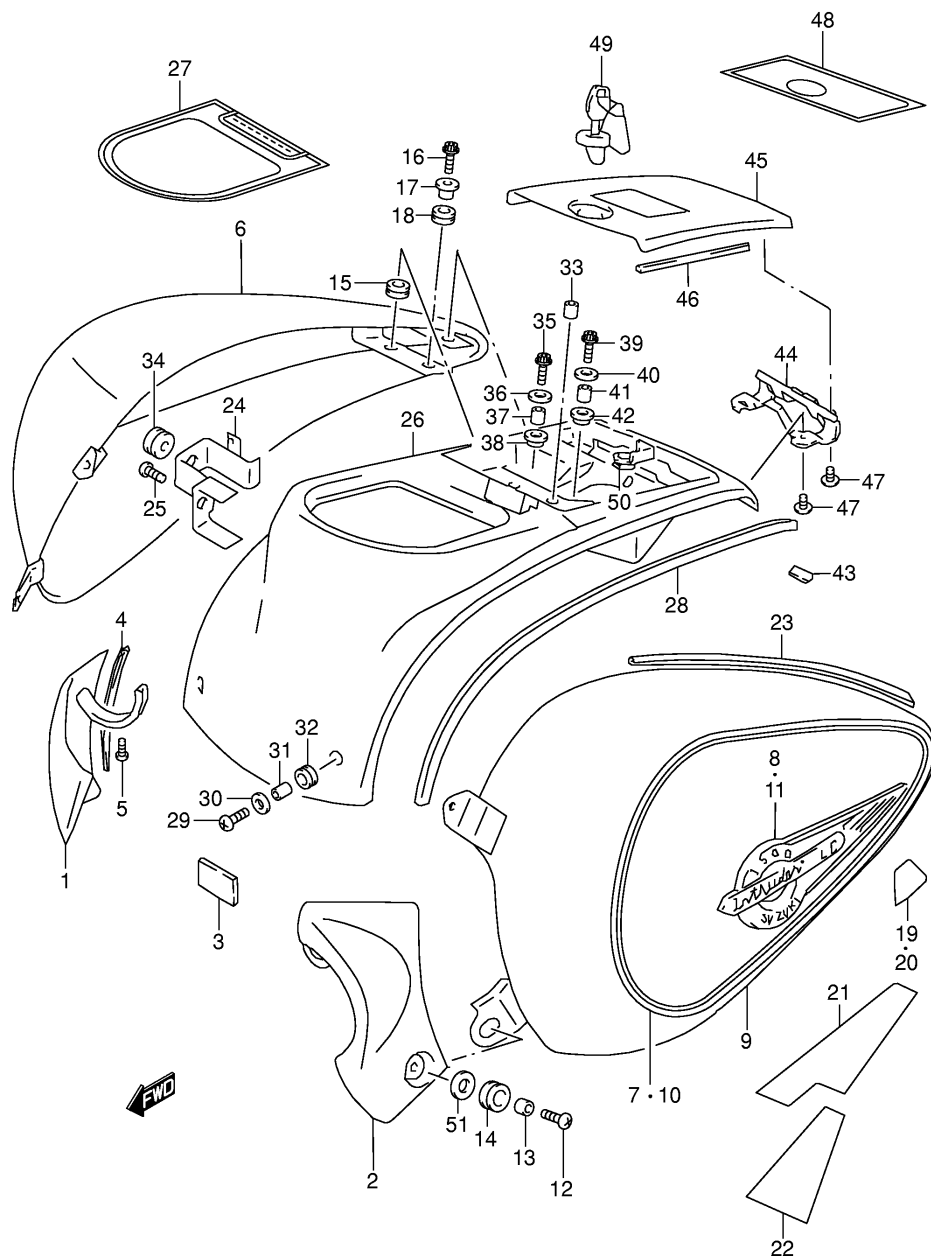 


Ref No	Part No	Description
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

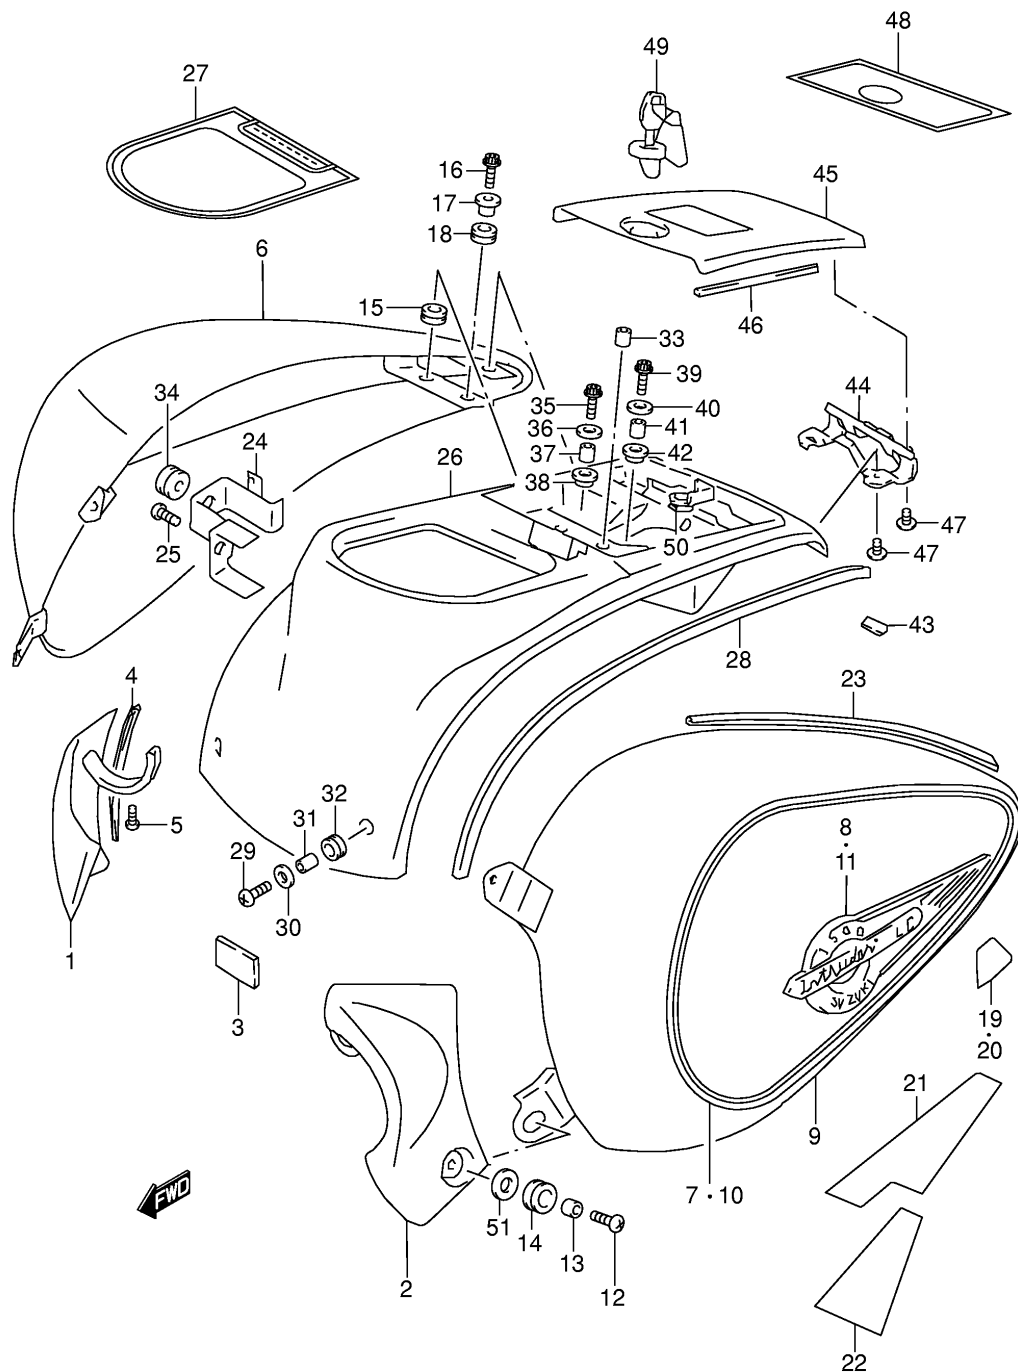 


Ref No	Part No	Description
1	47510-10F00	Cover, Frame Head Rh
2	47520-10F01	Cover, Frame Head Lh
3	47829-10F00	Cushion
4	47514-10F00	Molding
5	09139-06028	Screw
6	47800-10F30-YAY	Cover Assy, Side Rh (black)
6	47800-10F40-AAV	Cover Assy, Side Rh
6	47800-10F40-AAW	Cover Assy, Side Rh
7	68135-10F30-ADH	• . Tape, Rh
7	68135-10F40-ADJ	• . Tape, Rh
7	68135-10F40-ADC	• . Tape, Rh
8	68111-10F00	Emblem, Rh
9	47900-10F30-YAY	Cover Assy, Side Lh (black)
9	47900-10F40-AAV	Cover Assy, Side Lh
9	47900-10F40-AAW	Cover Assy, Side Lh
10	68145-10F30-ADH	• . Tape, Lh
10	68145-10F40-ADJ	• . Tape, Lh
10	68145-10F40-ADC	• . Tape, Lh
11	68121-10F00	Emblem, Lh
12	09139-06030	Screw
13	09180-06260	Spacer
14	09320-08021	Cushion
15	47822-10F00	Cushion, Outer
16	07120-06203	Bolt, Inner
17	47827-10F00	Washer
18	47826-10F00	Cushion
19	47838-10F00	Tape, Side Cover Upper Rh
20	47848-10F00	Tape, Side Cover Upper Lh
21	47835-10F00	Cushion, Side Upper Rh No.1
22	47836-10F00	Cushion, Side Upper Rh No.2
23	47837-10F00	Molding, Side Upper Lower
24	47850-10F00	Bracket, Side Cover Rh
25	01550-06163	Bolt
26	47821-10F00	Cover, Meter
27	68897-10F10	Tape, Meter Cover
28	47824-10F00	Molding
29	09139-06030	Screw, Front
30	09160-06036	Washer
31	09180-06256	Spacer
32	09320-08051	Cushion
33	09321-06013	Cushion, Lid
34	09321-10007	Cushion, Side
35	07120-06253	Bolt, Center
36	09160-06084	Washer
37	09180-06265	Spacer
38	47825-10F00	Cushion
39	07120-06163	Bolt, Rear
40	09160-06084	Washer
41	09180-06256	Spacer
42	09320-08051	Cushion
43	47829-10F00	Cushion, Rear
44	47380-10F00	Hinge, Fuel Lid
45	47811-10F00	Lid, Fuel Inlet

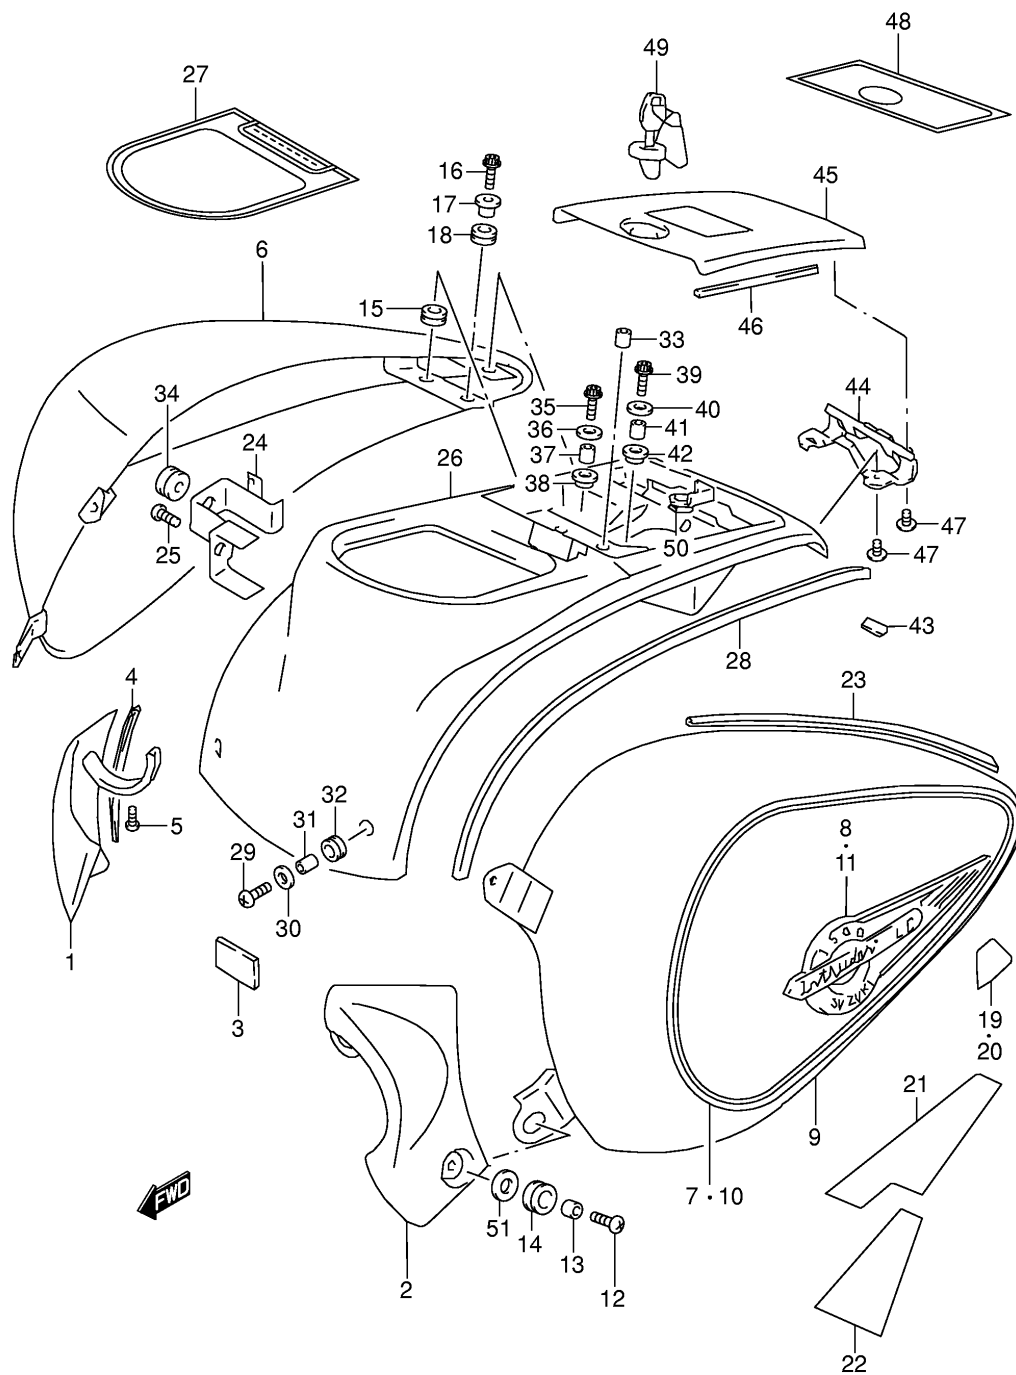 


Ref No	Part No	Description
46	47812-10F00	Cushion, Lid
47	02142-06123	Screw
48	68898-10F10	Tape, Fuel Lid
49	95700-07860	Lock Set, Fuel Lid
50	47828-10F00	Cushion, Inlet Cover Lh
51	08322-01063	Washer

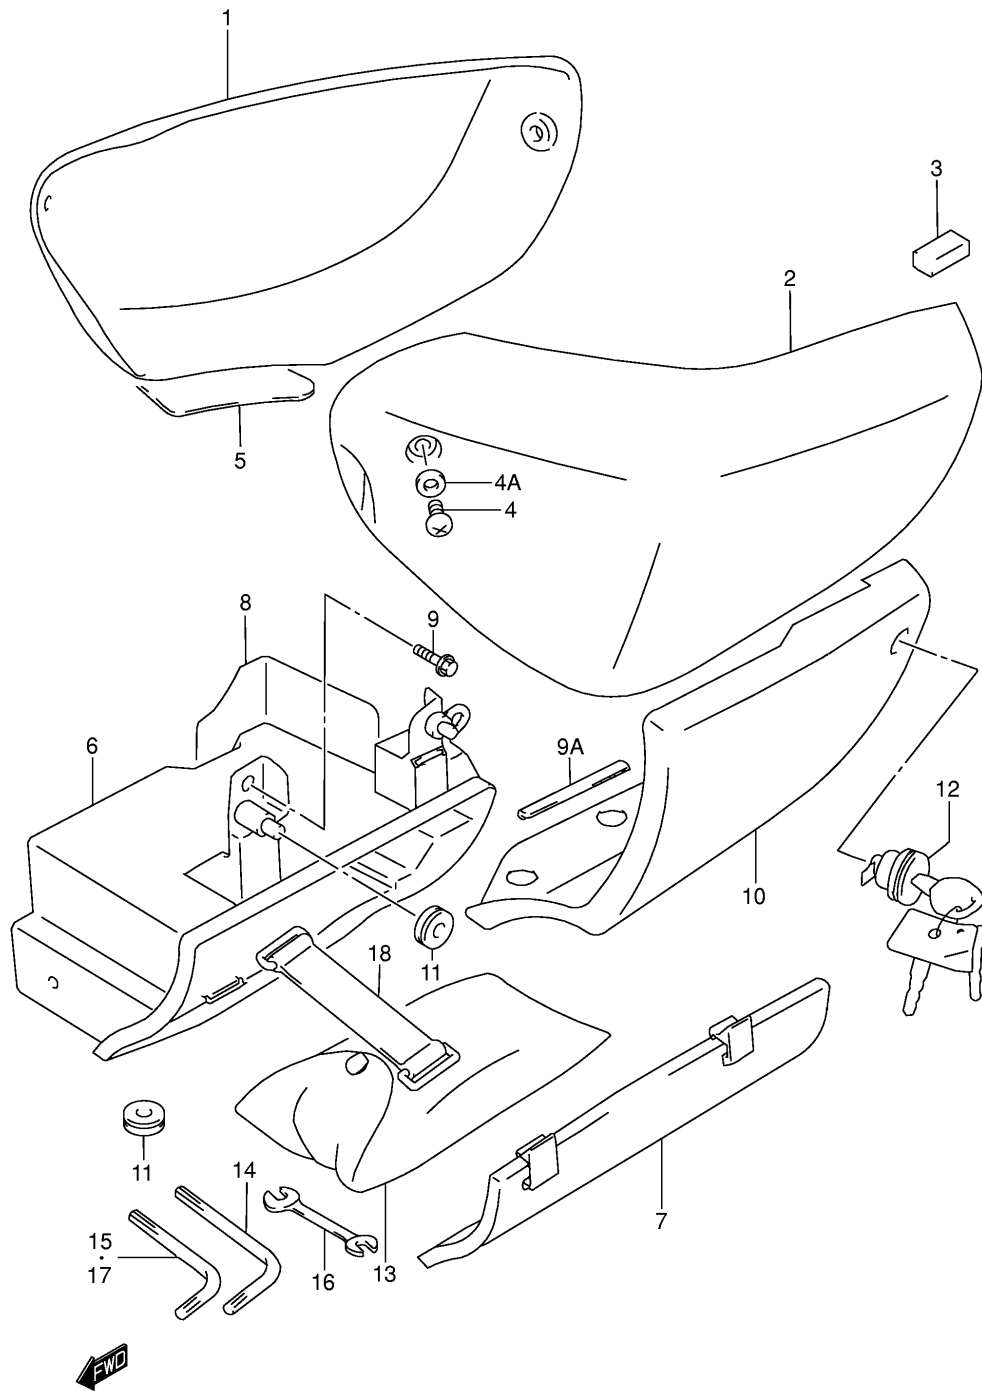 

Ref No	Part No	Description
1	47110-10F00-33J	Cover, Frame Rh (black)
1	47110-10F00-019	Cover, Frame Rh (black)
1	47110-10F00-Y4L	Cover, Frame Rh (yellow)
1	47110-10F00-Y7L	Cover, Frame Rh (black)
2	47210-10F00-33J	Cover, Frame Lh (black)
2	47210-10F00-019	Cover, Frame Lh (black)
2	47210-10F00-Y4L	Cover, Frame Lh (yellow)
2	47210-10F00-Y7L	Cover, Frame Lh (black)
3	47117-45000	Cushion
4	09139-06030	Screw
4a	09160-06094	Washer
5	47166-10F00	Shield, Frame Cover Rh
6	47431-10F00	Body, Tool Holder
7	47432-10F00	Cap, Tool Holder
8	47436-10F00	Shield, Body
9	09111-06066	Bolt
9a	47212-10F00	Molding, Lh
10	47440-10F00	Cover, Tool Holder
11	09320-08047	Cushion, Upper
12	95700-07860	Lock Set, Cover
13	09800-21016	Tool Assy
14	09816-00139	Hexagon Spanner, 12
15	09816-00103	Hexagon Spanner, 4
16	09813-00027	Spanner, 8x10
17	09816-00059	Hexagon Spanner, 5
18	09462-00067	Band, Tool

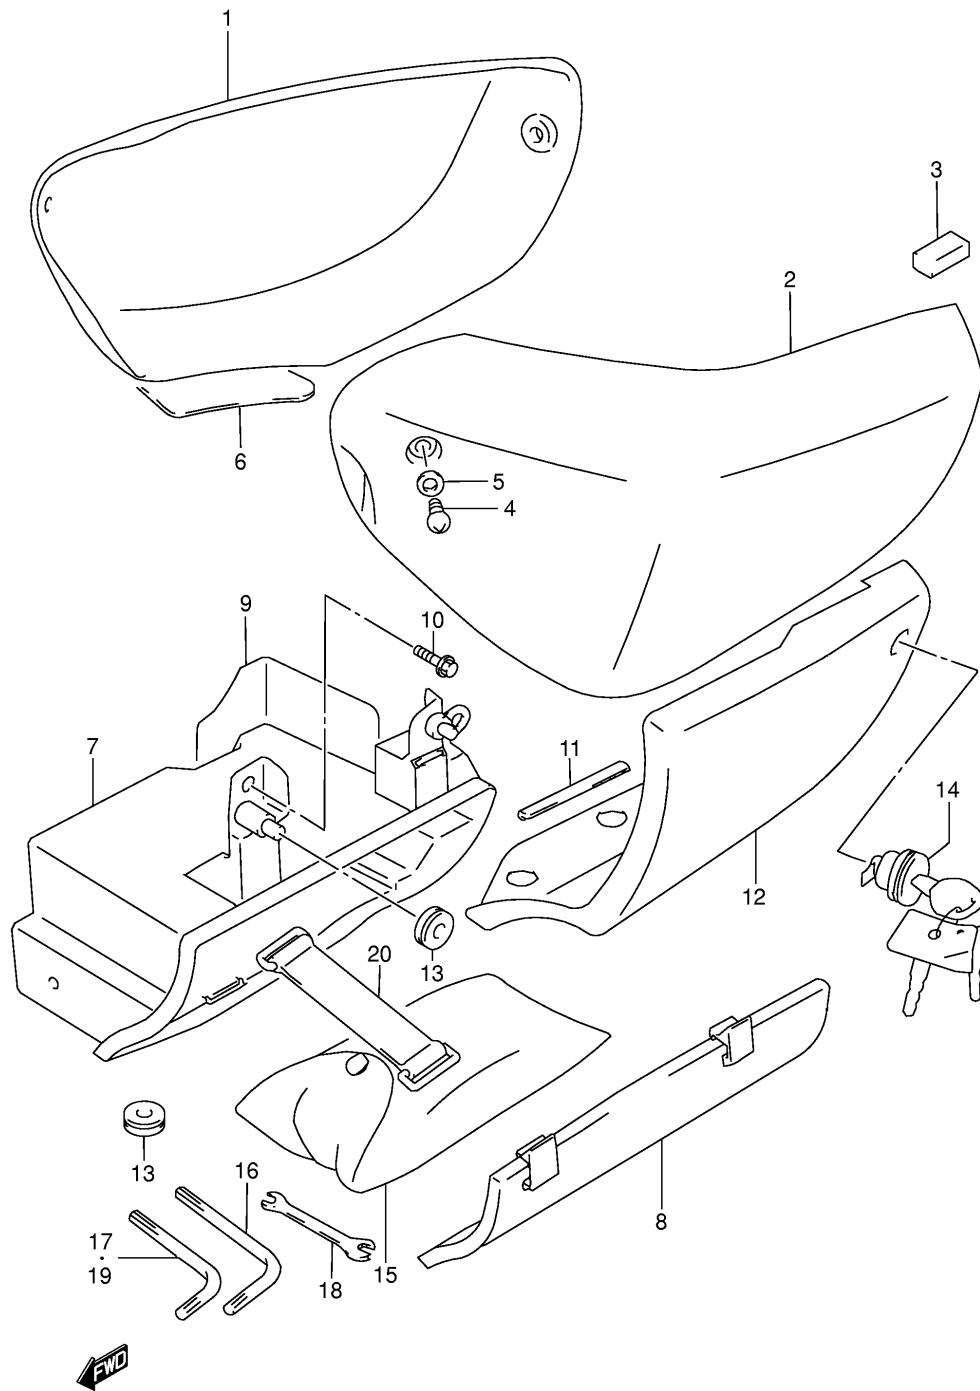 


Ref No	Part No	Description
1	47110-10F00-33J	Cover, Frame Rh (black)
1	47110-10F00-Y4L	Cover, Frame Rh (yellow)
1	47110-10F00-Y7G	Cover, Frame Rh (green)
1	47110-10F00-YE2	Cover, Frame Rh (maroon)
1	47110-10F00-1LF	Cover, Frame Rh (blue)
2	47210-10F00-33J	Cover, Frame Lh (black)
2	47210-10F00-Y4L	Cover, Frame Lh (yellow)
2	47210-10F00-Y7G	Cover, Frame Lh (green)
2	47210-10F00-YE2	Cover, Frame Lh (maroon)
2	47210-10F00-1LF	Cover, Frame Lh (blue)
3	47117-45000	Cushion
4	09139-06030	Screw
5	09160-06094	Washer
6	47166-10F00	Shield, Frame Cover Rh
7	47431-10F00	Body, Tool Holder
8	47432-10F00	Cap, Tool Holder
9	47436-10F00	Shield, Body
10	09113-06001	Bolt
11	47212-10F00	Molding, Lh
12	47440-10F00	Cover, Tool Holder
13	09320-08047	Cushion, Upper
14	95700-07860	Lock Set, Cover
15	09800-21016	Tool Assy
16	09816-00139	Hexagon Spanner, 12
17	09816-00103	Hexagon Spanner, 4
18	09813-00027	Spanner, 8x10
19	09816-00059	Hexagon Spanner, 5
20	09462-00067	Band, Tool

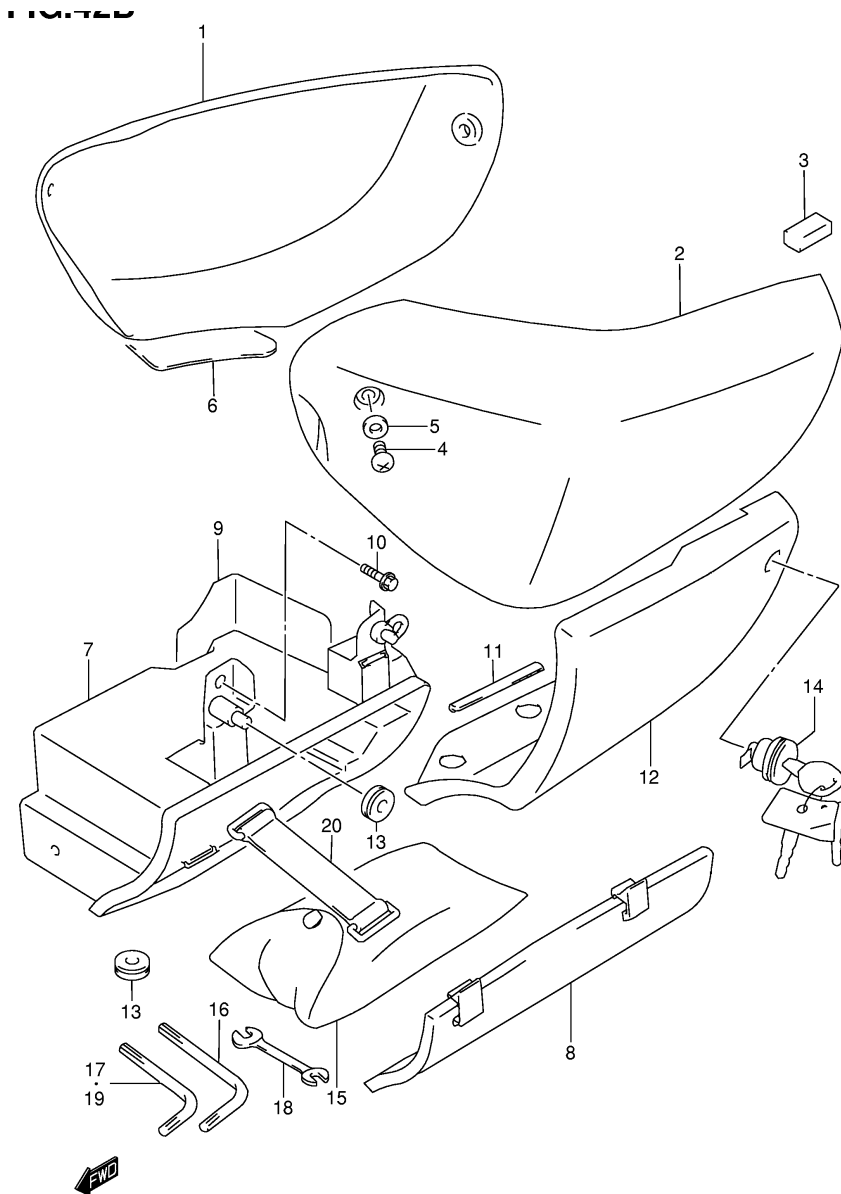 


Ref No	Part No	Description
1	47110-10F00-33J	Cover, Frame Rh (black)
1	47110-10F00-1LF	Cover, Frame Rh (blue)
1	47110-10F00-YM6	Cover, Frame Rh (silver)
1	47110-10F00-YU8	Cover, Frame Rh (gray)
1	47110-10F00-Y7G	Cover, Frame Rh (green)
2	47210-10F00-33J	Cover, Frame Lh (black)
2	47210-10F00-1LF	Cover, Frame Lh (blue)
2	47210-10F00-YM6	Cover, Frame Lh (silver)
2	47210-10F00-YU8	Cover, Frame Lh (gray)
2	47210-10F00-Y7G	Cover, Frame Lh (green)
3	47117-45000	Cushion
4	09139-06030	Screw
5	09160-06094	Washer
6	47166-10F00	Shield, Frame Cover Rh
7	47431-10F00	Body, Tool Holder
8	47432-10F00	Cap, Tool Holder
9	47436-10F00	Shield, Body
10	09113-06001	Bolt
11	47212-10F00	Molding, Lh
12	47440-10F00	Cover, Tool Holder
13	09320-08047	Cushion, Upper
14	95700-07860	Lock Set, Cover
15	09800-21016	Tool Assy
16	09816-00139	Hexagon Spanner, 12
17	09816-00103	Hexagon Spanner, 4
18	09813-00027	Spanner, 8x10
19	09816-00059	Hexagon Spanner, 5
20	09462-00067	Band, Tool

 
VL1500Y E02_042B
FRAME COVER

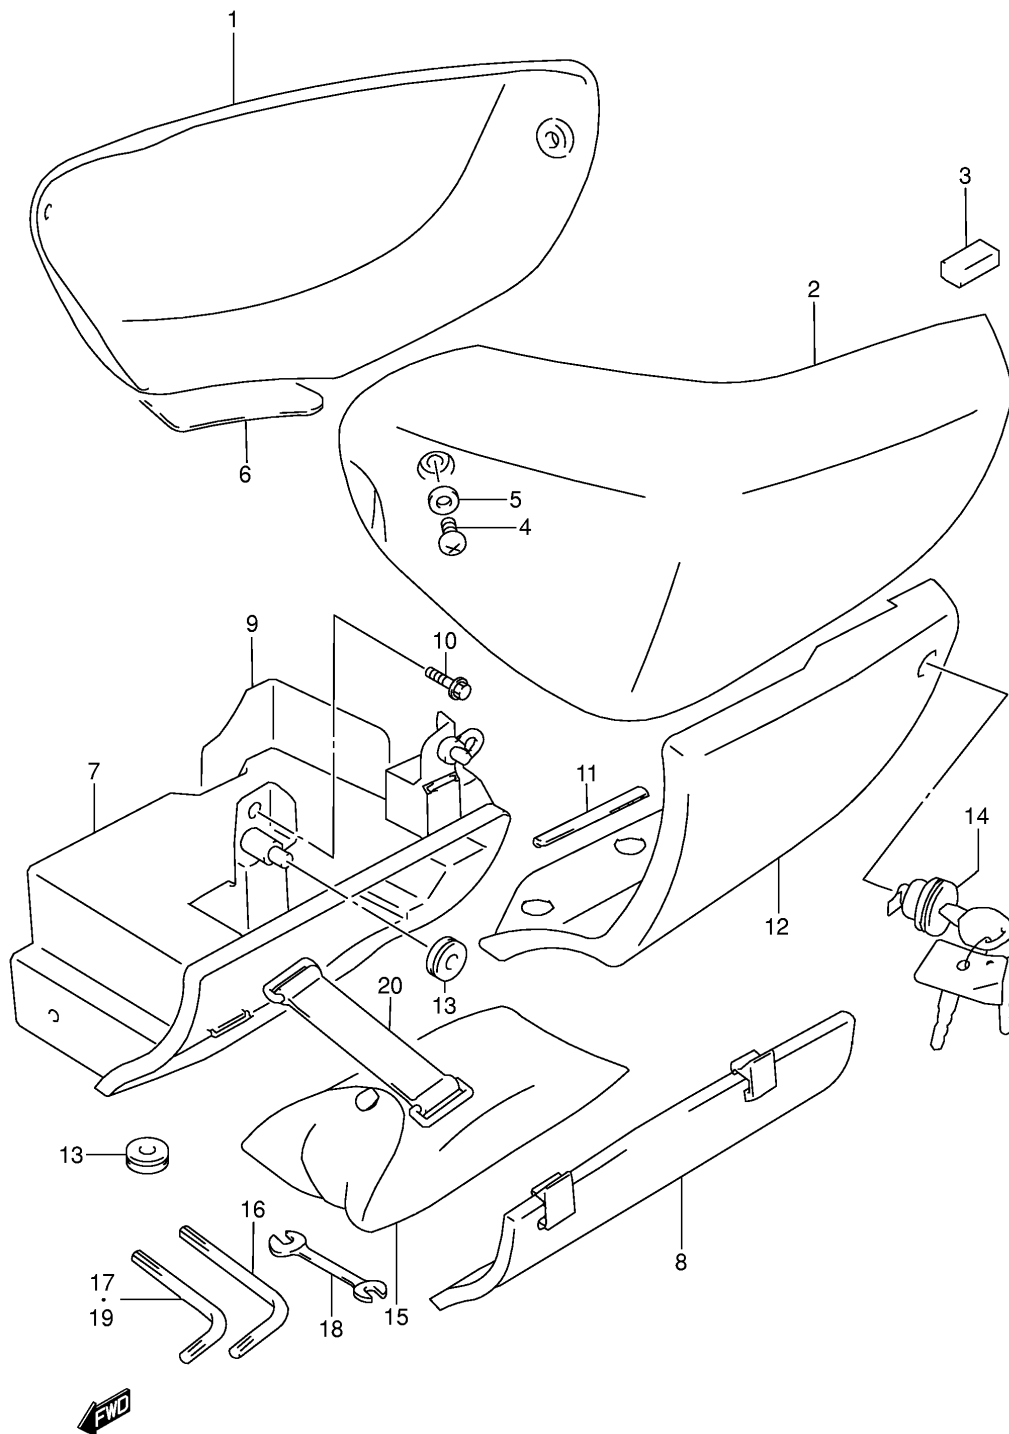


Ref No	Part No	Description
1	47110-10F00-YAY	Cover, Frame Rh (black)
1	47110-10F00-YV2	Cover, Frame Rh (silver)
1	47110-10F00-YAR	Cover, Frame Rh (blue)
2	47210-10F00-YAY	Cover, Frame Lh (black)
2	47210-10F00-YV2	Cover, Frame Lh (silver)
2	47210-10F00-YAR	Cover, Frame Lh (gray)
3	47117-45000	Cushion
4	09139-06030	Screw
5	09160-06094	Washer
6	47166-10F00	Shield, Frame Cover Rh
7	47431-10F00	Body, Tool Holder
8	47432-10F00	Cap, Tool Holder
9	47436-10F00	Shield, Body
10	09113-06001	Bolt
11	47212-10F00	Molding, Lh
12	47440-10F00	Cover, Tool Holder
13	09320-08047	Cushion, Upper
14	95700-07860	Lock Set, Cover
15	09800-21016	Tool Assy
16	09816-00139	Hexagon Spanner, 12
17	09816-00103	Hexagon Spanner, 4
18	09813-00027	Spanner, 8x10
19	09816-00059	Hexagon Spanner, 5
20	09462-00067	Band, Tool

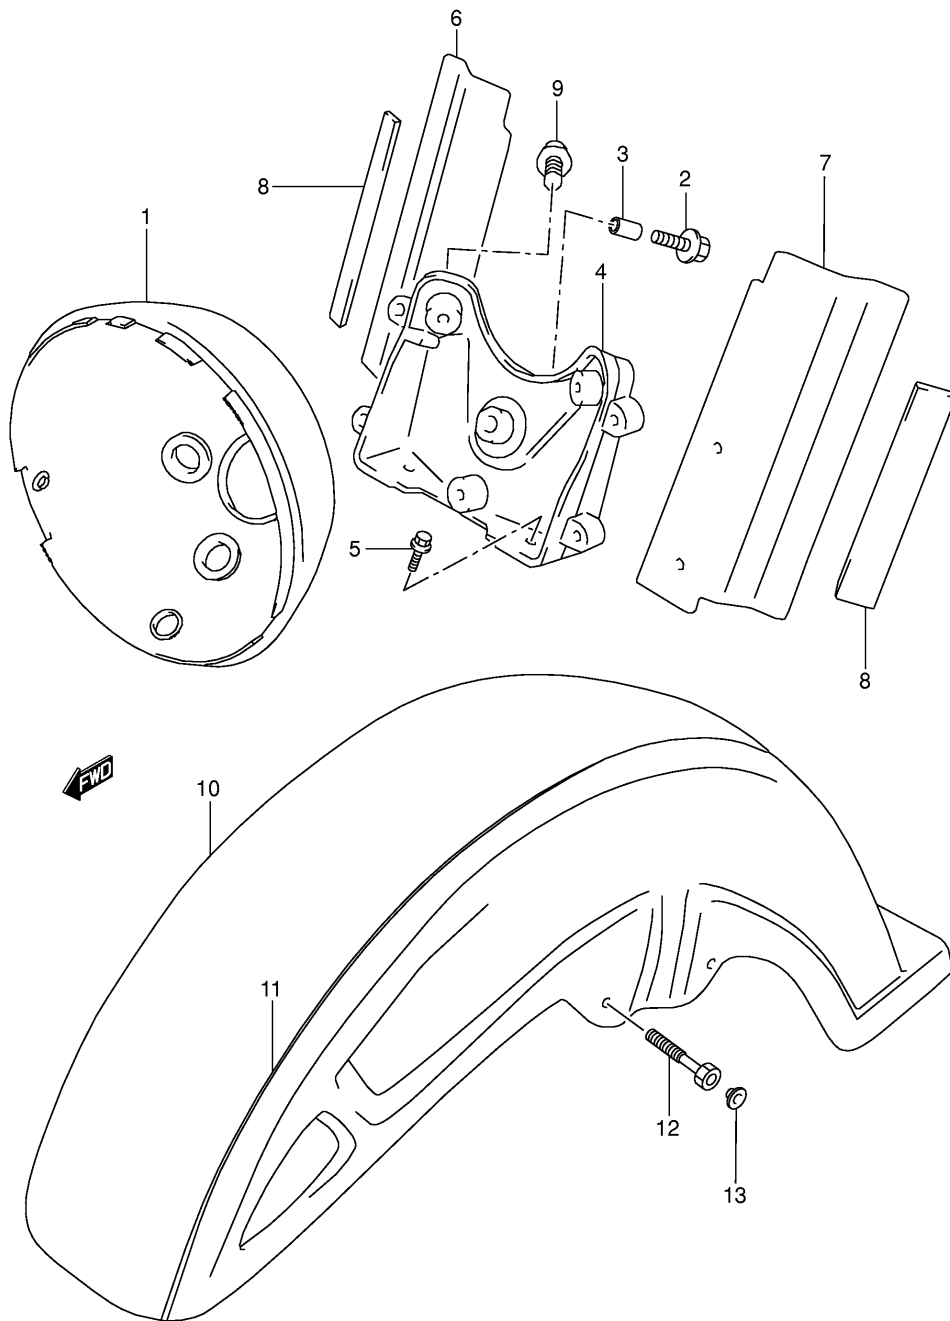 

Ref No	Part No	Description
1	51810-10F00	Housing, Headlamp
2	09116-06147	Bolt
3	09180-06076	Spacer
4	51850-10F00	Bracket
5	01550-06163	Bolt
6	51871-10F00	Plate, Bracket Rh
7	51881-10F00	Plate, Bracket Lh
8	33651-37000	Cushion
9	09139-06027	Screw
10	53110-10F00-E6M	Fender, Front
10	53110-10F00-K7E	Fender, Front
10	53110-10F00-M4P	Fender, Front
10	53110-10F00-M4R	Fender, Front
11	68150-10F00-K7W	• . Tape Set
11	68150-10F00-K7Y	• . Tape Set
11	68150-10F00-K8A	• . Tape Set
11	68150-10F00-K8B	• . Tape Set
11	68150-10F00-M5M	• . Tape Set
11	68150-10F00-M5N	• . Tape Set
12	07130-08457	Bolt
13	09250-06011	Cap

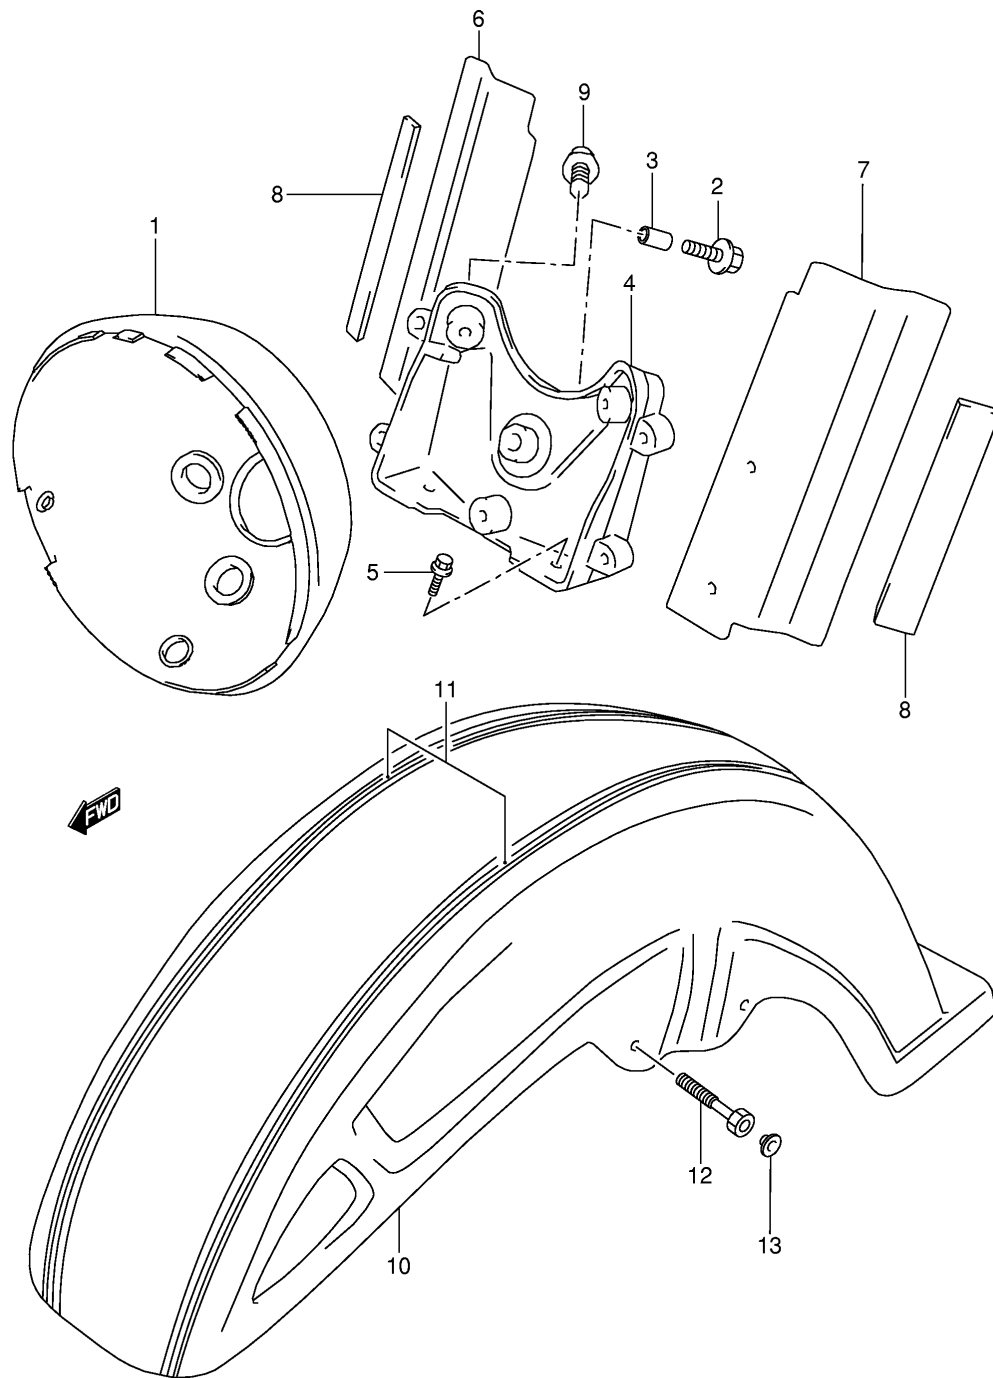 


Ref No	Part No	Description
1	51810-10F00	Housing, Headlamp
2	09116-06147	Bolt
3	09180-06076	Spacer
4	51850-10F01	Bracket
5	01550-06163	Bolt
6	51871-10F00	Plate, Bracket Rh
7	51881-10F00	Plate, Bracket Lh
8	33651-37000	Cushion
9	09139-06027	Screw
10	53110-10F10-33J	Fender, Front (black)
11	68150-10F00-BU8	• . Tape Set
12	07130-08457	Bolt
13	09250-06011	Cap

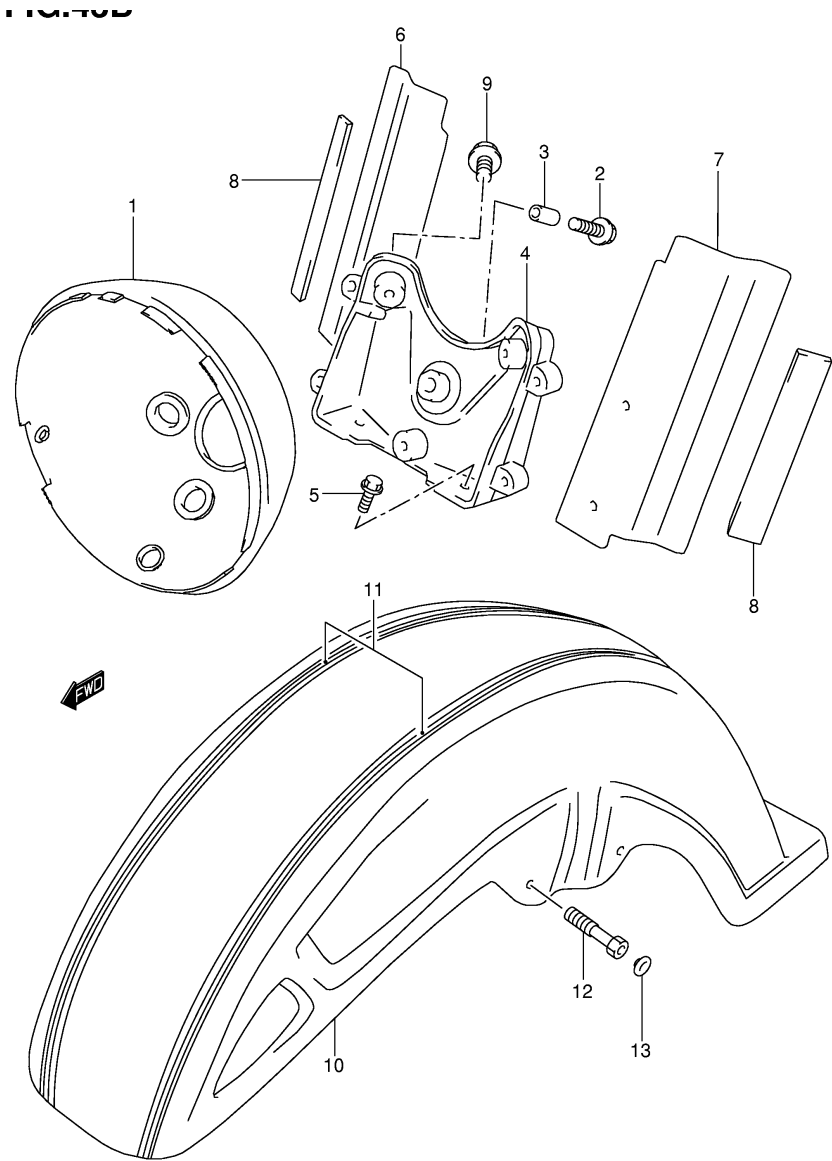 


Ref No	Part No	Description
1	51810-10F00	Housing, Headlamp
2	09116-06147	Bolt
3	09180-06076	Spacer
4	51850-10F01	Bracket
5	01550-06163	Bolt
6	51871-10F00	Plate, Bracket Rh
7	51881-10F00	Plate, Bracket Lh
8	33651-37000	Cushion
9	09139-06027	Screw
10	53110-10F20-2AX	Fender, Front (black)
10	53110-10F20-JE2	Fender, Front
10	53110-10F20-JE3	Fender, Front
11	68150-10F00-FH5	• . Tape Set
11	68150-10F00-JE5	• . Tape Set
11	68150-10F00-JE4	• . Tape Set
12	07130-08407	Bolt
13	09250-06011	Cap


 
VL1500Y E02_043B
FRONT FENDER

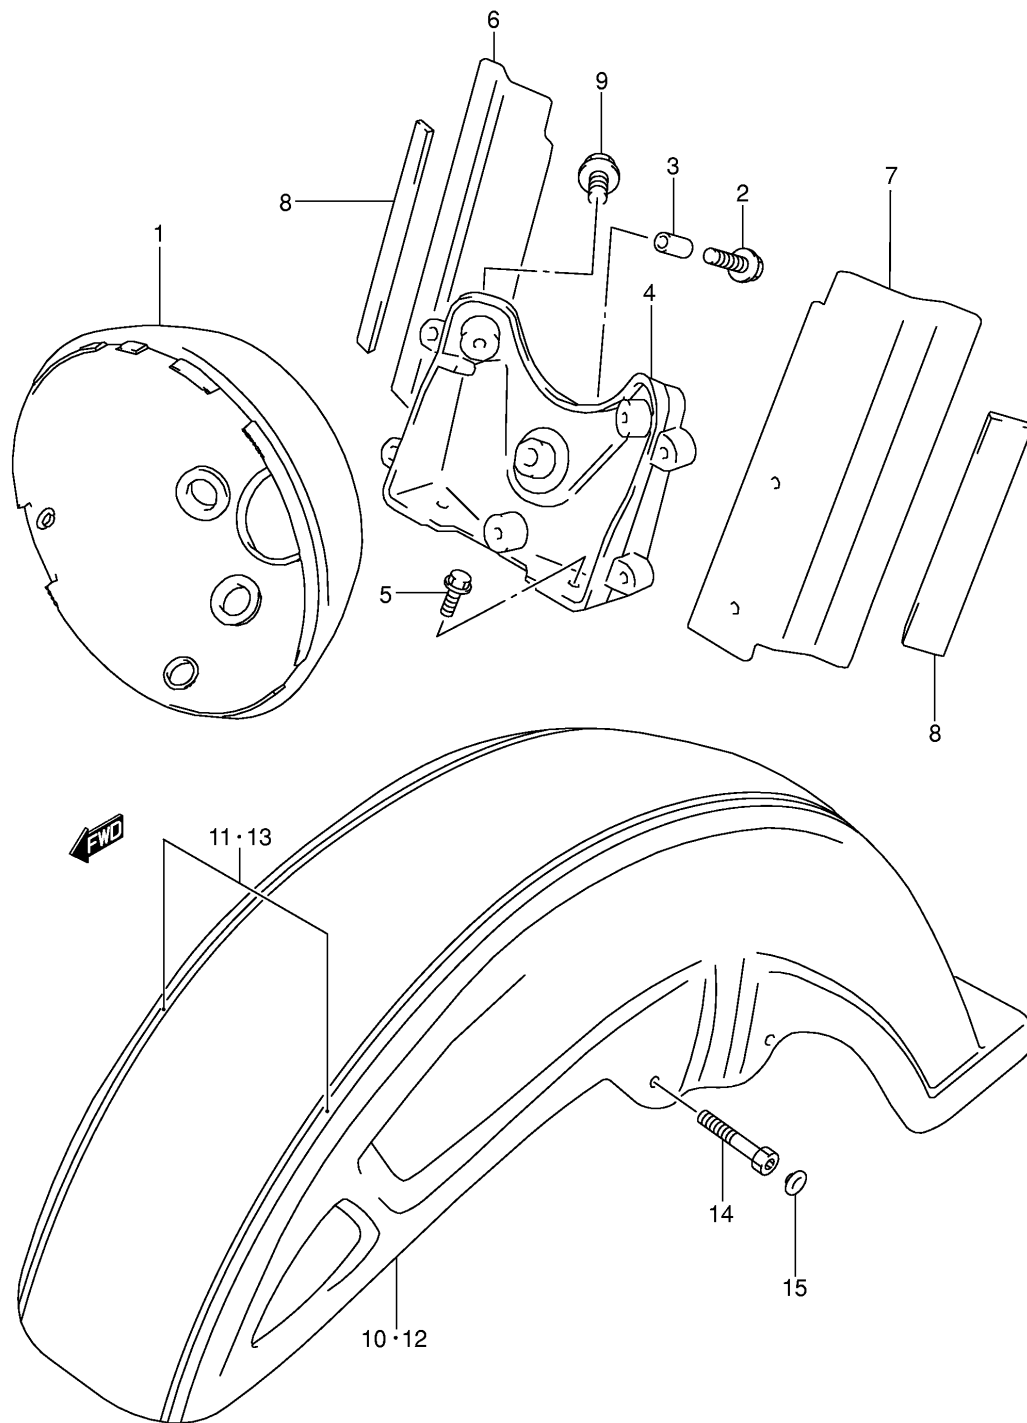


Ref No	Part No	Description
1	51810-10F00	Housing, Headlamp
2	09116-06147	Bolt
3	09180-06076	Spacer
4	51850-10F01	Bracket
5	01550-06163	Bolt
6	51871-10F00	Plate, Bracket Rh
7	51881-10F00	Plate, Bracket Lh
8	33651-37000	Cushion
9	09139-06027	Screw
14	07130-08407	Bolt
15	09250-06011	Cap

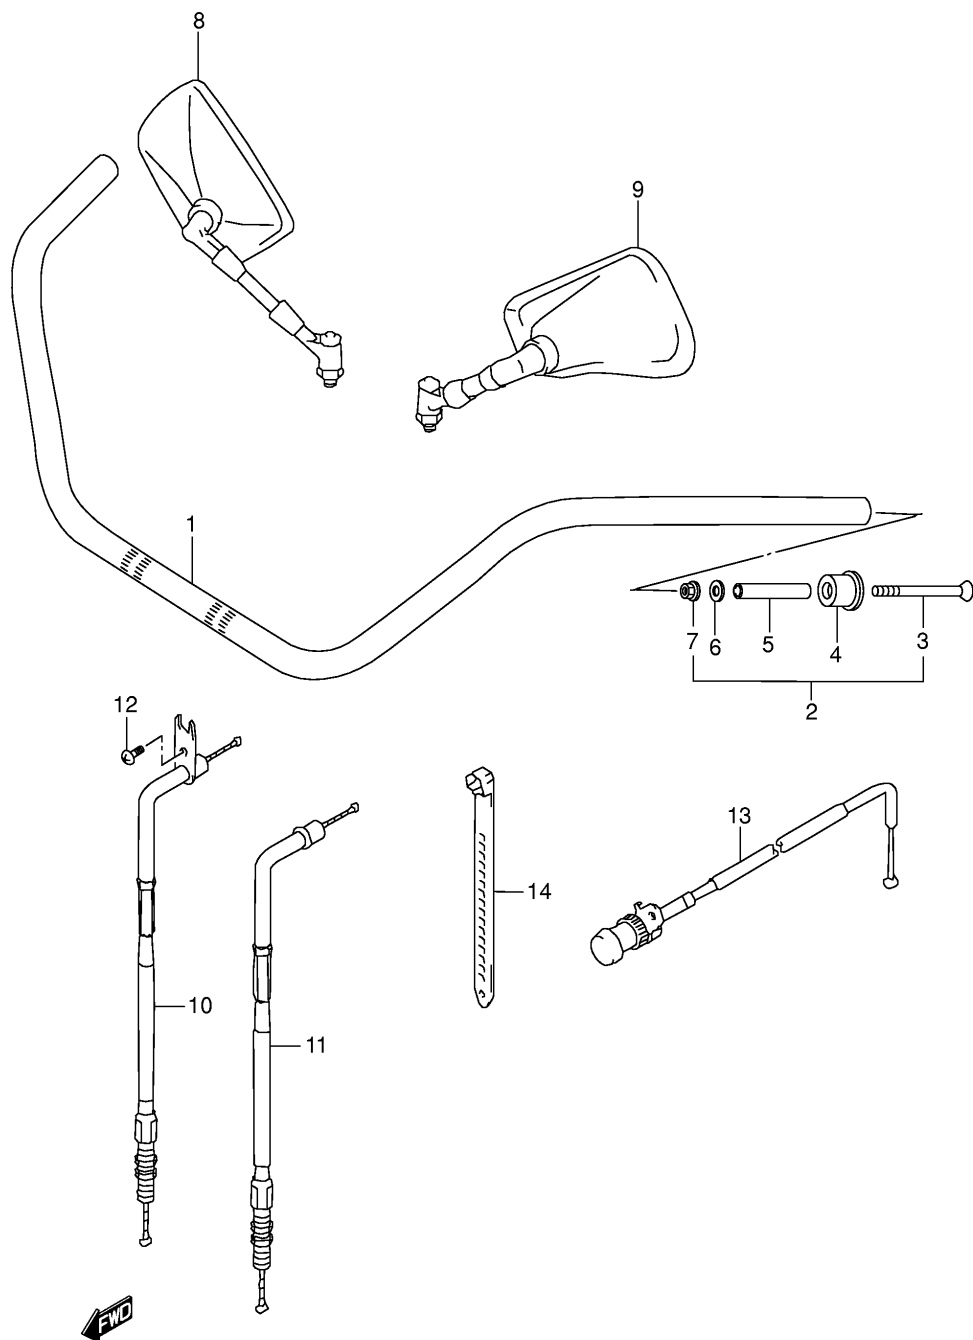 

Ref No	Part No	Description
1	56111-10F00	Handlebar
2	56200-10860	Balancer Set, Handlebar
3	09127-06017	• Screw
4	56272-26D01	• Expander, Outer
5	56276-09D00	• Spacer
6	09160-06013	• Washer
7	09159-06024	• Nut
8	56500-03F10	Mirror Assy, Rear View Rh
9	56600-03F10	Mirror Assy, Rear View Lh
10	58300-10F00	Cable Assy, Throttle No.1
11	58300-10F10	Cable Assy, Throttle No.2
12	02142-05087	Screw
13	58400-10F00	Cable Assy, Starter
14	09407-14403	Clamp

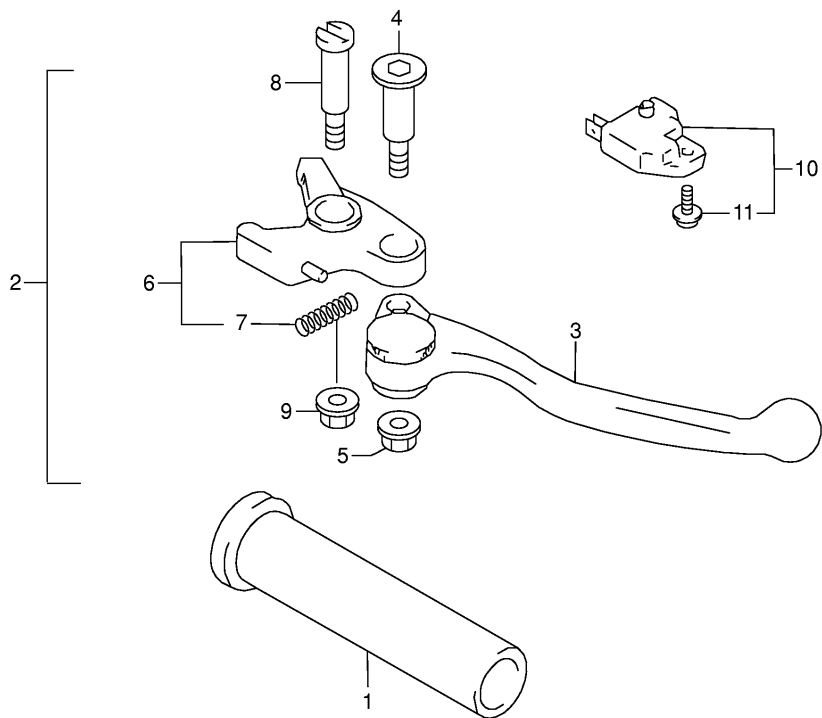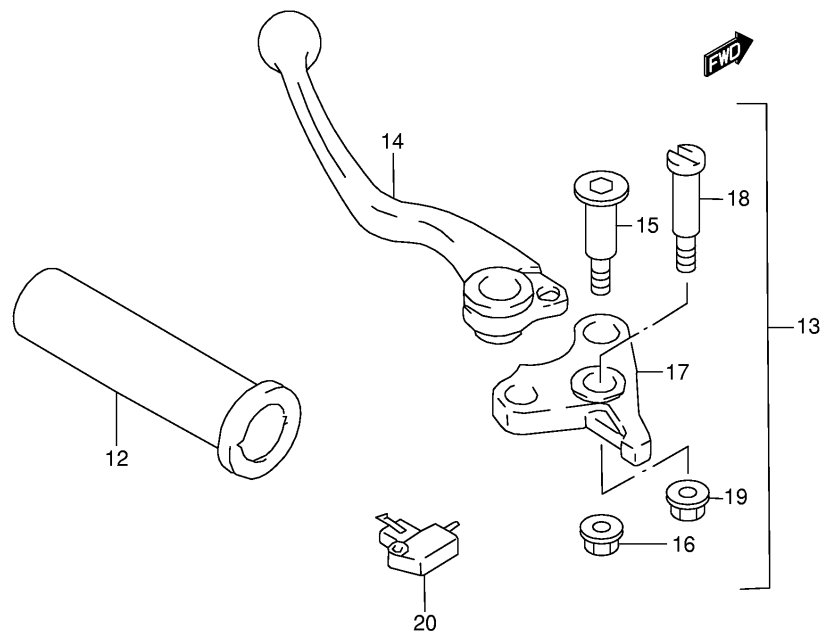  


Ref No	Part No	Description
1	57110-26D00	Grip, Throttle
2	57300-40C20	Lever Assy, Brake
3	57420-32C00	• . Lever, Adjuster
4	57437-32C01	• . Bolt, Lever
5	08319-31063	• . Nut
6	57430-40C10	• . Knocker
7	57438-32C00	• . Spring
8	57431-17C00	• . Bolt, Pivot
9	08316-10063	• . Nut
10	57460-17C00	Switch Assy, Stop
11	57465-17C00	• . Screw
12	57210-26D00	Grip, Lh
13	57500-10F00	Lever Assy, Clutch
14	57620-10F00	• . Lever, Clutch
15	57437-32C01	• . Bolt, Lever
16	08319-31063	• . Nut
17	57430-10F00	• . Knocker
18	57431-17C00	• . Bolt, Pivot
19	08316-10063	• . Nut
20	57560-10F00	Switch Assy, Clutch

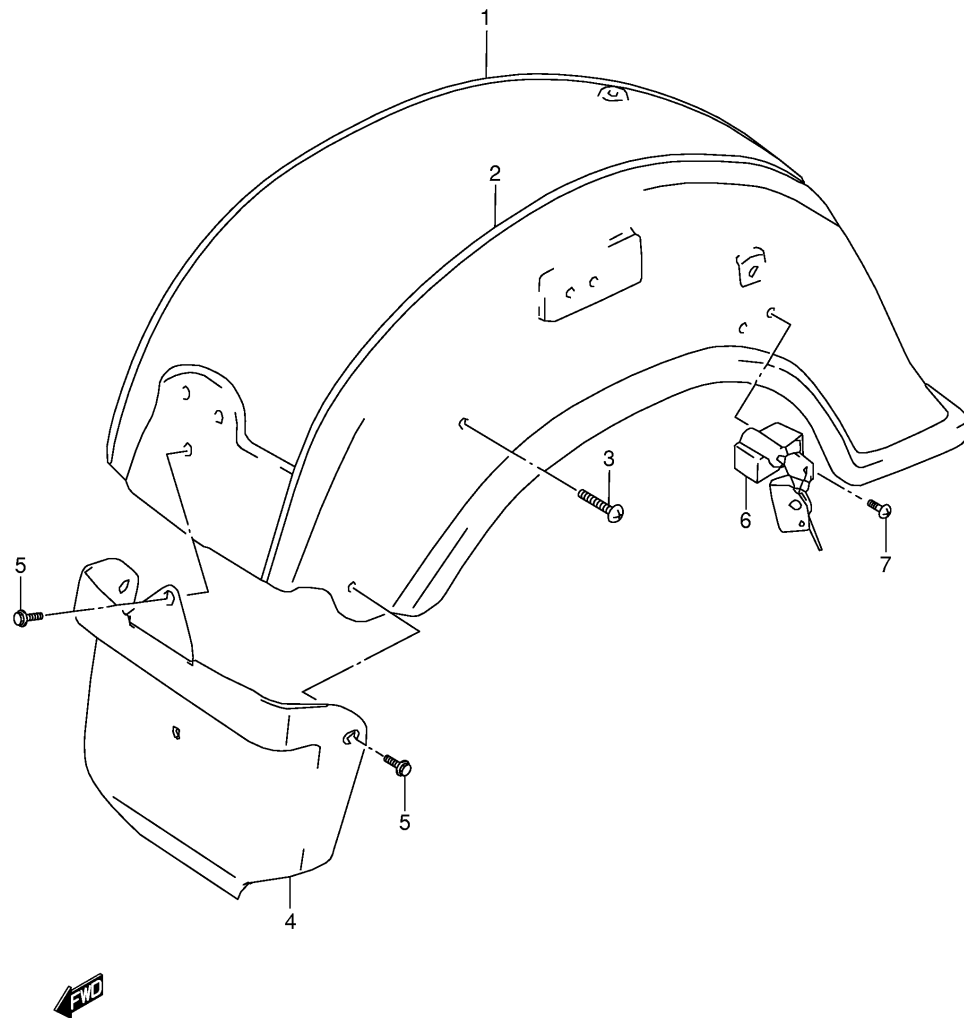 



Ref No	Part No	Description
1	63110-10F02-E6M	Fender, Rear
1	63110-10F02-K7E	Fender, Rear
1	63110-10F02-M4P	Fender, Rear
1	63110-10F02-M4R	Fender, Rear
2	68170-10F00-K7W	• . Tape Set
2	68170-10F00-K7Y	• . Tape Set
2	68170-10F00-K8A	• . Tape Set
2	68170-10F00-K8B	• . Tape Set
2	68170-10F00-M5M	• . Tape Set
2	68170-10F00-M5N	• . Tape Set
3	63161-10F00	Bolt
4	63411-10F01	Mud Guard, Front
5	09111-06066	Bolt
6	95700-10840	Lock Set, Helmet
7	09139-06089	Screw

Ref No	Part No	Description
2	68170-10F00-FH5	• . Tape Set
3a	63131-10F00	Tape, Rear Fender
4	63411-10F01	Mud Guard, Front
5	09113-06001	Bolt
6	95700-10840	Lock Set, Helmet
7	09139-06089	Screw

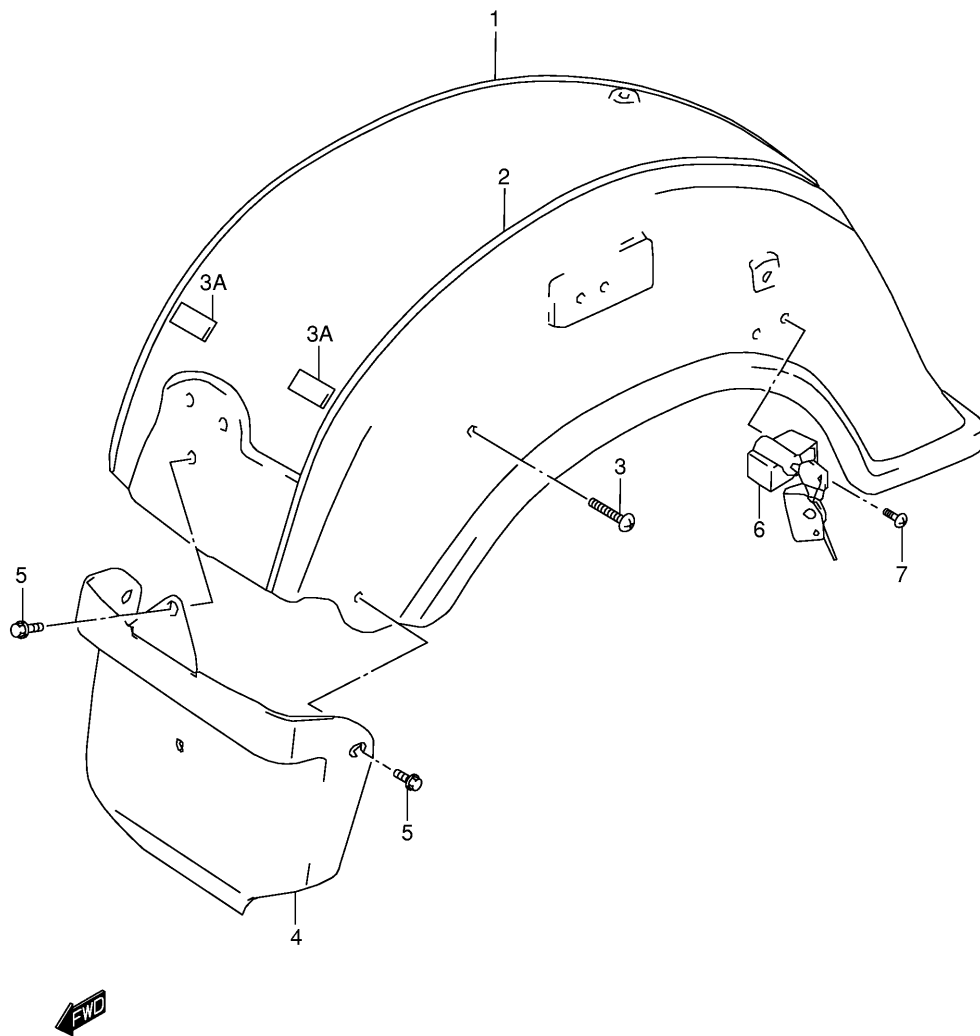 


Ref No	Part No	Description
6	09106-08156	Bolt
7	63131-10F00	Tape, Rear Fender
8	63411-10F01	Mud Guard, Front
9	09113-06001	Bolt
10	95700-10840	Lock Set, Helmet
11	09139-06089	Screw

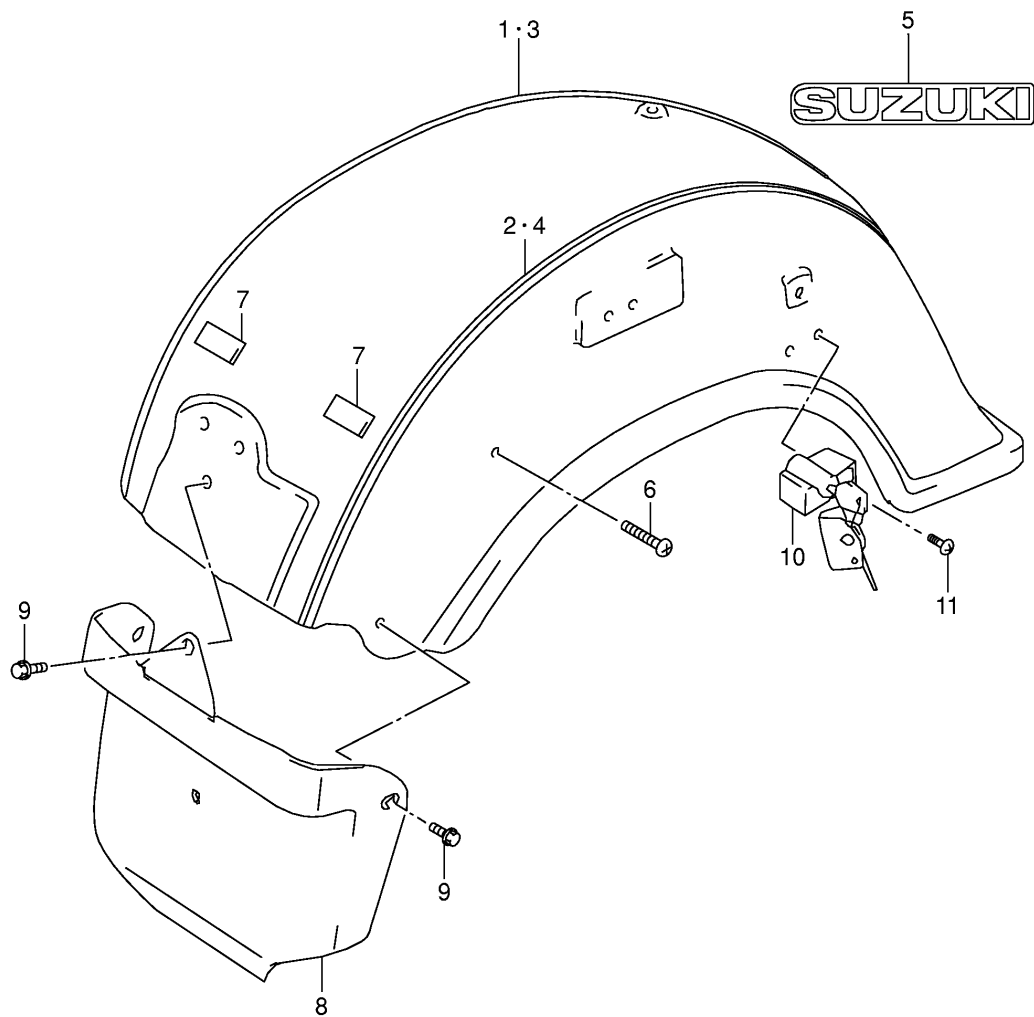 

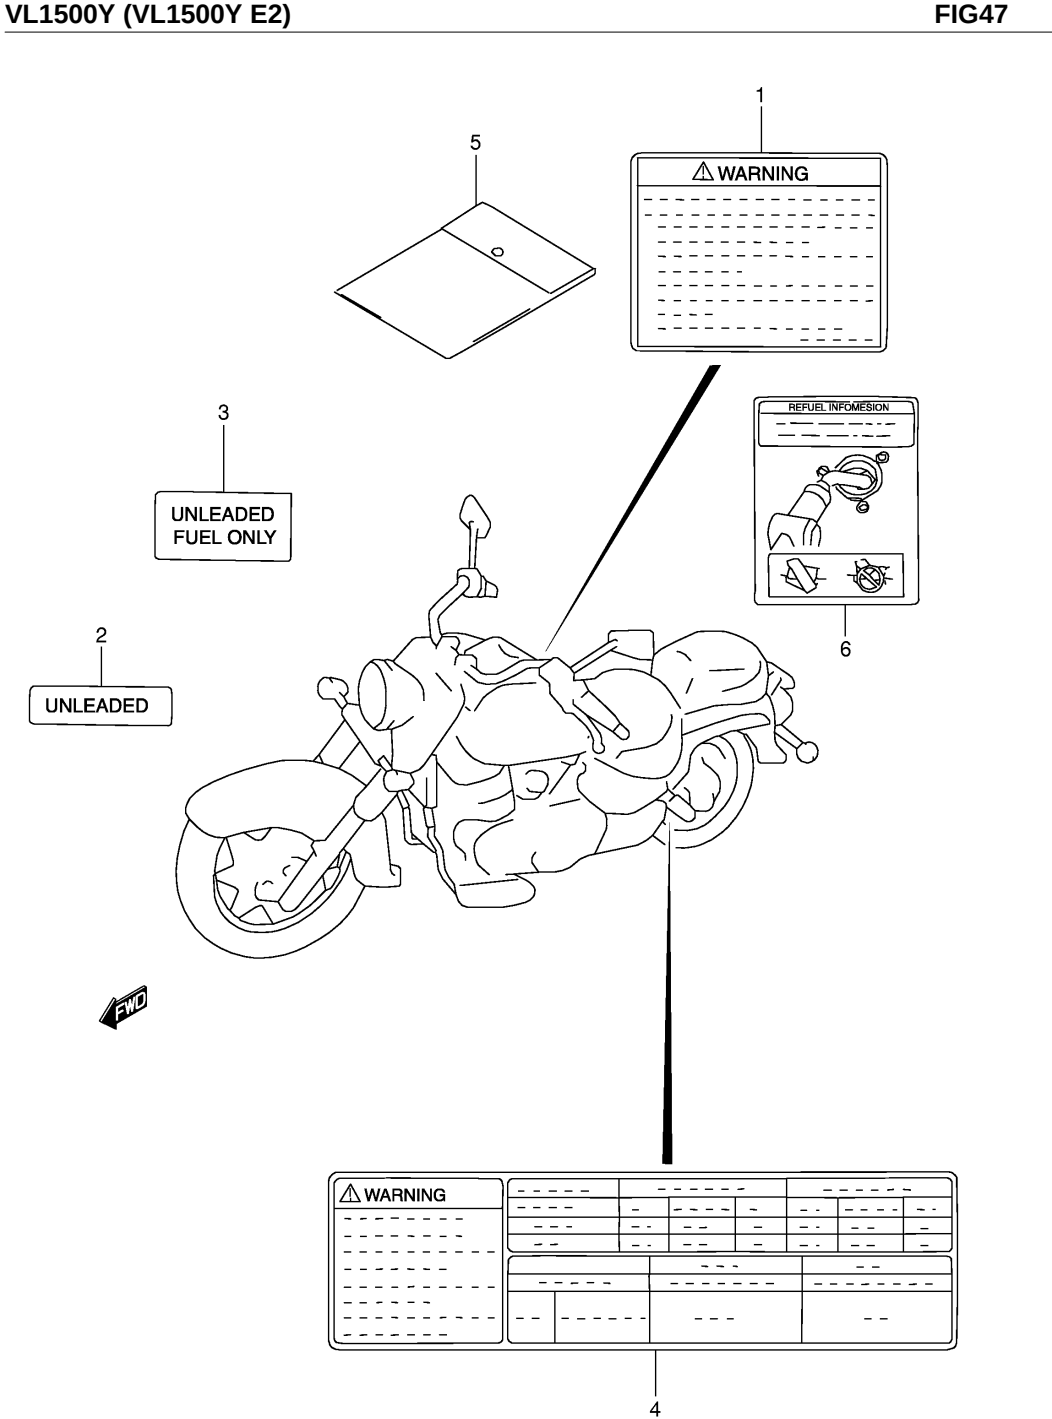 


Ref No	Part No	Description
1	68319-33E01	Label, General Warning (english)
1	68319-33E21	Label, General Warning (german)
1	68319-33E31	Label, General Warning (french)
1	68319-33E91	Label, General Warning (swedish)
1	68319-33EA1	Label, General Warning (finnish)
1	68319-33EB1	Label, General Warning (norwegian)
1	68319-33EC1	Label, General Warning (danish)
1	68319-33E71	Label, General Warning (dutch)
1	68319-33E41	Label, General Warning (italian)
1	68319-33E51	Label, General Warning (spanish)
1	68319-33E81	Label, General Warning (portuguese)
1	68319-29F00	Label, General Warning (english)
2	68623-17D00	Label, Fuel
3	86932-73060	Label, Fuel
4	68332-10F00	Label, Tire Information
5	94980-42A00	Bag, Manual
6	68926-10F00	Label, Fuel Information (english)
6	68926-10F20	Label, Fuel Information (german)
6	68926-10F30	Label, Fuel Information (french)
6	68926-10F40	Label, Fuel Information (italian)
6	68926-10F50	Label, Fuel Information (spanish)
6	68926-10F70	Label, Fuel Information (dutch)
6	68926-10F90	Label, Fuel Information (swedish)
6	68926-10FA0	Label, Fuel Information (finnish)
6	68926-10FB0	Label, Fuel Information (norwegian)
6	68926-10F80	Label, Fuel Information (portuguese)
7	99011-10F51-042	Manual, Owner's
7	99011-10F51-057	Manual, Owner's

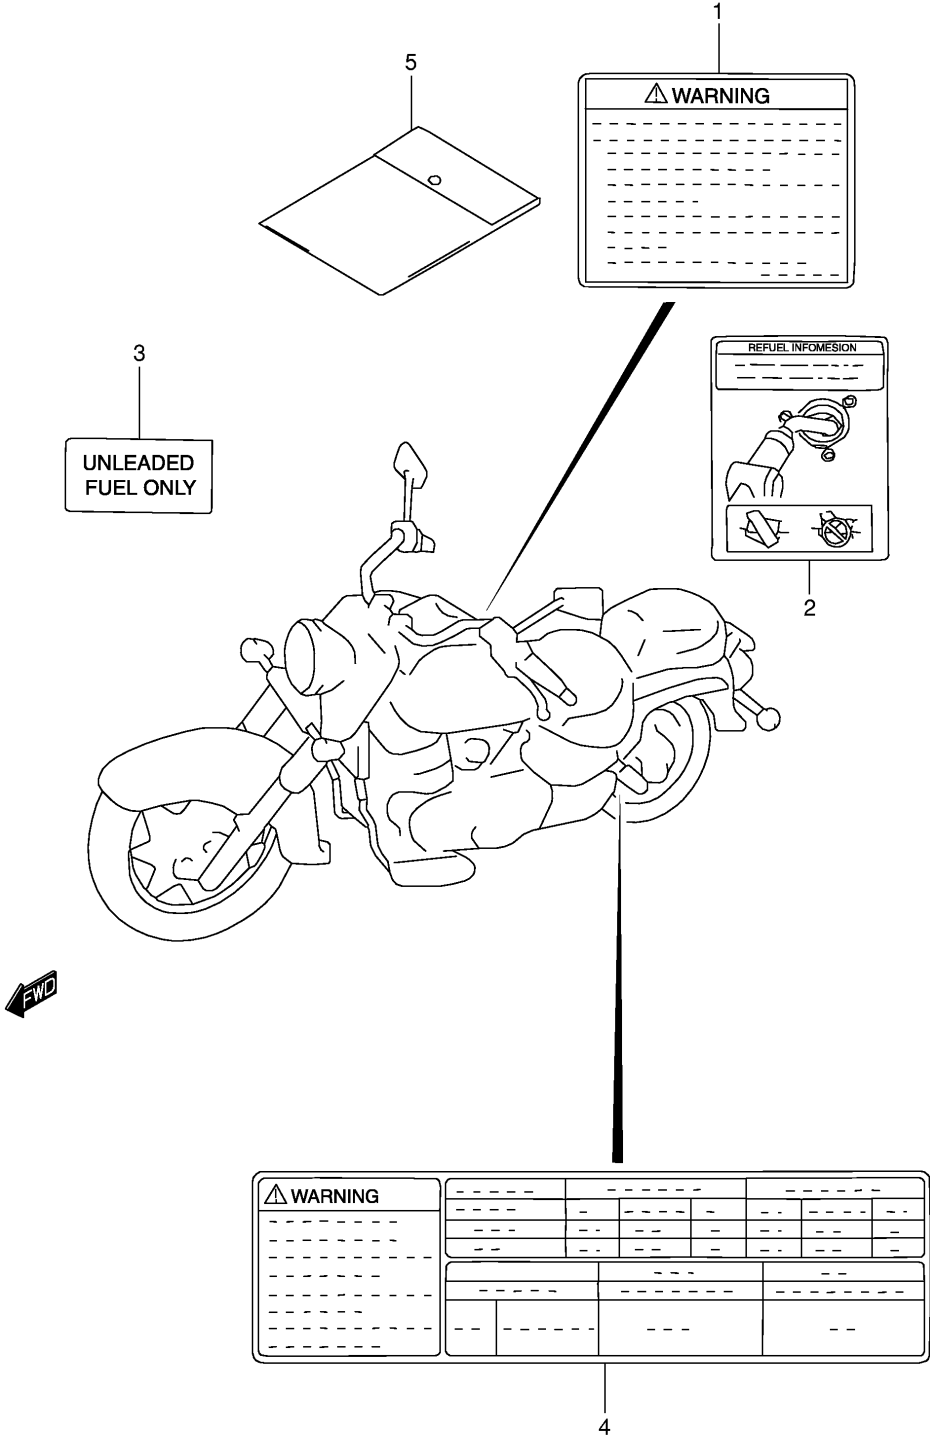 


Ref No	Part No	Description
1	68319-30F00	Label, Warning (english)
1	68319-30F20	Label, Warning (german)
1	68319-30F30	Label, Warning (french)
1	68319-30F40	Label, Warning (italian)
1	68319-30F50	Label, Warning (spanish)
1	68319-30F70	Label, Warning (dotch)
1	68319-30F80	Label, Warning (portuguese)
1	68319-30F90	Label, Warning (swedish)
1	68319-30FA0	Label, Warning (finnish)
1	68319-30FB0	Label, Warning (norwegian)
1	68319-30FC0	Label, Warning (danish)
1	68319-30F00	Label, Warning (english)
1	68319-29F80	Label, Warning (portuguese)
2	68926-10F00	Label, Fuel Information (english)
2	68926-10F20	Label, Fuel Information (german)
2	68926-10F30	Label, Fuel Information (french)
2	68926-10F40	Label, Fuel Information (italian)
2	68926-10F50	Label, Fuel Information (spanish)
2	68926-10F70	Label, Fuel Information (dutch)
2	68926-10F80	Label, Fuel Information (portuguese)
2	68926-10F90	Label, Fuel Information (swedish)
2	68926-10FA0	Label, Fuel Information (finnish)
2	68926-10FB0	Label, Fuel Information (norwegian)
2	68926-10FC0	Label, Fuel Information (danish)
3	86932-73060	Label, Fuel Caution
4	68332-10F00	Label, Tire Information
5	94980-42A00	Bag, Manual
6	99011-10F53-042	Manual, Owner's
6	99011-10F53-057	Manual, Owner's

 
FIG.47B

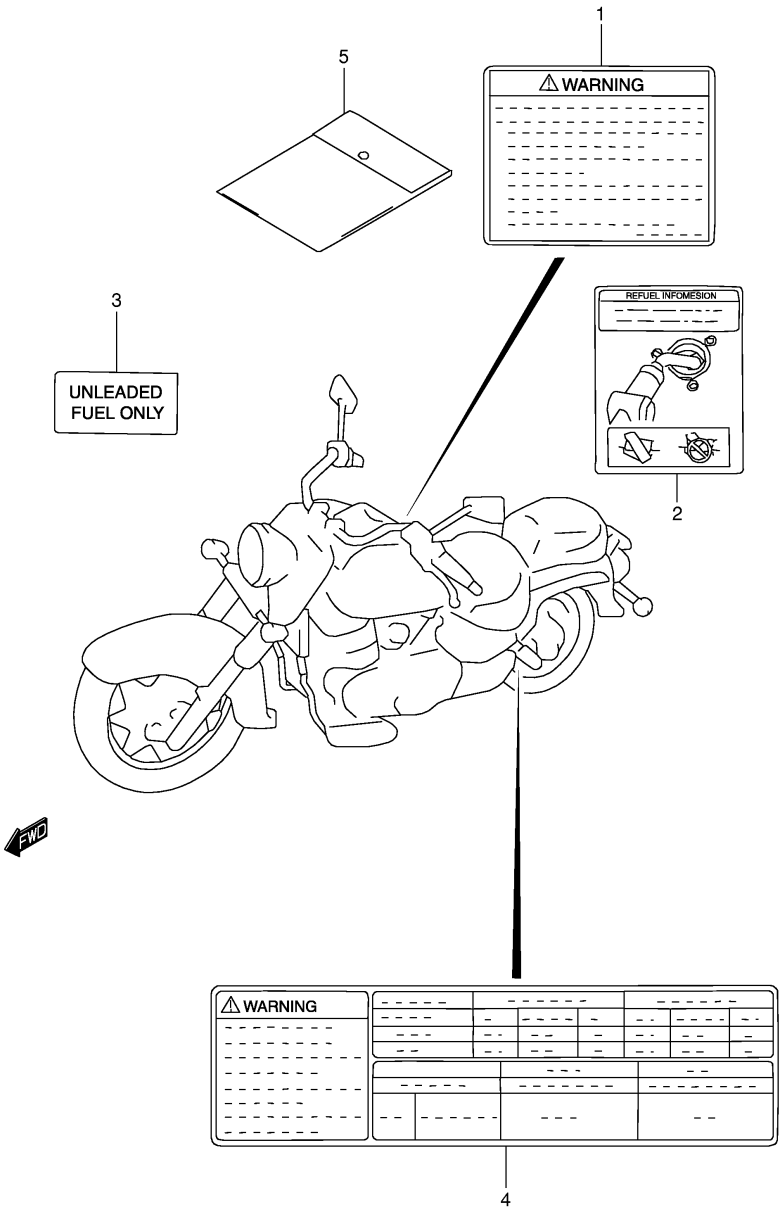


Ref No	Part No	Description
1	68319-29F00	Label, Warning (english)
1	68319-29F20	Label, Warning (german)
1	68319-29F30	Label, Warning (french)
1	68319-29F40	Label, Warning (italian)
1	68319-29F50	Label, Warning (spanish)
1	68319-29F70	Label, Warning (dotch)
1	68319-29F80	Label, Warning (portuguese)
1	68319-29F90	Label, Warning (swedish)
1	68319-29FA0	Label, Warning (finnish)
1	68319-29FB0	Label, Warning (norwegian)
1	68319-29FC0	Label, Warning (danish)
1	68319-30F40	Label, Warning (italian)
1	68319-30F90	Label, Warning (swedish)
2	68926-10F00	Label, Fuel (english)
2	68926-10F20	Label, Fuel (german)
2	68926-10F30	Label, Fuel (french)
2	68926-10F40	Label, Fuel (italian)
2	68926-10F50	Label, Fuel (spanish)
2	68926-10F70	Label, Fuel (dotch)
2	68926-10F80	Label, Fuel (portuguese)
2	68926-10F90	Label, Fuel (swedish)
2	68926-10FA0	Label, Fuel (finnish)
2	68926-10FB0	Label, Fuel (norwegian)
2	68926-10FC0	Label, Fuel (danish)
3	68623-17D00	Label, Fuel Caution
3	86932-73060	Label, Fuel Caution
4	68332-10F00	Label, Tire Information
5	94980-42A00	Bag, Manual

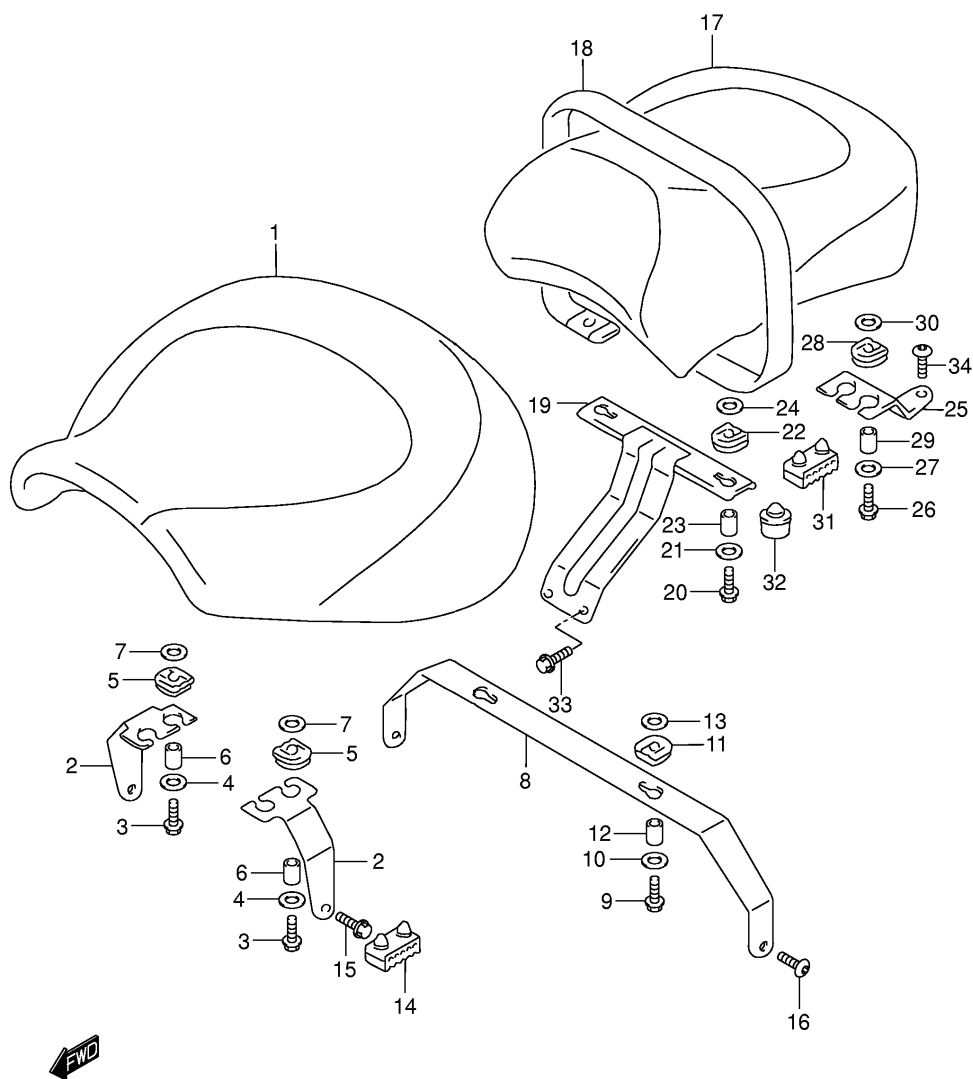 

Ref No	Part No	Description
1	45100-10F00-R22	Seat Assy (black)
2	45115-10F00	• . Bracket, Front
3	01550-06253	• . Bolt (6x25)
4	09160-06066	• . Washer
5	45215-06B00	• . Cushion
6	45216-06B00	• . Spacer
7	09160-06066	• . Washer
8	45116-10F00	• . Bracket, Rear
9	01550-06253	• . Bolt (6x25)
10	09160-06066	• . Washer
11	45215-06B00	• . Cushion
12	45216-06B00	• . Spacer
13	09160-06066	• . Washer
14	45149-31300	• . Cushion
15	01550-06163	Bolt, Front (6x16)
16	09106-08140	Bolt, Rear (8x16)
17	45300-10F00-R22	Seat Assy, Pillion (black)
18	45180-10F00-R22	• . Band Assy (black)
19	45315-10F00	• . Bracket, Front
20	01550-06303	• . Bolt, Front (6x30)
21	09160-06066	• . Washer
22	45215-06B00	• . Cushion
23	45216-06B00	• . Spacer
24	09160-06066	• . Washer
25	45316-10F00	• . Bracket, Rear
26	01550-06253	• . Bolt, Rear (6x25)
27	09160-06066	• . Washer
28	45215-06B00	• . Cushion
29	45216-06B00	• . Spacer
30	09160-06066	• . Washer
31	45149-31300	• . Cushion
32	09321-10011	• . Cushion
33	01550-06123	Bolt, Front (6x12)
34	09106-08140	Bolt, Rear (8x16)

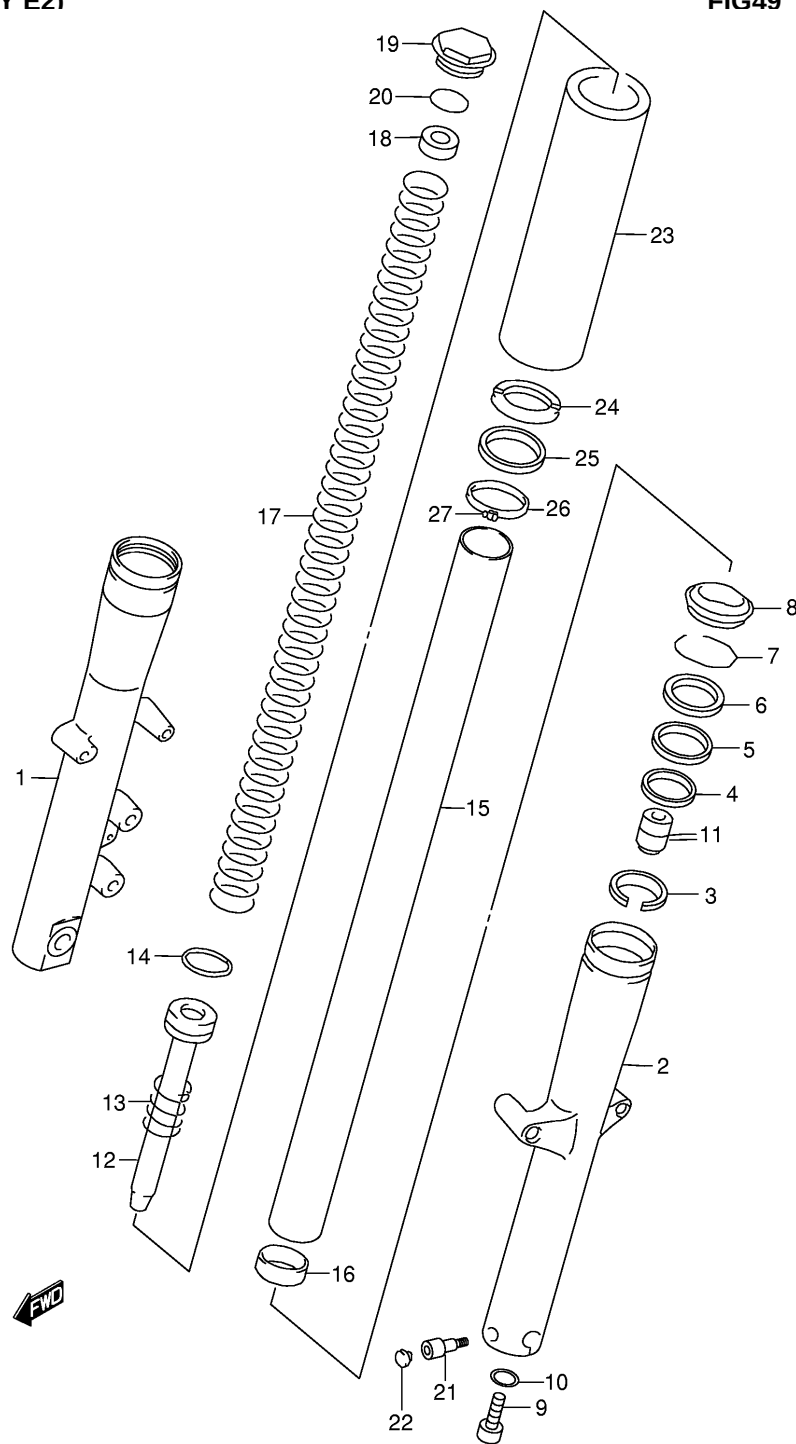 


Ref No	Part No	Description
	51103-10F00	Damper Assy, Front Fork Rh
	51104-10F00	Damper Assy, Front Fork Lh
	51103-10F00	Damper Assy, Front Fork Rh
	51104-10F10	Damper Assy, Front Fork Lh
1	51131-10F00	. Tube, Outer Rh
2	51141-10F00	. Tube, Outer Lh
3	51469-10F00	. Guide, Case
4	51152-11D60	. Bush, Guide
5	51168-38B00	. Spacer, Seal
6	51153-08D00	. Seal, Oil
7	51556-38B00	. Ring
8	51571-47D50	. Seal, Dust
9	51147-42AA0	. Bolt
10	51148-36011	. Gasket
11	51195-10F00	. Piece, Oil Lock
12	51146-10F00	. Pipe, Seat
13	51177-10F00	. Spring
14	51196-47D00	. Ring
15	51110-10F00	. Tube, Inner
16	51121-10F00	. Bush, Slide
17	51171-10F00	. Spring, Front
18	51353-10F00	. Bolt, Inner
19	51351-38B00	. Bolt, Fork
20	51117-38B00	. O Ring
21	51166-10F00	. Bolt, Lh
22	09250-06009	Cap
23	51464-10F00	Case, Under
24	51468-10F00	Seat, Rubber
25	51467-10F00	Washer
26	51465-10F00	Spacer
27	51466-10F00	Bolt

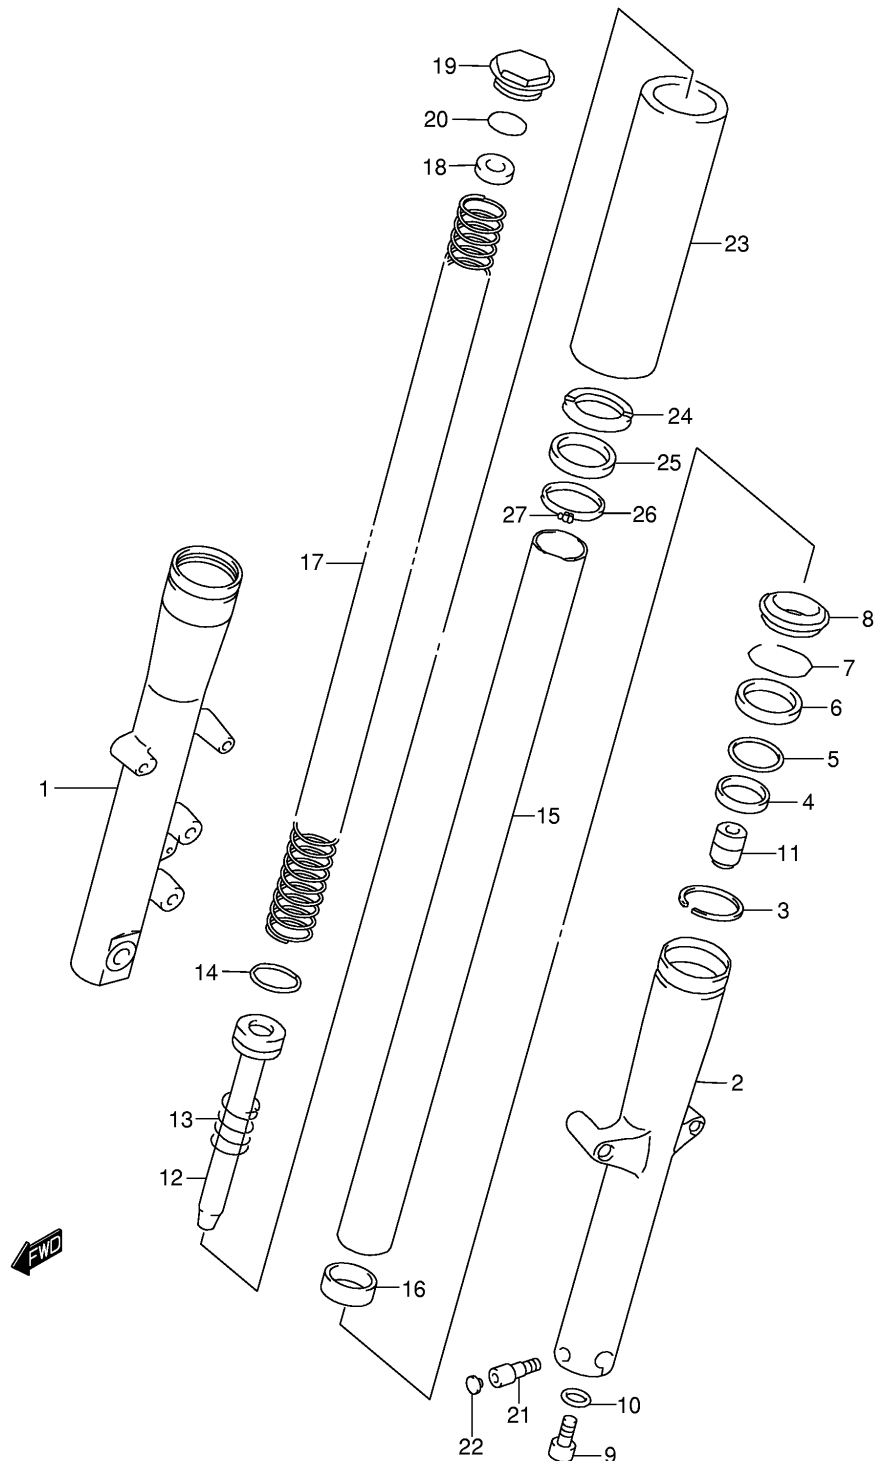 


FRONT DAMPER (MODEL Y)

Ref No	Part No	Description
	51103-10F20	Damper Assy, Front Fork Rh
	51104-10F20	Damper Assy, Front Fork Lh
1	51131-10F00	. . Tube, Outer Rh
2	51141-10F00	. . Tube, Outer Lh
3	51469-10F00	. . Guide, Case
4	51152-11D60	. . Bush, Guide
5	51168-38B00	. . Spacer, Seal
6	51153-08D00	. . Seal, Oil
7	51556-38B00	. . Ring
8	51571-47D50	. . Seal, Dust
9	51147-42AA0	. . Bolt
10	51148-36011	. . Gasket
11	51195-10F00	. . Piece, Oil Lock
12	51146-10F00	. . Pipe, Seat
13	51177-10F00	. . Spring
14	51196-47D00	. . Ring
15	51110-10F20	. . Tube, Inner
16	51121-10F00	. . Bush, Slide
17	51171-10F00	. . Spring, Front
18	51353-10F00	. . Bolt, Inner
19	51351-38B00	. . Bolt, Fork
20	51117-38B00	. . O Ring
21	51166-10F00	. . Bolt, Lh
22	09250-06009	Cap
23	51464-10F00	Case, Under
24	51468-10F00	Seat, Rubber
25	51467-10F00	Washer
26	51465-10F00	Spacer
27	51466-10F00	Bolt

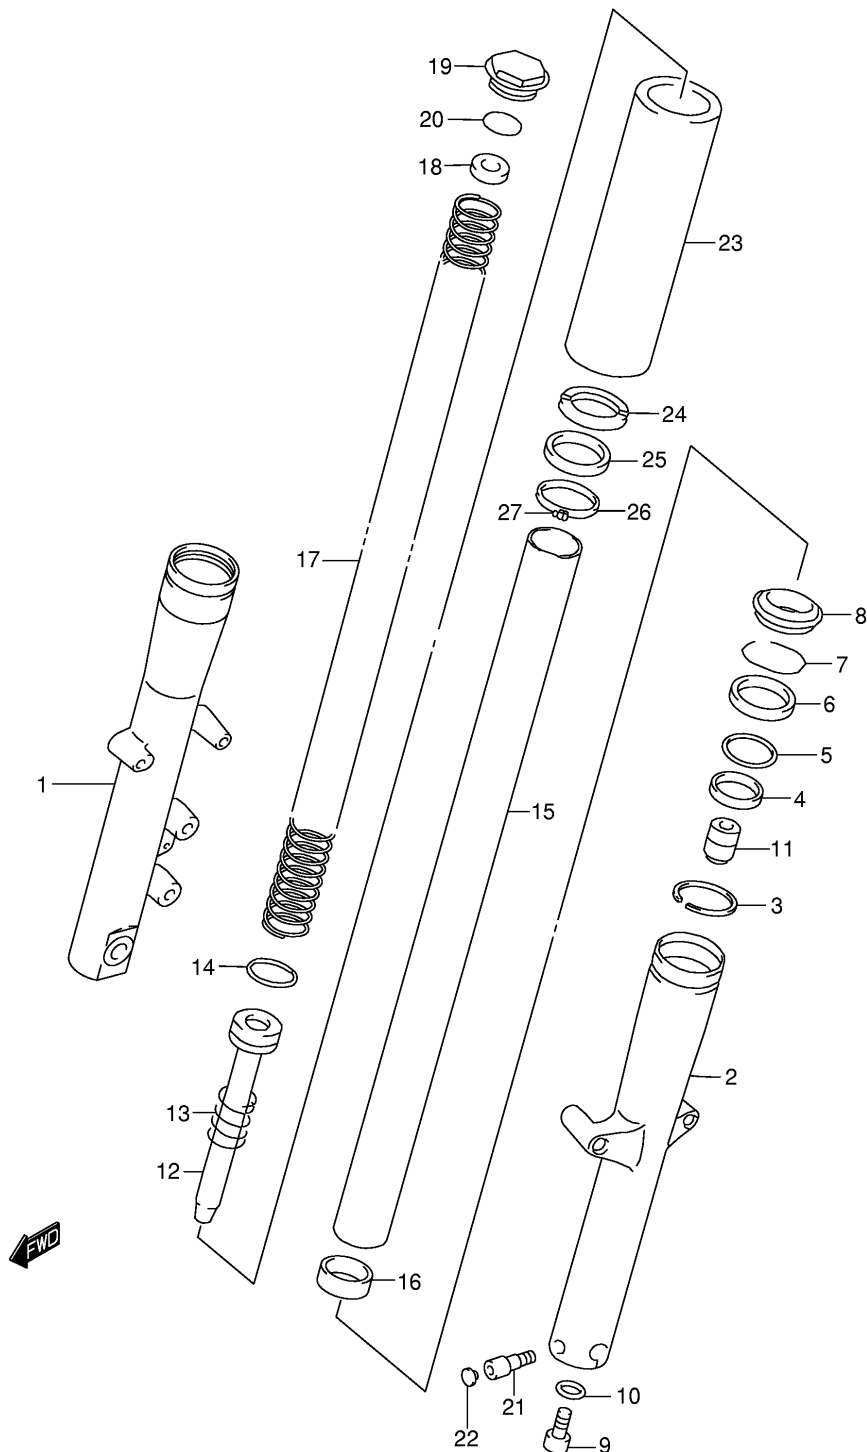 


Ref No	Part No	Description
	51103-10F20	Damper Assy, Front Fork Rh
	51104-10F30	Damper Assy, Front Fork Lh
1	51131-10F00	. . Tube, Outer Rh
2	51141-10F00	. . Tube, Outer Lh
3	51469-10F00	. . Guide, Case
4	51152-11D60	. . Bush, Guide
5	51168-38B00	. . Spacer, Seal
6	51153-08D00	. . Seal, Oil
7	51556-38B00	. . Ring
8	51571-47D50	. . Seal, Dust
9	51147-42AA0	. . Bolt
10	51148-36011	. . Gasket
11	51195-10F00	. . Piece, Oil Lock
12	51146-10F00	. . Pipe, Seat
13	51177-10F00	. . Spring
14	51196-47D00	. . Ring
15	51110-10F20	. . Tube, Inner
16	51121-10F00	. . Bush, Slide
17	51171-10F00	. . Spring, Front
18	51353-10F00	. . Bolt, Inner
19	51351-38B00	. . Bolt, Fork
20	51117-38B00	. . O Ring
21	51166-10F00	Bolt, Lh
22	09250-06009	Cap
23	51464-10F00	Case, Under
24	51468-10F00	Seat, Rubber
25	51467-10F00	Washer
26	51465-10F00	Spacer
27	51466-10F00	Bolt

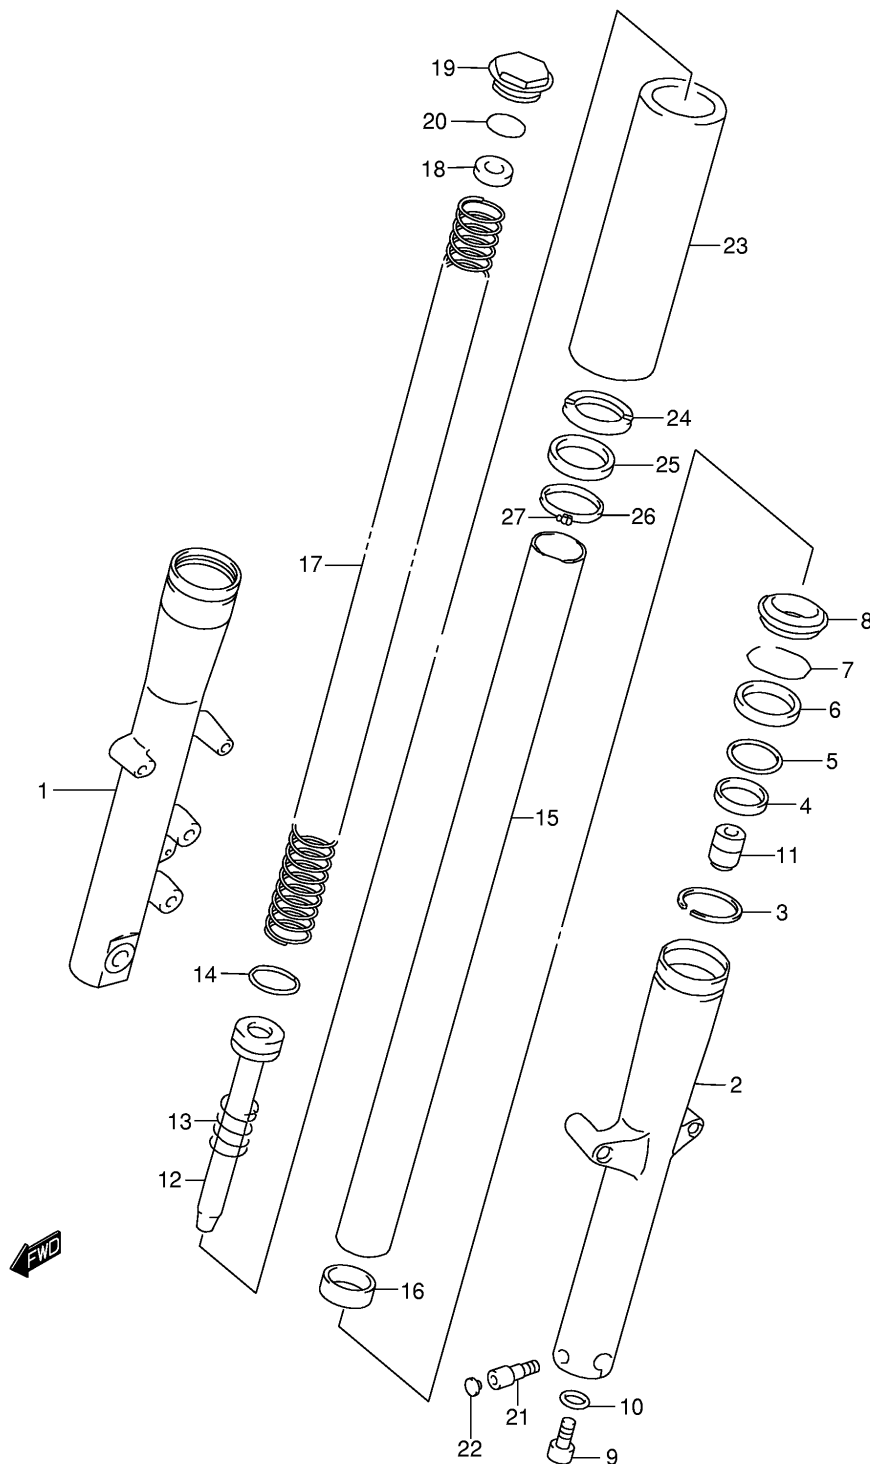 


Ref No	Part No	Description
	51103-10F40	Damper Assy, Front Fork Rh
	51103-10F20	Damper Assy, Front Fork Rh
	51104-10F40	Damper Assy, Front Fork Lh
	51104-10F30	Damper Assy, Front Fork Lh
1	51131-10F40	. . Tube, Outer Rh
1	51131-10F00	. . Tube, Outer Rh
2	51141-10F40	. . Tube, Outer Lh
2	51141-10F00	. . Tube, Outer Lh
3	51469-10F00	. . Guide, Case
4	51152-11D60	. . Bush, Guide
5	51168-38B00	. . Spacer, Seal
6	51153-08D00	. . Seal, Oil
7	51556-38B00	. . Ring
8	51571-47D50	. . Seal, Dust
9	51147-42AA0	. . Bolt
10	51148-36011	. . Gasket
11	51195-10F00	. . Piece, Oil Lock
12	51146-10F00	. . Pipe, Seat
13	51177-10F00	. . Spring
14	51196-47D00	. . Ring
15	51110-10F20	. . Tube, Inner
16	51121-10F00	. . Bush, Slide
17	51171-10F00	. . Spring, Front
18	51353-10F00	. . Bolt, Inner
19	51351-38B00	. . Bolt, Fork
20	51117-38B00	. . O Ring
21	51166-10F00	. . Bolt, Lh
22	09250-06009	Cap
23	51464-10F00	Case, Under
24	51468-10F00	Seat, Rubber
25	51467-10F00	Washer
26	51465-10F00	Spacer
27	51466-10F00	Bolt

 FIG.49D

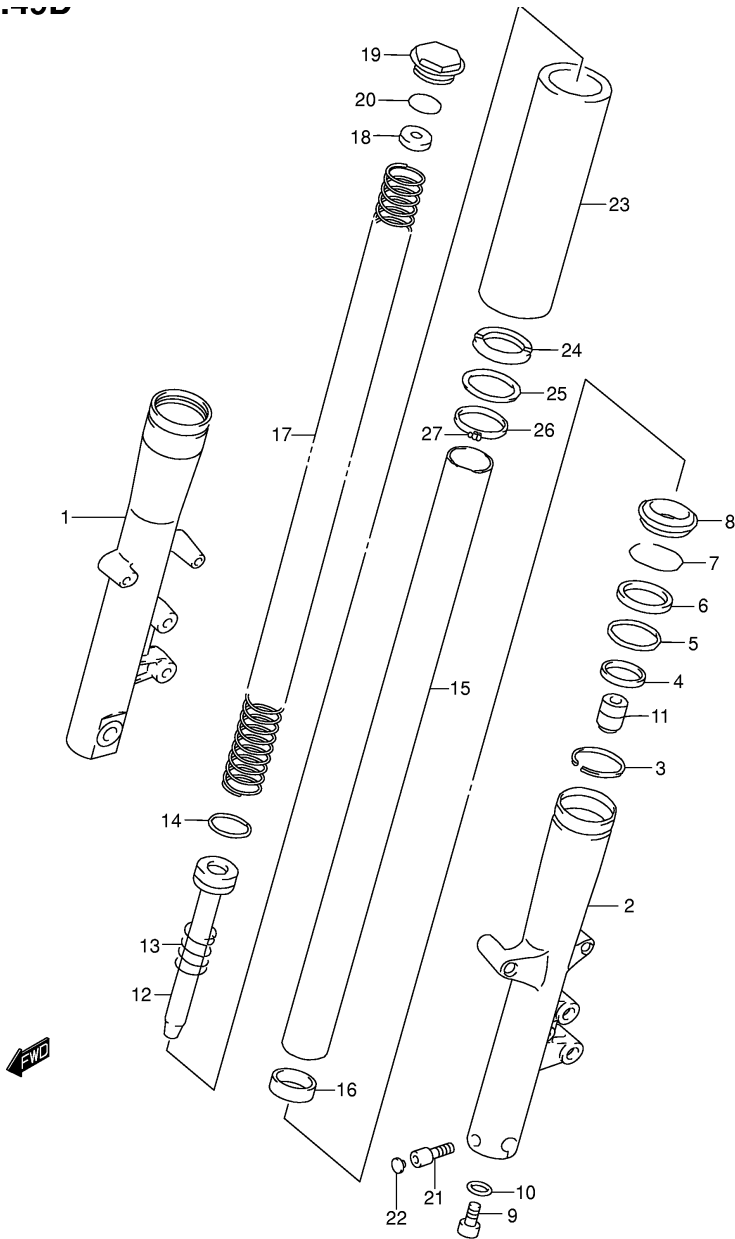


VL1500Y E02_049D
FRONT DAMPER


Ref No	Part No	Description
	51103-10F50	Damper Assy, Front Fork Rh
	51104-10F50	Damper Assy, Front Fork Lh
1	51131-10F50	. . Tube, Outer Rh
2	51141-10F50	. . Tube, Outer Lh
3	51469-10F00	. . Guide, Case
4	51152-11D60	. . Bush, Guide
5	51168-38B00	. . Spacer, Seal
6	51153-08D00	. . Seal, Oil
7	51556-38B00	. . Ring
8	51571-47D50	. . Seal, Dust
9	51147-42AA0	. . Bolt
10	51148-36011	. . Gasket
11	51195-10F00	. . Piece, Oil Lock
12	51146-10F00	. . Pipe, Seat
13	51177-10F00	. . Spring
14	51196-47D00	. . Ring
15	51110-10F20	. . Tube, Inner
16	51121-10F00	. . Bush, Slide
17	51171-10F00	. . Spring, Front
18	51353-10F00	. . Bolt, Inner
19	51351-38B00	. . Bolt, Fork
20	51117-38B00	. . O Ring
21	51166-10F00	. . Bolt, Lh
22	09250-06009	Cap
23	51464-10F00	Case, Under
24	51468-10F00	Seat, Rubber
25	51467-10F00	Washer
26	51465-10F00	Spacer
27	51466-10F00	Bolt

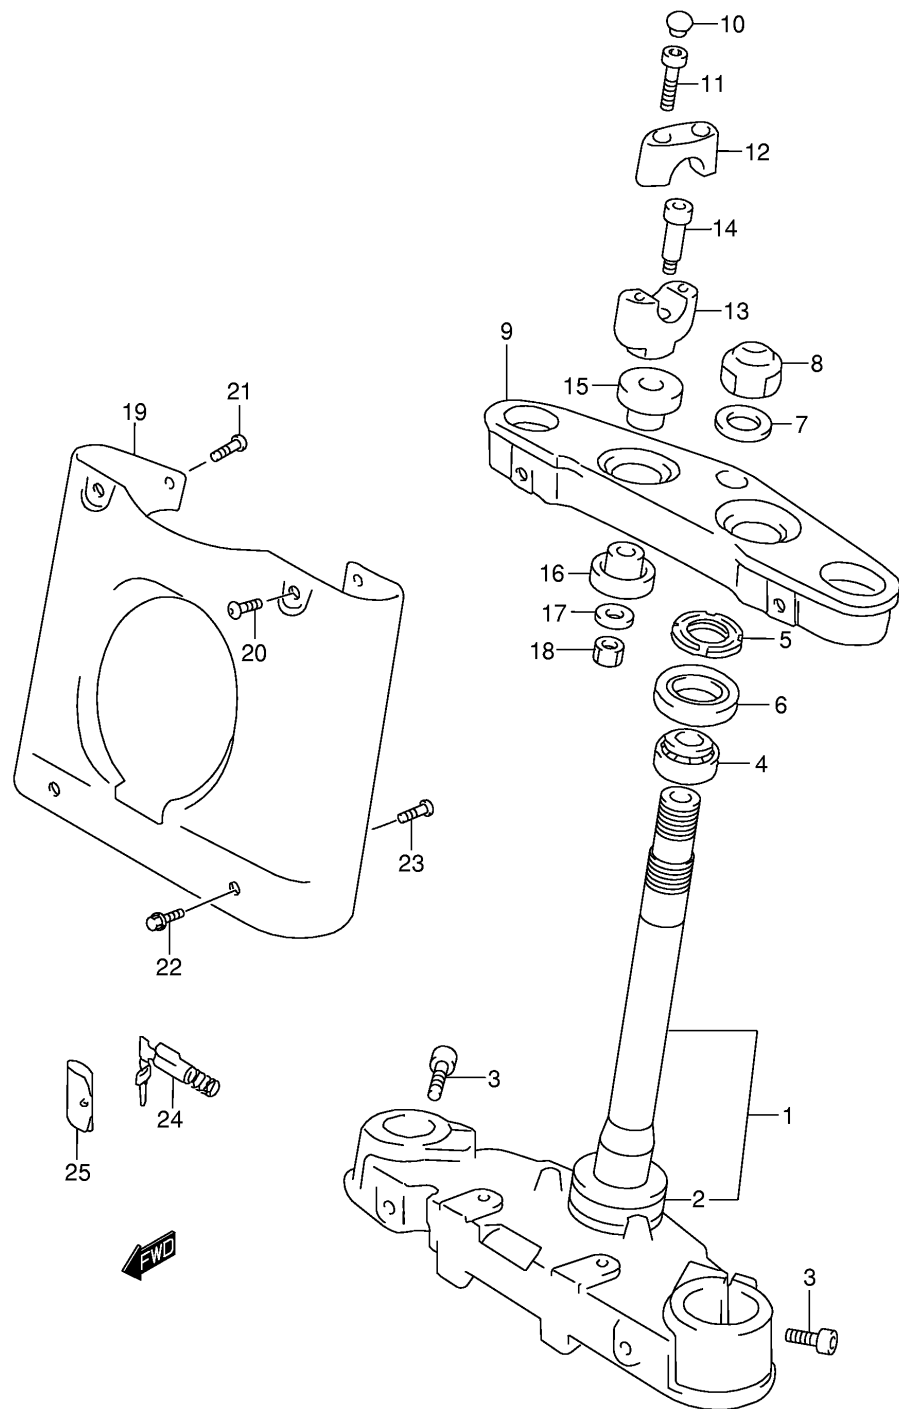 


Ref No	Part No	Description
1	51410-10F00	Stem, Steering
2	09265-30009	• . Bearing (30x55x17)
3	51147-10F00	Bolt, Stem
4	09265-25019	Bearing (25x47x15)
5	51631-28000	Nut, Stem
6	51643-40502	Seal, Dust Upper
7	51356-24B01	Washer, Stem
8	51353-24B00	Nut, Stem
9	51311-10F00	Head, Steering Stem
10	09250-06009	Cap, Bolt
11	07130-08307	Bolt, Holder
12	56211-38A01	Holder, Handle Upper
13	56221-10F00	Holder, Handle Lower
14	51226-10F00	Bolt, Stay
15	56240-38A42	Cushion, Upper
16	56242-39A12	Cushion, Lower
17	51354-38A40	Washer
18	09159-10027	Nut
19	51515-10F00	Cover, Front Fork
20	09139-08007	Screw, Upper Front (8x16)
21	09139-06027	Screw, Upper Rear (6x12)
22	01550-08163	Bolt, Lower Front (8x16)
23	09139-06027	Screw, Lower Rear (6x12)
24	51900-38810	Lock Assy, Steering
25	51920-48E00	Case, Key

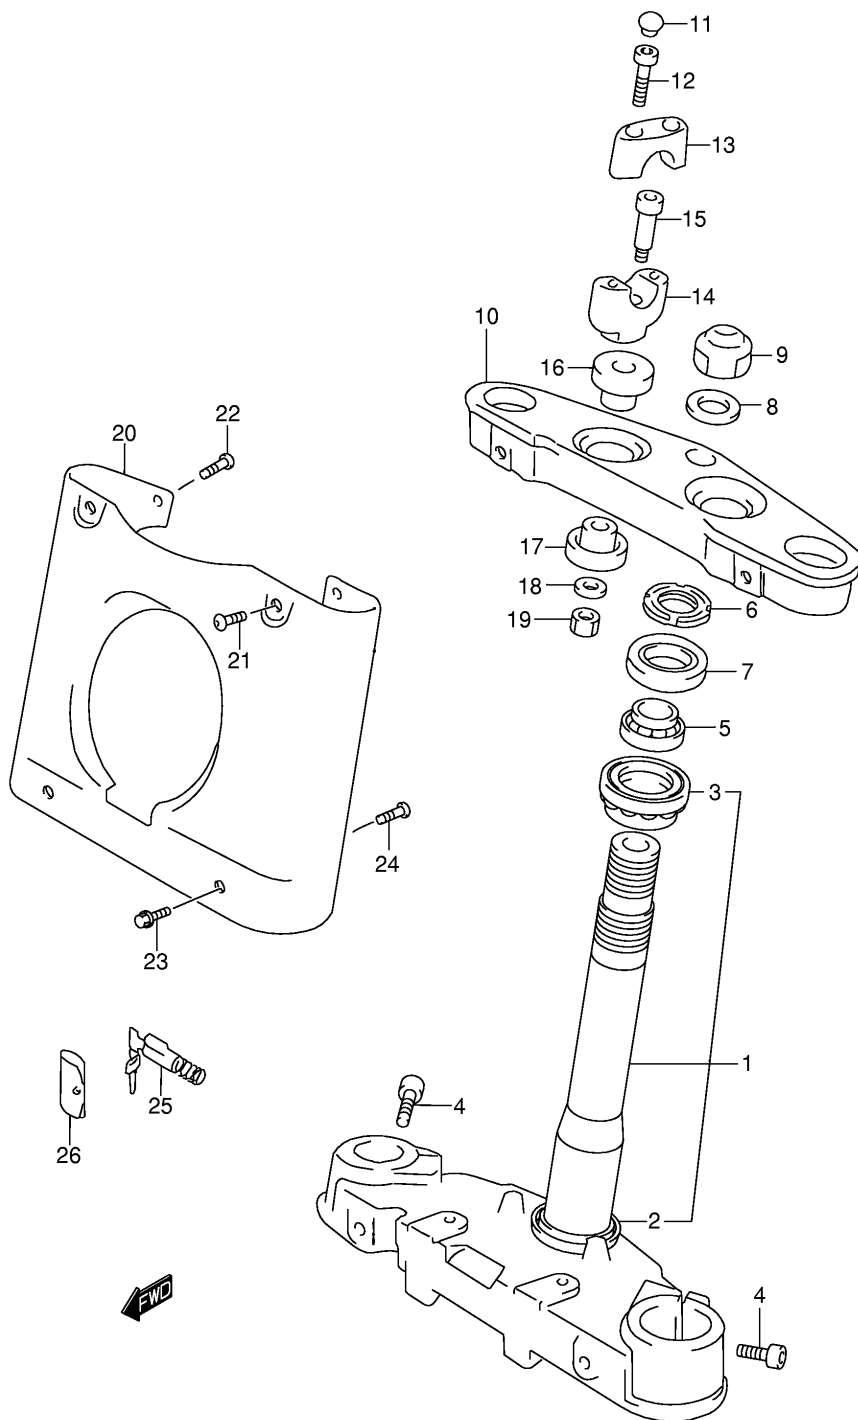 

Ref No	Part No	Description
1	51410-10F20	Stem, Steering
2	51644-12C00	• . Seal, Lower
3	09267-30010	• . Bearing (30x55x17)
4	51147-10F00	Bolt, Stem
5	09267-25009	Bearing (25x47x15)
6	51631-28000	Nut, Stem
7	51643-40502	Seal, Dust Upper
8	51356-24B01	Washer, Stem
9	51353-24B00	Nut, Stem
10	51311-10F00	Head, Steering Stem
11	09250-06009	Cap, Bolt
12	07130-08307	Bolt, Holder
13	56211-38A01	Holder, Handle Upper
14	56221-10F00	Holder, Handle Lower
15	51226-10F00	Bolt, Stay
16	56240-38A42	Cushion, Upper
17	56242-39A12	Cushion, Lower
18	51354-38A40	Washer
19	09159-10027	Nut
20	51515-10F00	Cover, Front Fork
21	09139-08007	Screw, Upper Front (8x16)
22	09139-06027	Screw, Upper Rear (6x12)
23	01550-08163	Bolt, Lower Front (8x16)
24	09139-06027	Screw, Lower Rear (6x12)
25	51900-38810	Lock Assy, Steering
26	51920-48E00	Case, Key

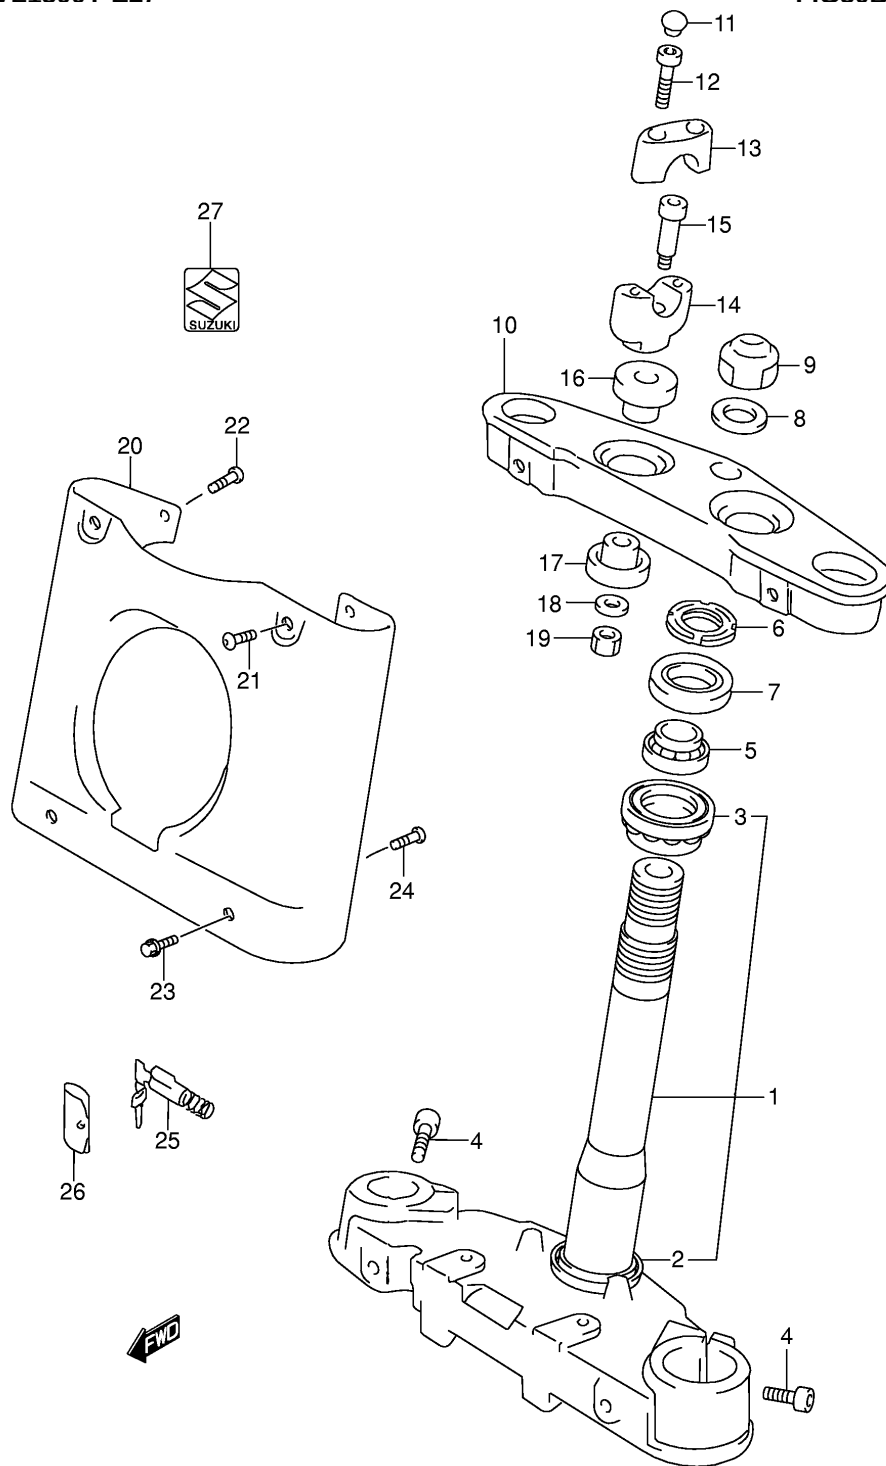 


Ref No	Part No	Description
2	51644-12C00	• . Seal, Lower
3	09267-30010	• . Bearing (30x55x17)
4	51147-10F00	Bolt, Stem
5	09267-25009	Bearing (25x47x15)
6	51631-28000	Nut, Stem
7	51643-40502	Seal, Dust Upper
8	51356-24B01	Washer, Stem
9	51353-24B00	Nut, Stem
10	51311-10F00	Head, Steering Stem
11	09250-06009	Cap, Bolt
12	07130-08307	Bolt, Holder
13	56211-38A01	Holder, Handle Upper
14	56221-10F00	Holder, Handle Lower
15	51226-10F00	Bolt, Stay
16	56240-38A42	Cushion, Upper
17	56242-39A12	Cushion, Lower
18	51354-38A40	Washer
19	09159-10027	Nut
20	51515-10F00	Cover, Front Fork
21	09139-08007	Screw, Upper Front (8x16)
22	09139-06027	Screw, Upper Rear (6x12)
23	01550-08163	Bolt, Lower Front (8x16)
24	09139-06027	Screw, Lower Rear (6x12)
25	51900-38810	Lock Assy, Steering
26	51920-48E00	Case, Key

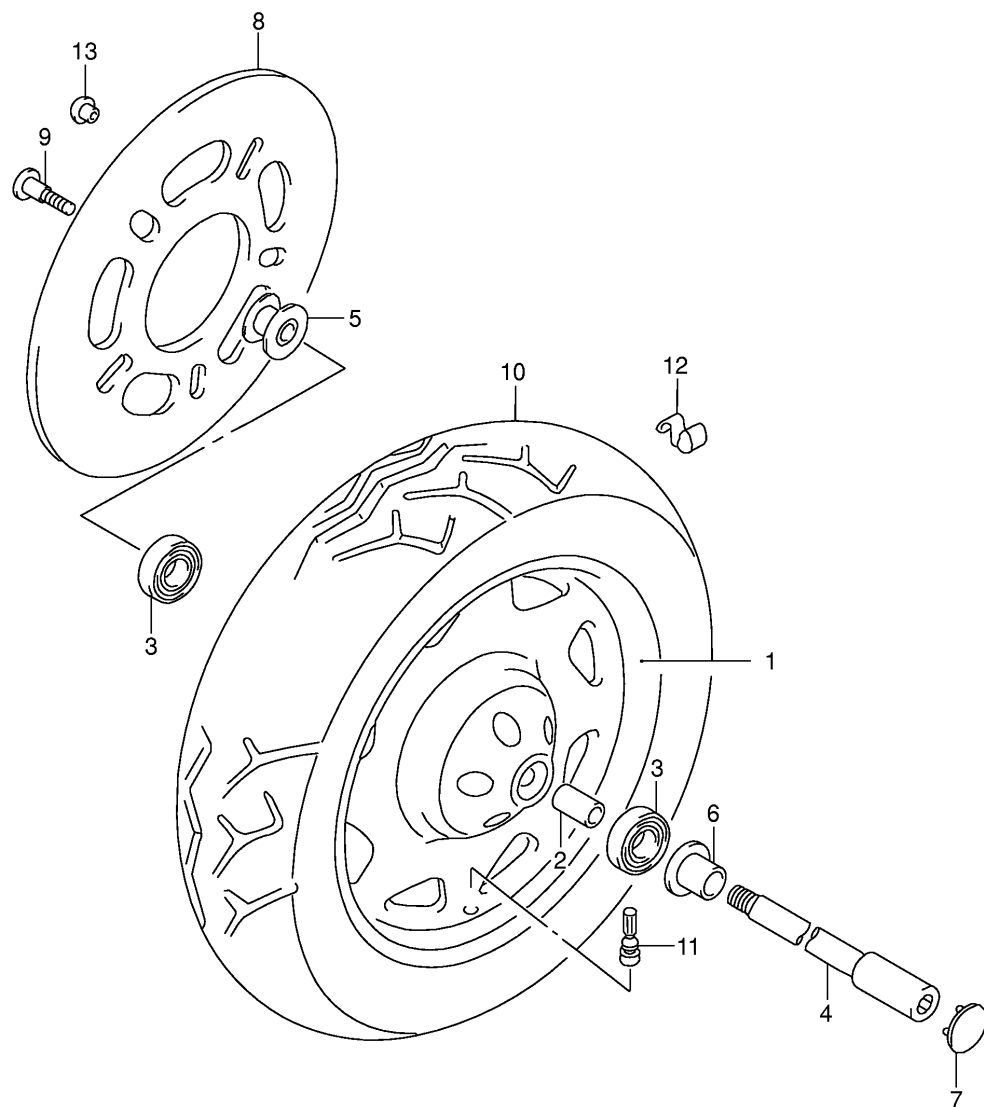 


Ref No	Part No	Description
1	54111-10F00-12R	Wheel, Front (mt3.50x16) (silver)
2	54731-10F00	Spacer, Hub Bearing
3	08133-62037	Bearing
4	54711-10F01	Axle, Front
5	54740-10F00	Spacer, Axle Rh
6	54740-32C00	Spacer, Axle Lh
7	54792-38B00	Cap, Lh
8	59211-10F00	Disc, Front Brake Rh
9	09106-08125	Bolt, Disc (8x33)
10	55110-10F00	Tire, Front (150/80-16 71h) (bridgestone)
11	43130-24A00	Valve Assy, Wheel Rim Tr412
12	43232-82000	Balancer (10g)
12	43234-82000	Balancer (20g)
12	43236-82000	Balancer (30g)
13	54791-38B01	Cap, Axle Rh



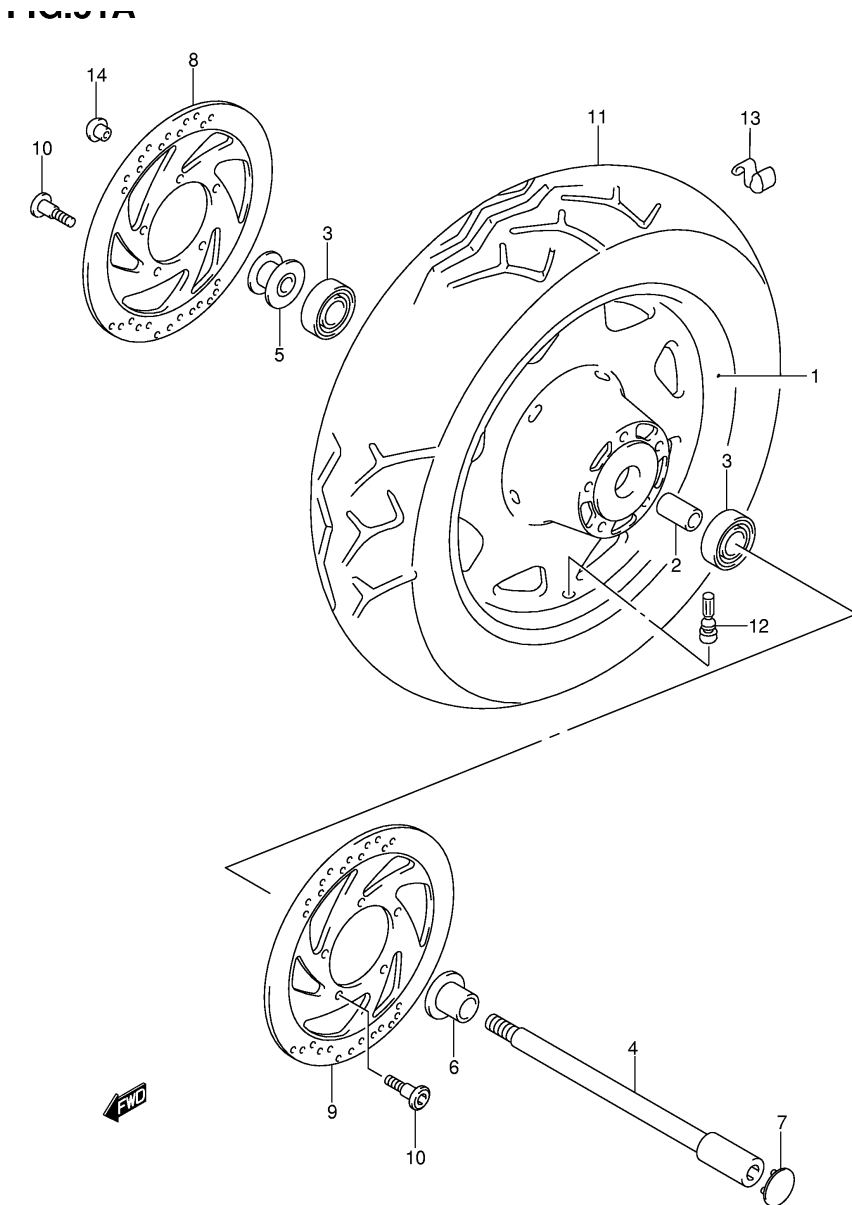 


Ref No	Part No	Description
1	54111-10F20-YAA	Wheel, Front (mt3.50x16) (silver)
2	54731-10F00	Spacer, Hub Bearing
3	08133-62037	Bearing
4	54711-10F01	Axle, Front
5	54740-10F00	Spacer, Axle Rh
6	54740-32C00	Spacer, Axle Lh
7	54792-38B00	Cap, Lh
8	59211-10F10	Disc, Front Brake Rh
9	59221-10F10	Disc, Front Brake Lh
10	09106-08148	Bolt, Disc (8x33)
11	55110-10F00	Tire, Front (150/80-16 71h) (bridgestone)
12	43130-24A00	Valve Assy, Wheel Rim Tr412
13	43232-82000	Balancer (10g)
13	43234-82000	Balancer (20g)
13	43236-82000	Balancer (30g)
14	54791-38B01	Cap, Axle Rh

 
VL1500Y E02_051A
FRONT WHEEL

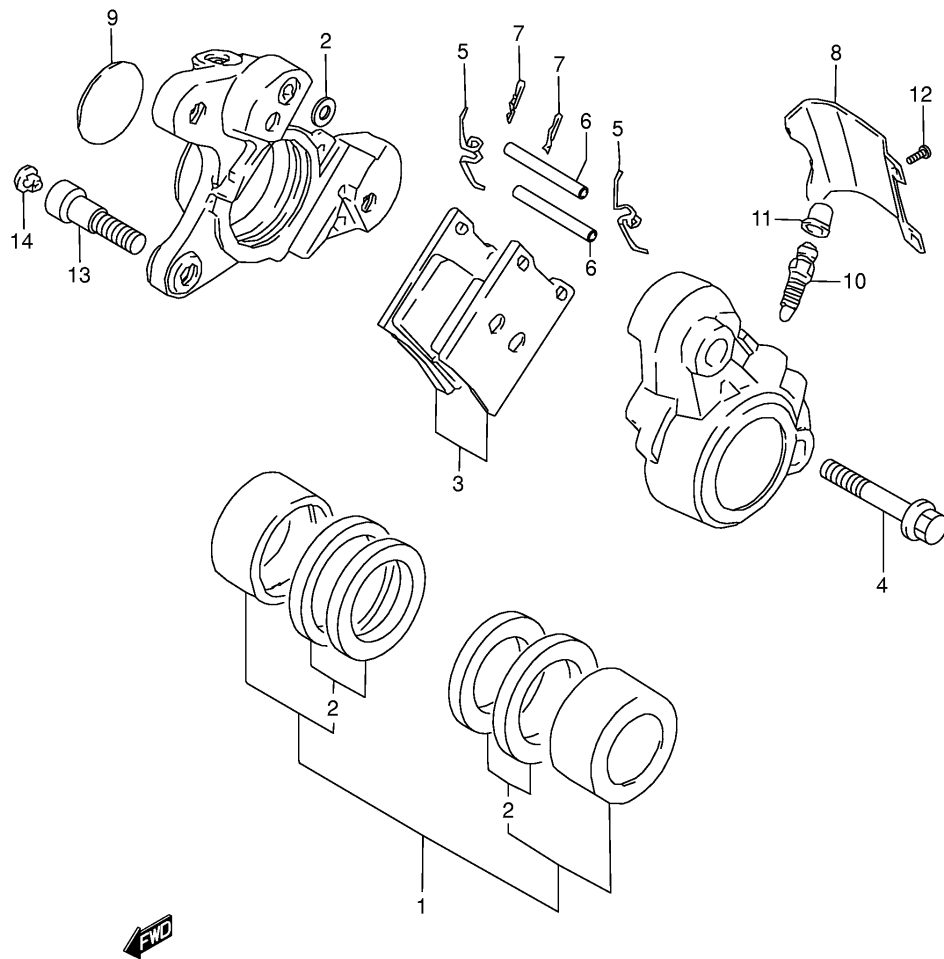

Ref No	Part No	Description
1	59100-10F00	Caliper Assy, Front Rh
2	59100-38811	• . Piston Set
3	59100-38840	• . Seal Set, Piston
4	59100-10810	• . Pad Set
5	59145-16700	• . Bolt
6	59143-16700	• . Spring
7	69141-45000	• . Pin
8	69142-45000	• . Clip
9	59151-38B01	• . Cover
10	59152-24A00	• . Cap, Caliper
11	59121-18410	• . Bleeder
12	55156-66310	• . Cap
13	59153-38B10	• . Screw (4x6)
14	09106-10038	Bolt (10x33)
	09250-08014	Cap

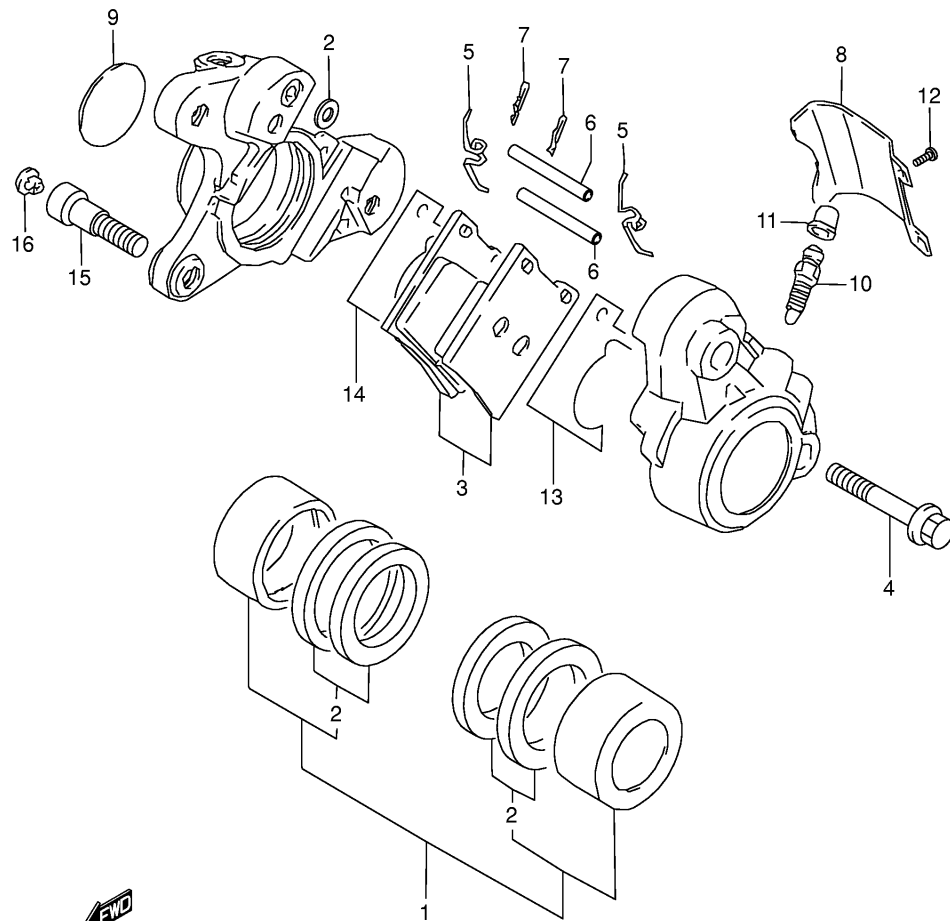 


Ref No	Part No	Description
1	59100-10F10	Caliper Assy, Front Rh
2	59100-38811	• . Piston Set
3	59100-38840	• . Seal Set, Piston
4	59100-10810	• . Pad Set
5	59145-16700	• . Bolt
6	59143-16700	• . Spring
7	69141-45000	• . Pin
8	69142-45000	• . Clip
9	59151-38B01	• . Cover
10	59152-24A00	• . Cap, Caliper
11	59121-18410	• . Bleeder
12	55156-66310	• . Cap
13	59153-38B10	• . Shim, Inner
14	59371-20C00	• . Shim, Outer
15	59381-20C00	Bolt (10x33)
16	09106-10038	Cap
	09250-08014	

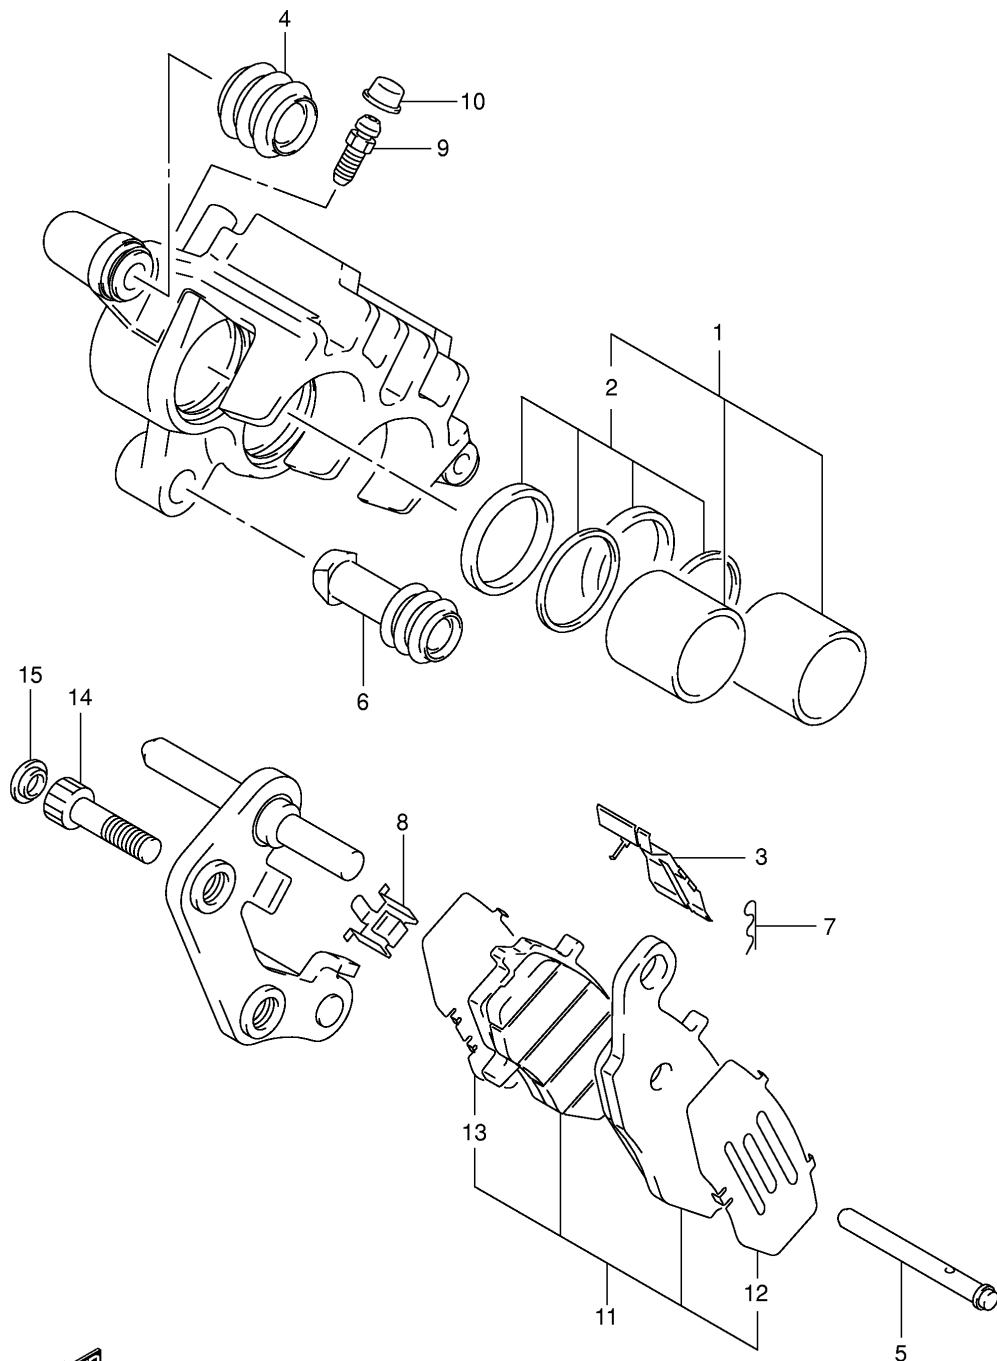 


Ref No	Part No	Description
	59100-33DD0-999	Caliper Assy, Front Rh
	59300-33DD0-999	Caliper Assy, Front Lh
1	59300-33831	• . Piston Set
2	59300-33841	• . Seal Set, Piston
3	59115-33D00	• . Spring, Pad, R
3	59315-33D00	• . Spring, Pad, L
4	59112-44B00	• . Boot
5	59141-44B01	• . Pin
6	59313-36500	• . Insulator, Axle
7	69142-45000	• . Clip, Pad Pin
8	59116-33D00	• . Guide, Pad
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	59102-33880	Pad & Shim Set, Rh
11	59302-33870	Pad & Shim Set, Lh
12	59171-33D00	• . Shim, Pad No.1
13	59172-33D00	• . Shim, Pad No.2
14	09106-10038	Bolt
15	09250-08014	Cap



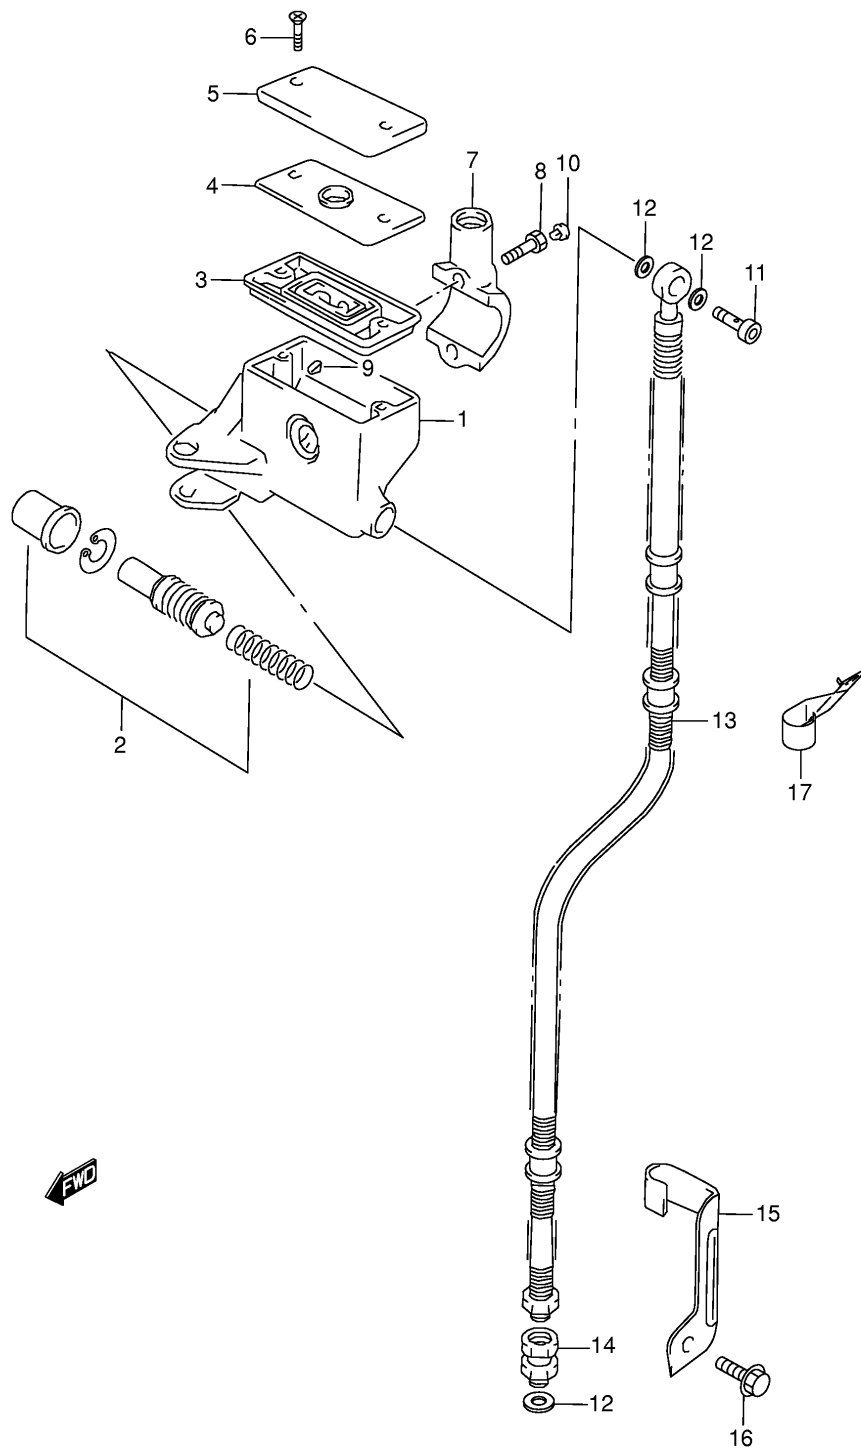 


Ref No	Part No	Description
1	59600-10F00	Cylinder Assy, Front Master
2	59600-04810	• . Piston & Cup Set
3	59667-49460	• . Diaphragm
4	59668-41C00	• . Plate
5	59669-10F00	• . Cap
6	02122-04127	• . Screw
7	59671-38A00	• . Holder
8	07130-06207	• . Bolt
9	59664-48B00	• . Protector
10	09250-05008	Cap
11	09360-10042	Bolt (10x1.25x22)
12	09161-10009	Washer (10x15x1.5)
13	59480-10F10	Hose, Front Brake
14	59290-43500	Adapter, Brake Hose
15	59268-10F00	Guide, Brake Hose
16	01550-06127	Bolt
17	59266-10F00	Clamp, Brake Hose Upper

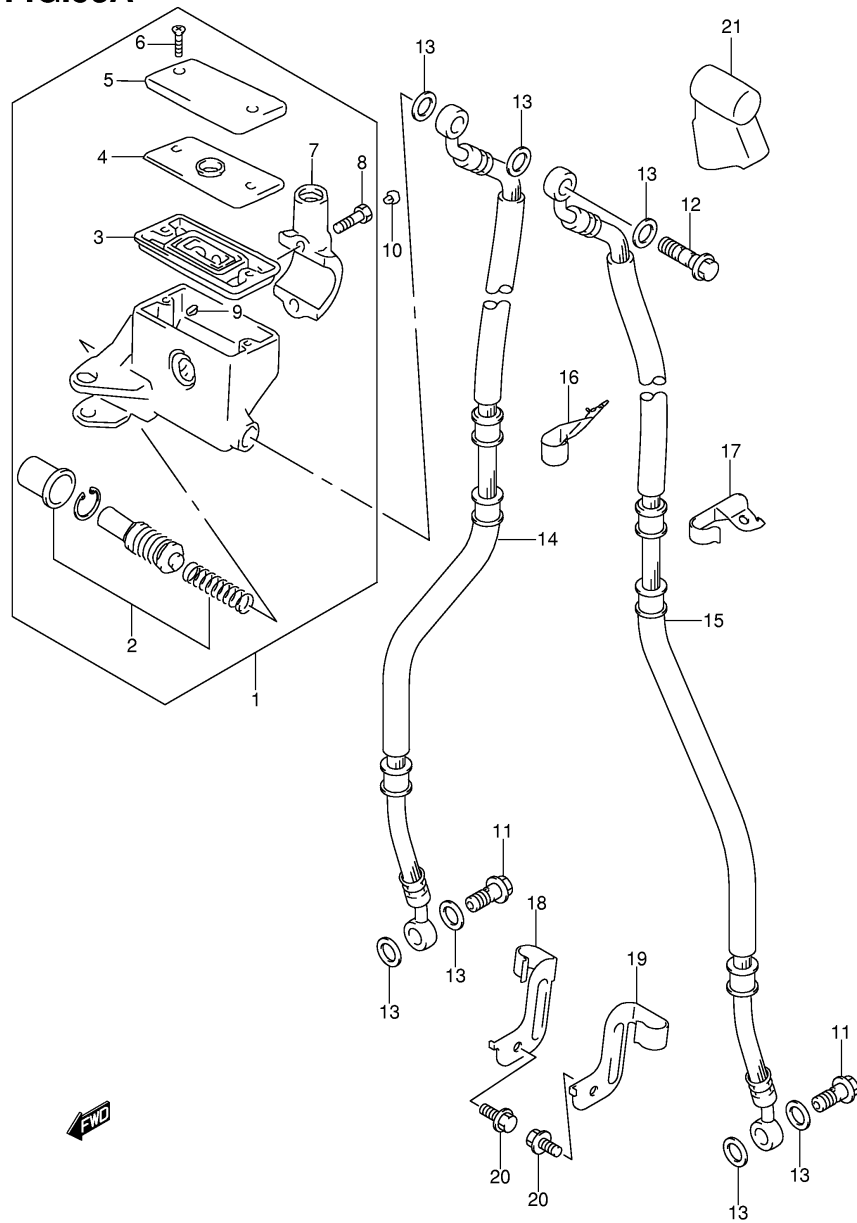 

Ref No	Part No	Description
1	59600-10F20	Cylinder Assy, Front Master
2	59600-45860	. Piston & Cup Set
3	59667-49460	. Diaphragm
4	59668-41C00	. Plate
5	59669-10F00	. Cap
6	02122-04127	. Screw
7	59671-38A00	. Holder
8	07130-06207	. Bolt
9	59664-48B00	. Protector
10	09250-05008	Cap
11	09360-10042	Bolt (10x1.25x22)
12	09360-10044	Bolt (10x1.25x36)
13	09161-10009	Washer (10x15x1.5)
14	59240-10F00	Hose, Front Brake Rh
15	59440-10F00	Hose, Front Brake Lh
16	59266-10F00	Clamp, Fr Brake Hose Upper Rh
17	59276-10F00	Clamp, Fr Brake Hose Upper Lh
18	59268-10F10	Clamp, Fr Brake Hose Rh
19	59278-10F10	Clamp, Fr Brake Hose Lh
20	09103-06222	Bolt
21	59711-10F00	Boot, Fr Master Cylinder

 
VL1500Y E02_053A
FRONT MASTER CYLINDER

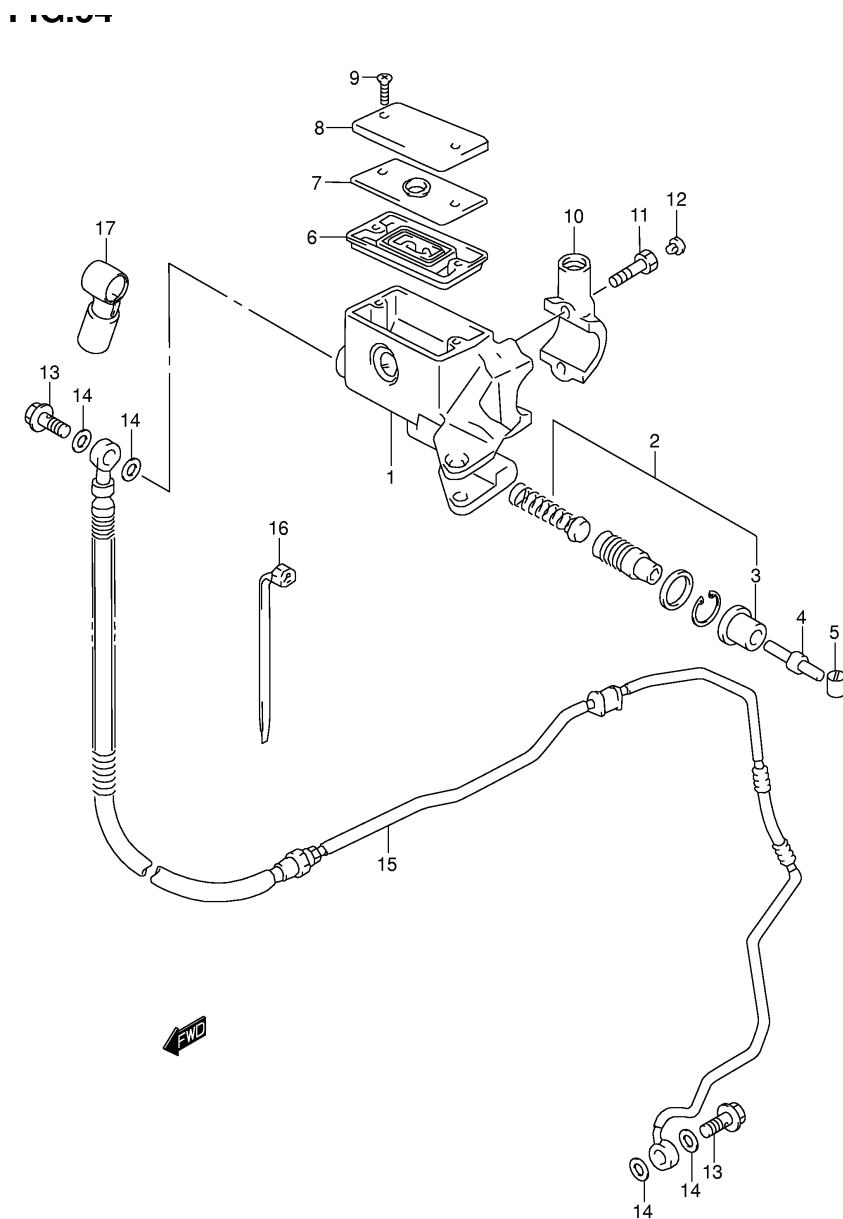


Ref No	Part No	Description
1	59800-10F00	Cylinder Assy, Clutch Master
2	59800-08810	• . Piston & Cup Set
3	59666-44300	•• .. Boot
4	59871-10F00	• . Push Rod
5	59892-08A00	• . Bush
6	59667-49460	• . Diaphragm
7	59668-41C00	• . Plate
8	59669-10F00	• . Cap
9	02122-04127	• . Screw
10	59671-38A00	• . Holder
11	07130-06207	• . Bolt
12	09250-05008	Cap
13	09360-10042	Bolt, Lower (10x1.25x22)
14	09161-10009	Washer (10x15x1.5)
15	59900-10F00	Hose Assy, Clutch
16	09407-25401	Clamp (l:235)


VL1500Y E02_054
CLUTCH MASTER CYLINDER

Ref No	Part No	Description
1	61100-10F00-019	Swinging Arm, Rear (black)
2	09263-20071	Bearing, Rod (20x27x23.5)
5	09265-17013	Bearing, Pivot Rh (17x40x13.25,with Plate)
6	09265-17012	Bearing, Pivot Lh (17x40x13.25)
7	61213-24A00	Bolt, Pivot Rh
8	09140-24007	Nut, Pivot Rh
9	61222-05A01	Cap, Pivot Lh
10	61213-10F00	Bolt, Pivot Lh
11	61372-10F00	Boot, Shaft

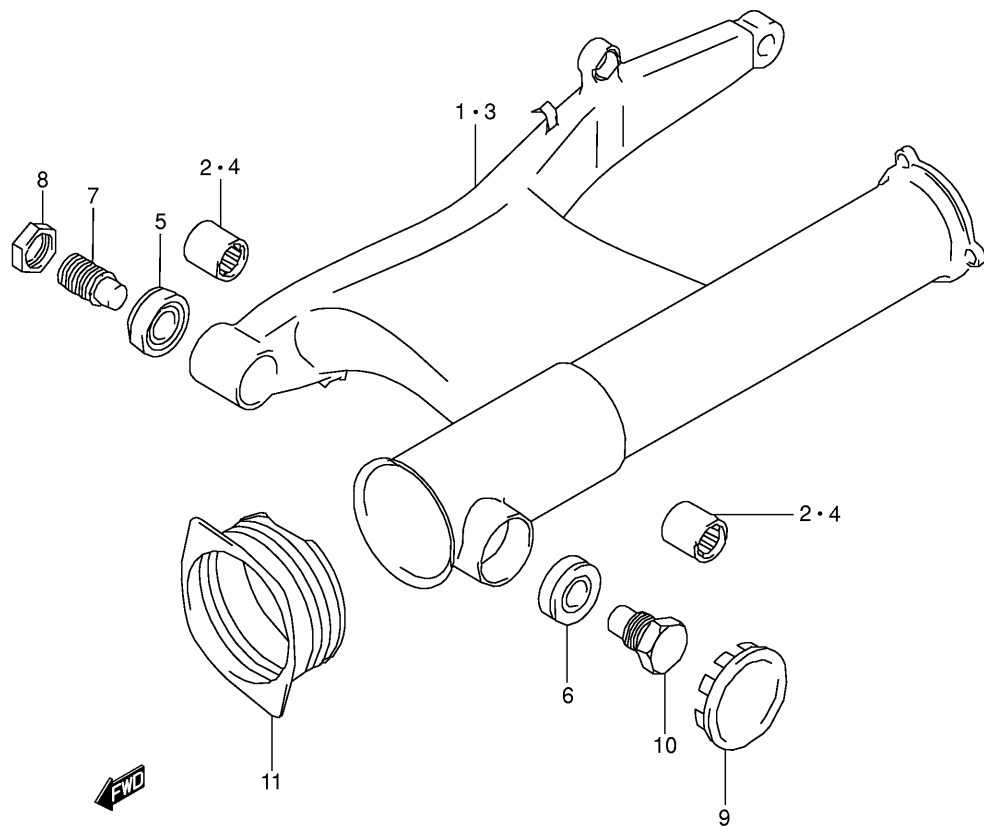 


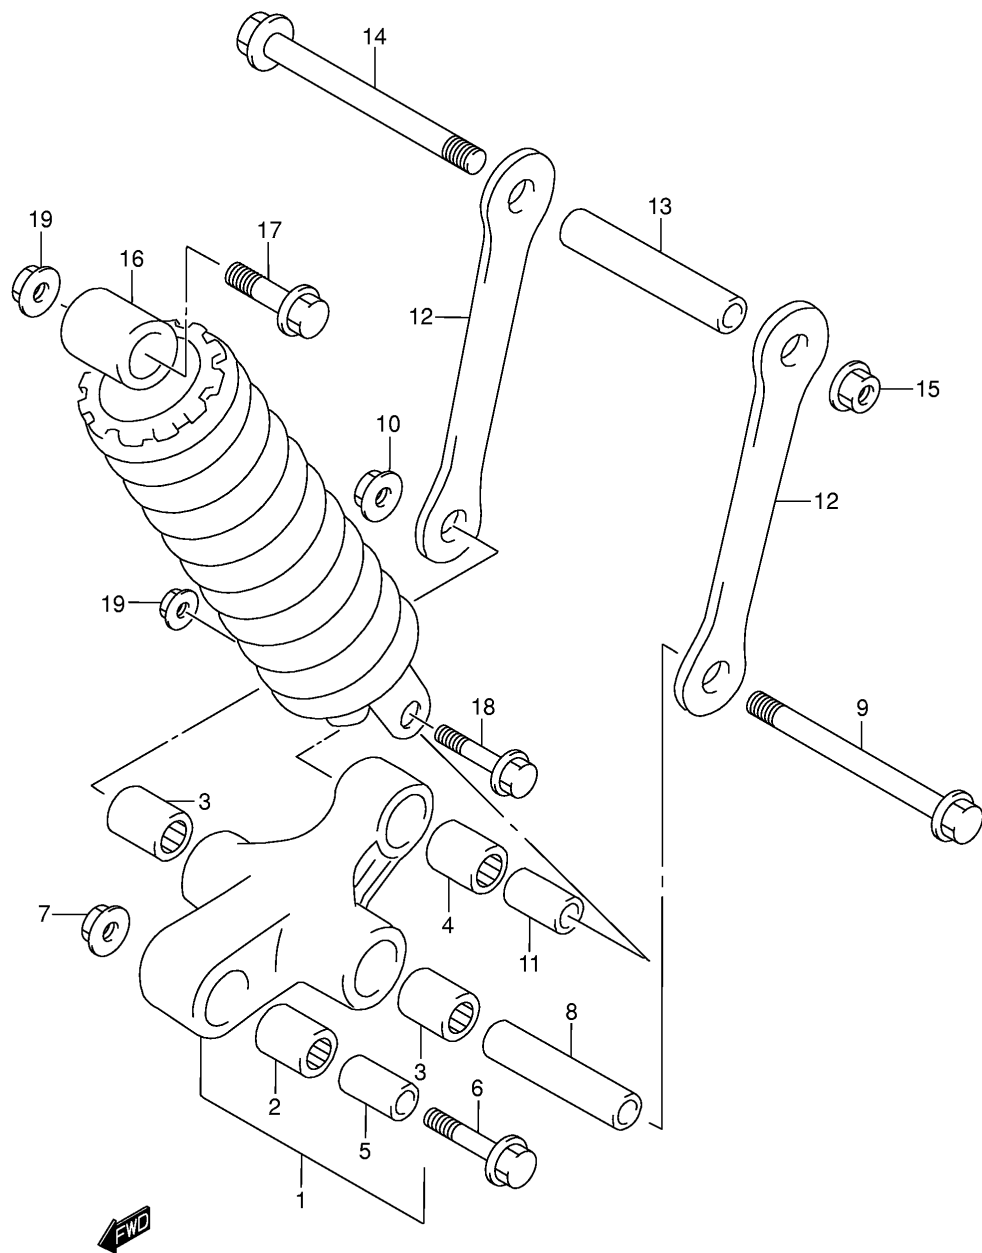 


Ref No	Part No	Description
1	62600-26840	Lever Set, Rear Cushion
2	09263-20074	• . Bearing, Front (20x27x32)
3	09263-20071	• . Bearing, Center (20x27x23.5)
4	09263-17034	• . Bearing, Rear (17x24x26)
5	09180-14014	Spacer, Front (14x20x34)
6	09103-14016	Bolt, Front (14x66)
7	08319-31143	Nut
8	09180-14020	Spacer, Center (14x20x99)
9	09103-14017	Bolt, Center (14x129)
10	08319-31143	Nut
11	62684-40A10	Spacer, Rear (10x17x30)
12	62641-10F00	Rod, Rear Cushion Lever
13	09180-14020	Spacer, Rod (14x20x99)
14	09103-14017	Bolt, Rod (14x129)
15	08319-31143	Nut
16	62100-10F21	Absorber Assy, Rear Shock
17	09103-10064	Bolt, Upper (10x50)
18	09103-10101	Bolt, Lower (10x54)
19	08319-31103	Nut

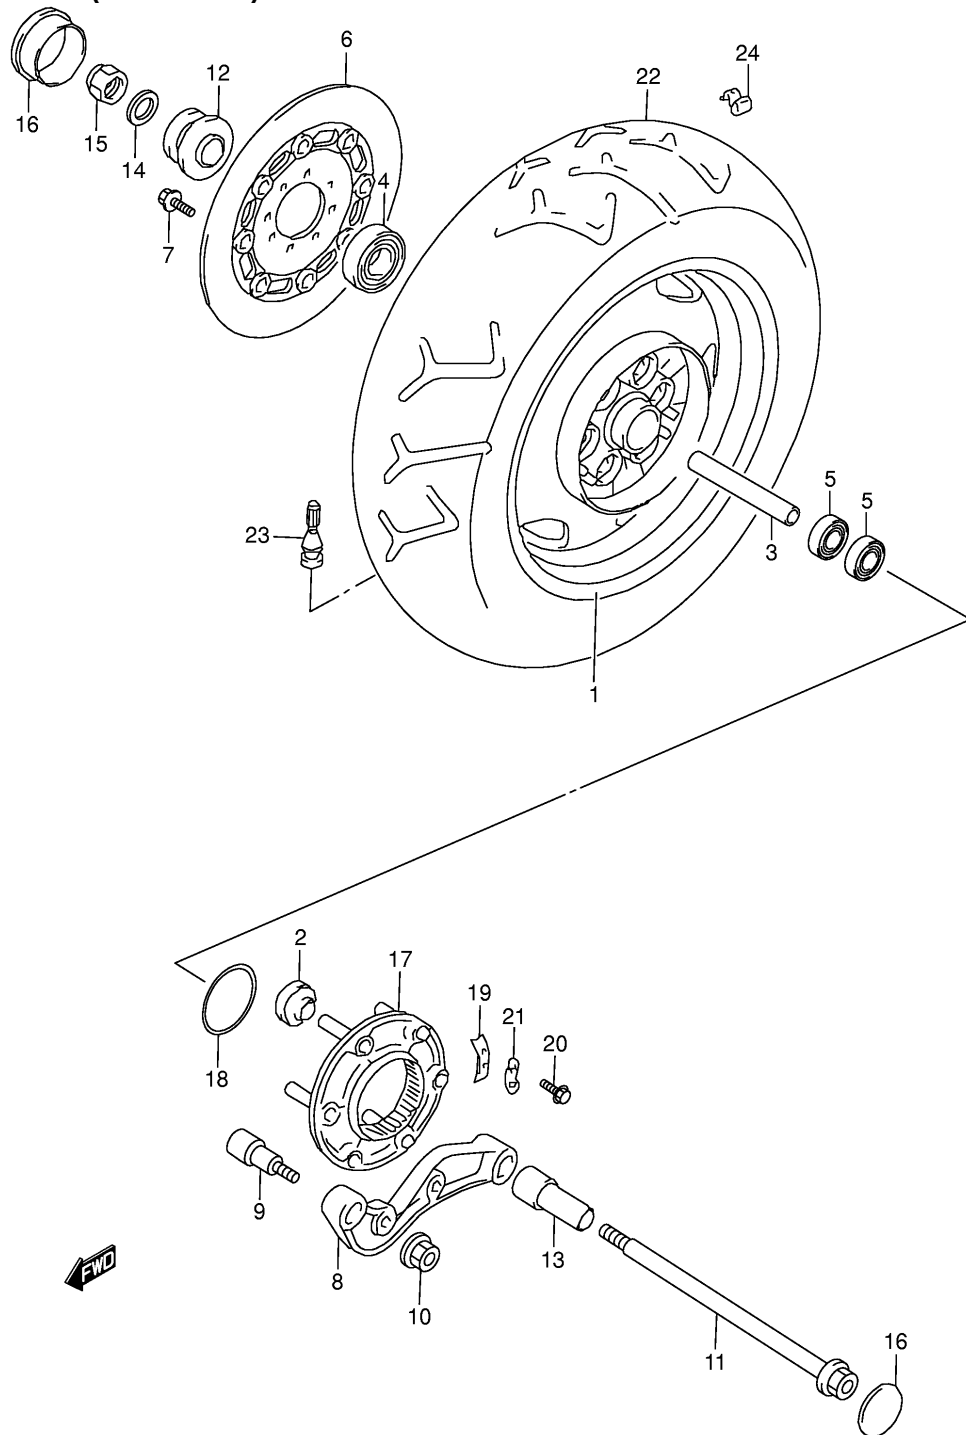 

Ref No	Part No	Description
1	64100-10810-12R	Wheel Set, Rear (mt5.00x15) (silver)
2	09319-12019	• . Bushing (12x41x34)
3	09180-20112	Spacer (20.8x27.2x124)
4	08133-62047	Bearing, Rh
5	09262-20042	Bearing, Lh (20x47x14)
6	69210-10F00	Disc, Rear Brake
7	09106-08125	Bolt, Disc (8x33)
8	69721-10F00	Bracket, Rear Caliper
9	64241-10F00	Pin, Bracket
10	08319-31123	Nut
11	64711-10F00	Axle, Rear
12	64740-10F00	Spacer, Axle Rh
13	64772-10F00	Spacer, Axle Lh
14	08322-01183	Washer
15	09159-18004	Nut
16	64792-38B00	Cap, Rear Axle
17	64680-24A00	Joint Assy, Rear Hub
18	09280-65003	O Ring (id:65,d:2.10)
19	64677-45110	Washer, Thrust
20	09119-06049	Bolt (6x16)
21	09169-06030	Washer
22	65110-10F00	Tire, Rear (180/70-15m/c 76h) (bridgestone)
23	43130-24A00	Valve Assy, Wheel Rim Tr412
24	43232-82000	Balancer (10g)
24	43234-82000	Balancer (20g)
24	43236-82000	Balancer (30g)

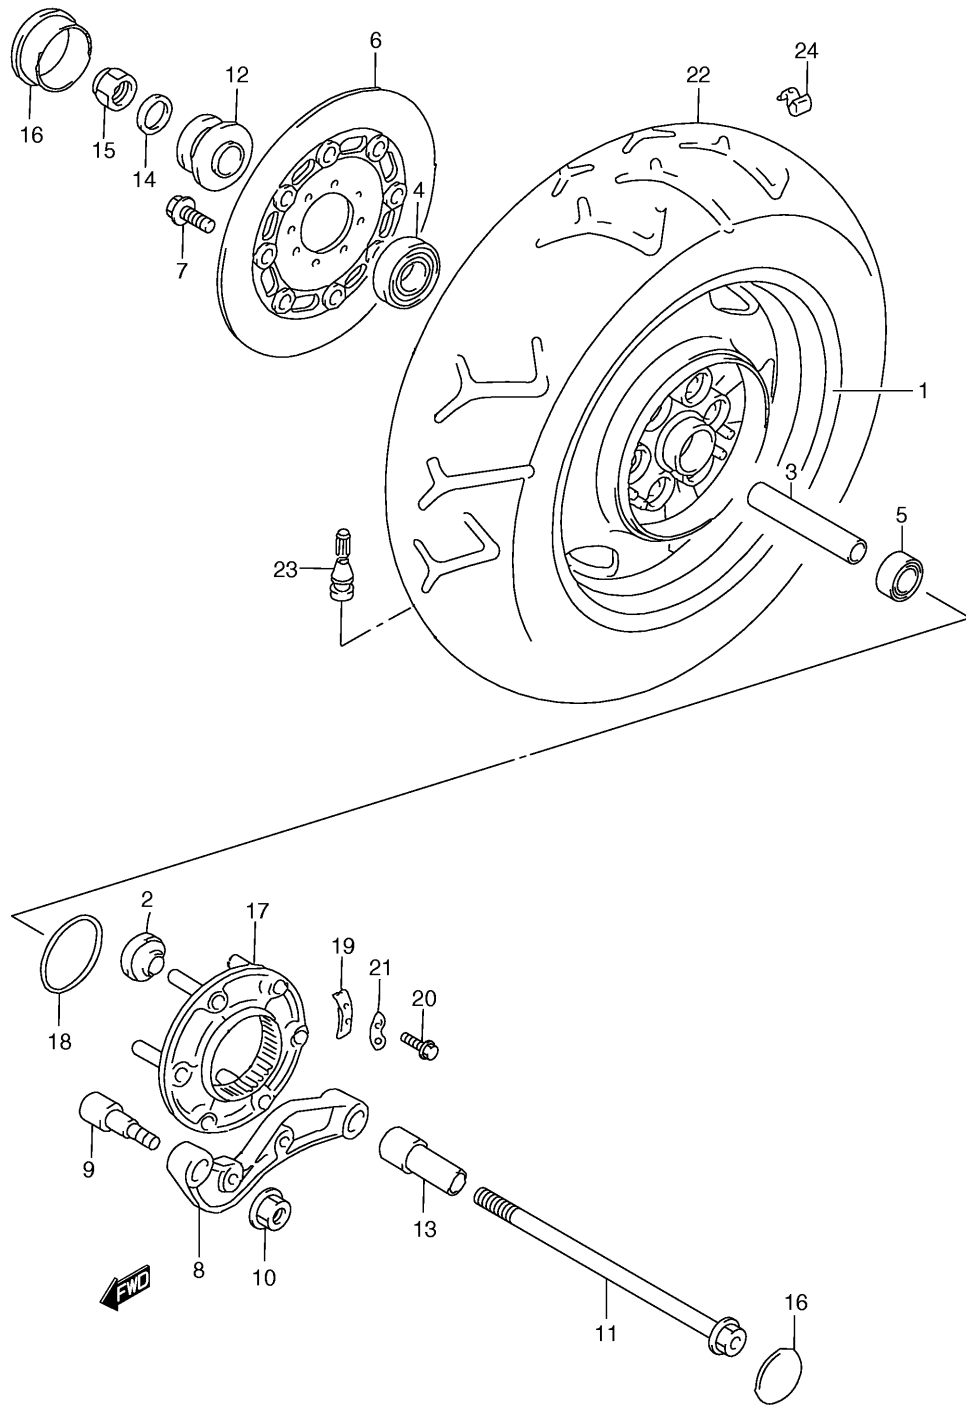 


Ref No	Part No	Description
1	64100-10820-12R	Wheel Set, Rear (mt5.00x15) (silver)
2	09319-12019	• . Bushing (12x41x34)
3	09180-20112	Spacer (20.8x27.2x124)
4	08133-62047	Bearing, Rh
5	09262-20042	Bearing, Lh (20x47x14)
6	69210-10F10	Disc, Rear Brake
7	09106-08125	Bolt, Disc (8x33)
8	69721-10F00	Bracket, Rear Caliper
9	64241-10F00	Pin, Bracket
10	08319-31123	Nut
11	64711-10F00	Axle, Rear
12	64740-10F00	Spacer, Axle Rh
13	64772-10F00	Spacer, Axle Lh
14	08322-01183	Washer
15	09159-18004	Nut
16	64792-38B00	Cap, Rear Axle
17	64680-24A00	Joint Assy, Rear Hub
18	09280-65003	O Ring (id:65,d:2.10)
19	64677-45110	Washer, Thrust
20	09119-06049	Bolt (6x16)
21	09169-06030	Washer
22	65110-10F00	Tire, Rear (180/70-15m/c 76h) (bridgestone)
23	43130-24A00	Valve Assy, Wheel Rim Tr412
24	43232-82000	Balancer (10g)
24	43234-82000	Balancer (20g)
24	43236-82000	Balancer (30g)

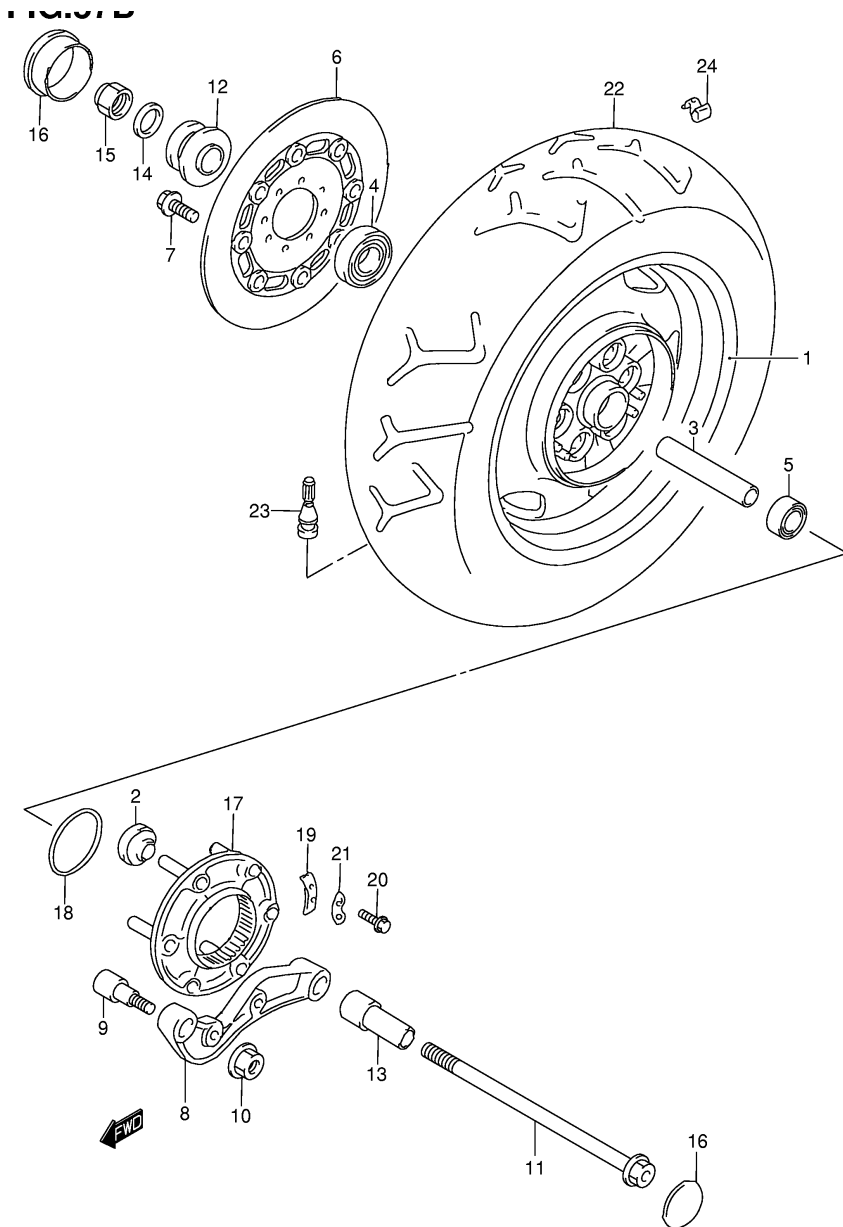 


Ref No	Part No	Description
1	64100-10830-YAA	Wheel Set, Rear (mt5.00x15) (silver)
2	09319-12019	• . Bushing (12x41x34)
3	09180-20112	Spacer (20.8x27.2x124)
4	08133-62047	Bearing, Rh
5	09262-20042	Bearing, Lh (20x47x14)
6	69210-10F20	Disc, Rear Brake
7	09106-08148	Bolt, Disc (8x33)
8	69721-10F01	Bracket, Rear Caliper
9	64241-10F00	Pin, Bracket
10	08319-31123	Nut
11	64711-10F00	Axle, Rear
12	64740-10F00	Spacer, Axle Rh
13	64772-10F00	Spacer, Axle Lh
14	08322-01183	Washer
15	09159-18004	Nut
16	64792-38B00	Cap, Rear Axle
17	64680-24A00	Joint Assy, Rear Hub
18	09280-65003	O Ring (id:65,d:2.10)
19	64677-45110	Washer, Thrust
20	09119-06049	Bolt (6x16)
21	09169-06030	Washer
22	65110-10F00	Tire, Rear (180/70-15m/c 76h) (bridgestone)
23	43130-24A00	Valve Assy, Wheel Rim Tr412
24	43232-82000	Balancer (10g)
24	43234-82000	Balancer (20g)
24	43236-82000	Balancer (30g)


VL1500Y E02_057B
REAR WHEEL

Ref No	Part No	Description
	69100-38B20	Caliper Assy, Rear
1	69100-38810	• . Piston Set
2	69100-38830	• . Seal Set, Piston
3	69100-38860	• . Pad Set
4	59145-16700	• . Bolt
5	59143-16700	• . Spring
6	69141-45000	• . Pin
7	69142-45000	• . Clip
8	59151-24A00	• . Cover
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	07130-10203	Bolt

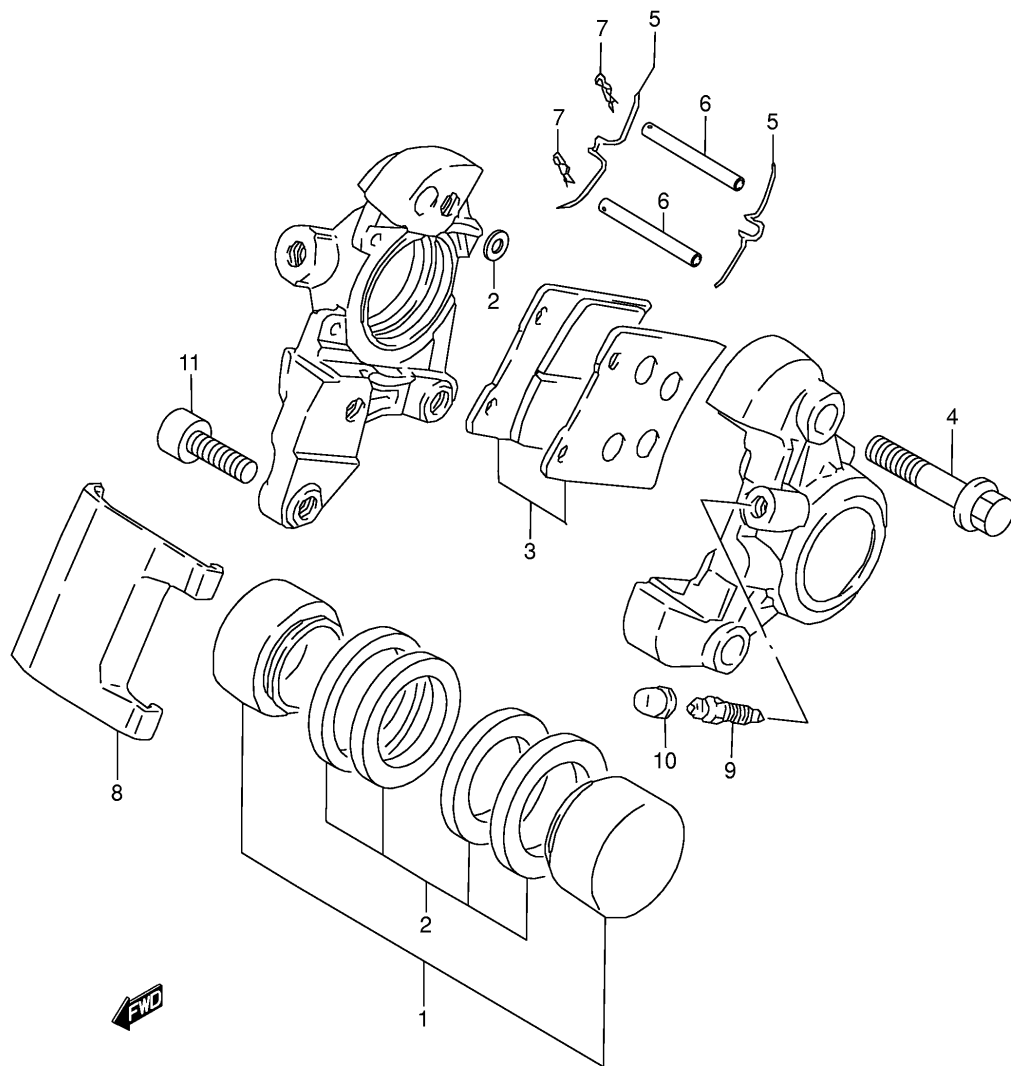 


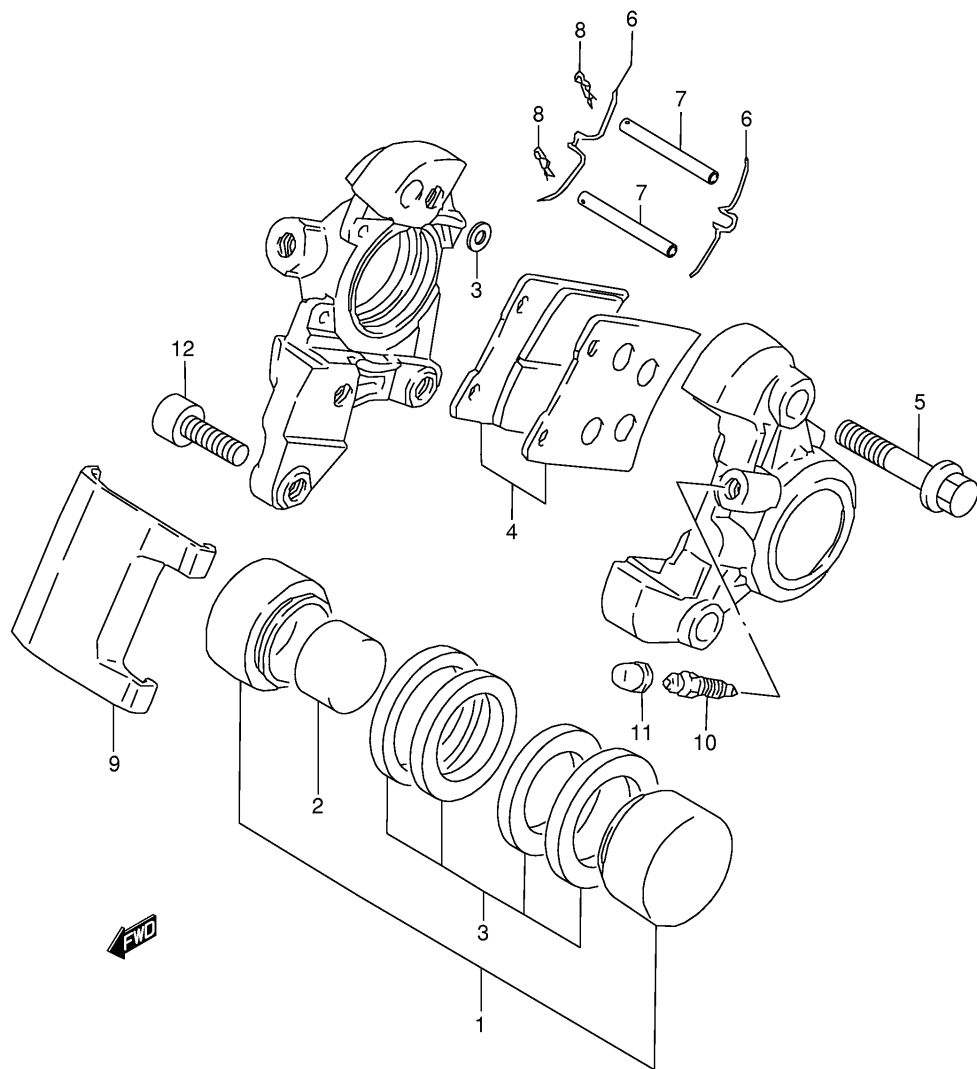 

Ref No	Part No	Description
1	69100-38B40	Caliper Assy, Rear
2	69100-38850	• . Piston Set
3	69126-10F00	•• .. Insulator
4	69100-38830	•• .. Seal Set, Piston
5	69100-38860	• . Pad Set
6	59145-16700	• . Bolt
7	59143-16700	• . Spring
8	69141-45000	• . Pin
9	69142-45000	• . Clip
10	59151-24A00	• . Cover
11	59121-18410	• . Bleeder
12	55156-66310	• . Cap
12	07130-10203	Bolt

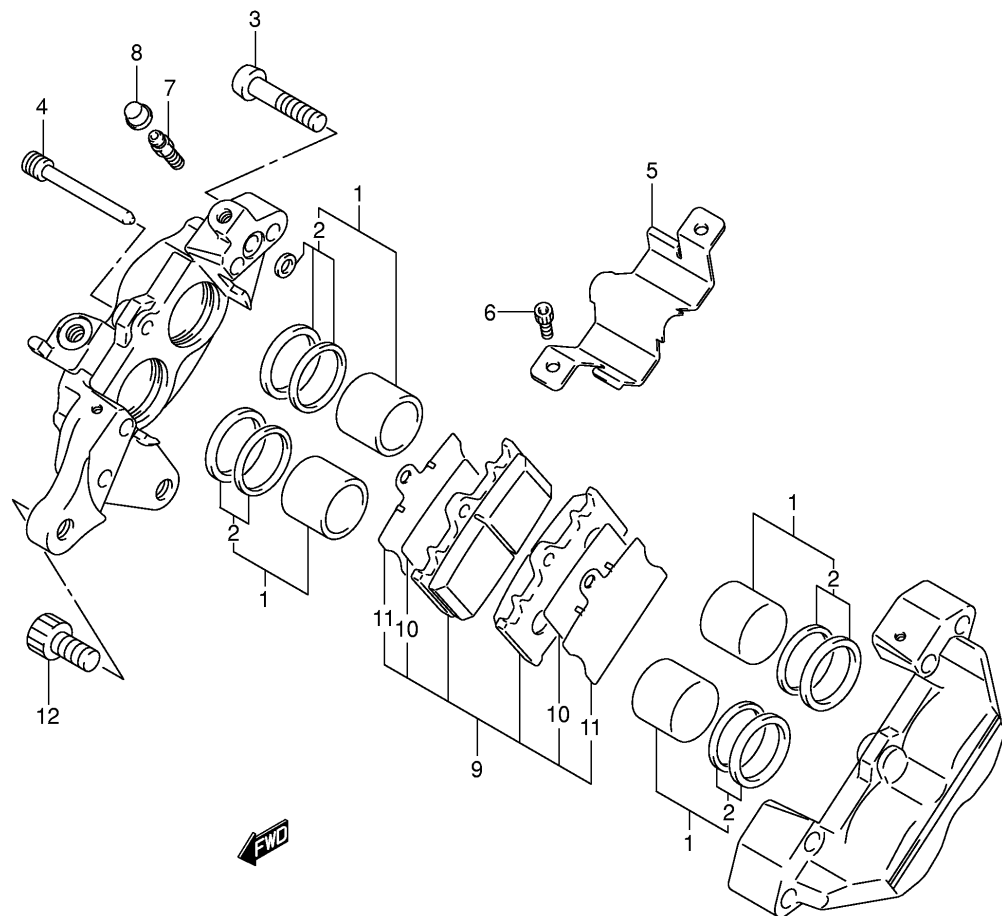 


Ref No	Part No	Description
	69100-10F10-999	Caliper Assy, Rear
1	69100-10810	• . Piston Set
2	59300-35840	• • .. Seal Set, Piston
3	59145-33E10	• . Bolt
4	59141-40F00	• . Pin, Pad
5	69151-10F10	• . Cover
6	59153-22D00	• . Screw
7	59121-18410	• . Bleeder
8	55156-66310	• . Cap, Bleeder
9	69100-10850	Pad ~ Shim Set
10	69171-10F10	• . Shim, Pad
11	69172-10F10	• . Shim, Pad
12	07130-10203	Bolt

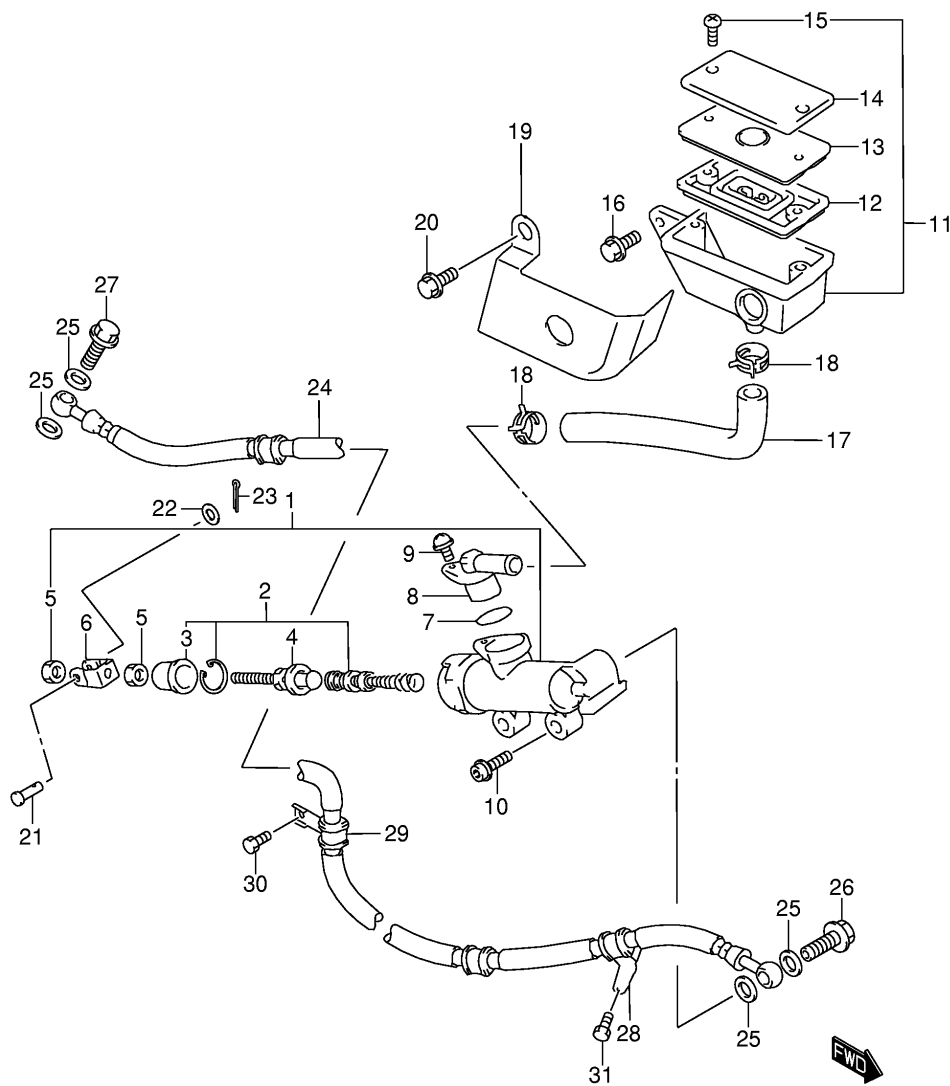 


Ref No	Part No	Description
1	69600-10F00	Cylinder Assy, Rear Master
2	69600-04820	• . Piston/cup Set
3	69691-00A00	• . Boot
4	69670-00B21	• . Rod, Push
5	69693-05A00	• . Nut
6	69692-27A30	• . Yoke
7	69686-34200	• . O Ring
8	69672-05A00	• . Connector
9	02112-74123	• . Screw
10	07120-06163	Bolt
11	69740-10D00	Tank Assy, Reservoir
12	59667-49460	• . Diaphragm
13	59668-41C00	• . Plate
14	59669-41C00	• . Cap
15	69689-49300	• . Screw
16	01550-06163	Bolt (6x16)
17	69731-10F00	Hose, Reservoir Tank
18	09401-13417	Clamp
19	69795-10F00	Cover, Reservoir Tank
20	01550-06103	Bolt (6x10)
21	09200-06037	Pin
22	08322-01063	Washer
23	04111-20158	Pin, Cotter
24	69480-10F00	Hose, Rear Brake
25	09161-10009	Washer (10x15x1.5)
26	09360-10042	Bolt, Cylinder (10x1.25x22)
27	09360-10041	Bolt, Caliper (10x1.00x22)
28	69268-10F00	Clamp, Brake Hose
29	59268-01D10	Clamp, Brake Hose
30	01550-06103	Bolt (6x10)
31	01550-06163	Bolt (6x16)

 FIG.59A

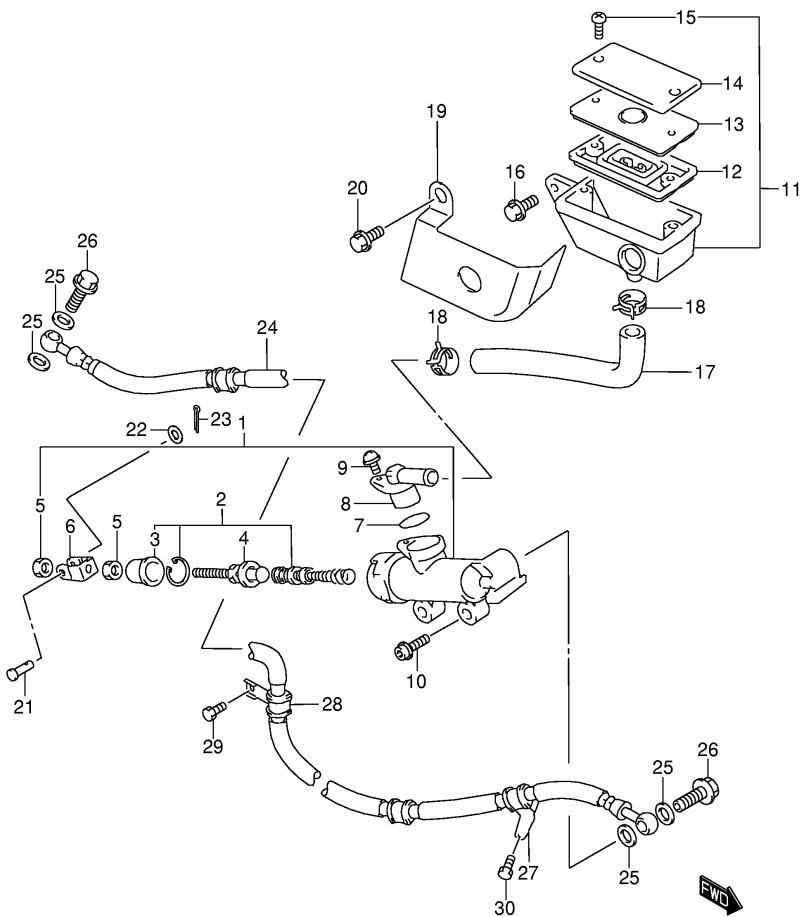

Ref No	Part No	Description
1	69600-10F00	Cylinder Assy, Rear Master
2	69600-04820	• . Piston/cup Set
3	69691-00A00	• . Boot
4	69670-00B21	• . Rod, Push
5	69693-05A00	• . Nut
6	69692-27A30	• . Yoke
7	69686-34200	• . O Ring
8	69672-05A00	• . Connector
9	02112-74123	• . Screw
10	07120-06163	Bolt
11	69740-10F00	Tank Assy, Reservoir
12	59667-49460	• . Diaphragm
13	59668-41C00	• . Plate
14	59669-41C00	• . Cap
15	69689-49300	• . Screw
16	01550-06163	Bolt (6x16)
17	69731-10F00	Hose, Reservoir Tank
18	09401-13417	Clamp
19	69795-10F00	Cover, Reservoir Tank
20	01550-06103	Bolt (6x10)
21	09200-06037	Pin
22	08322-01063	Washer
23	04111-20158	Pin, Cotter
24	69480-10F10	Hose, Rear Brake
25	09161-10009	Washer (10x15x1.5)
26	09360-10042	Bolt (10x1.25x22)
27	69268-10F00	Clamp, Brake Hose
28	59268-01D10	Clamp, Brake Hose
29	02162-06123	Bolt (6x12)
30	01550-06163	Bolt (6x16)

 VL1500Y E02_059A
REAR MASTER CYLINDER

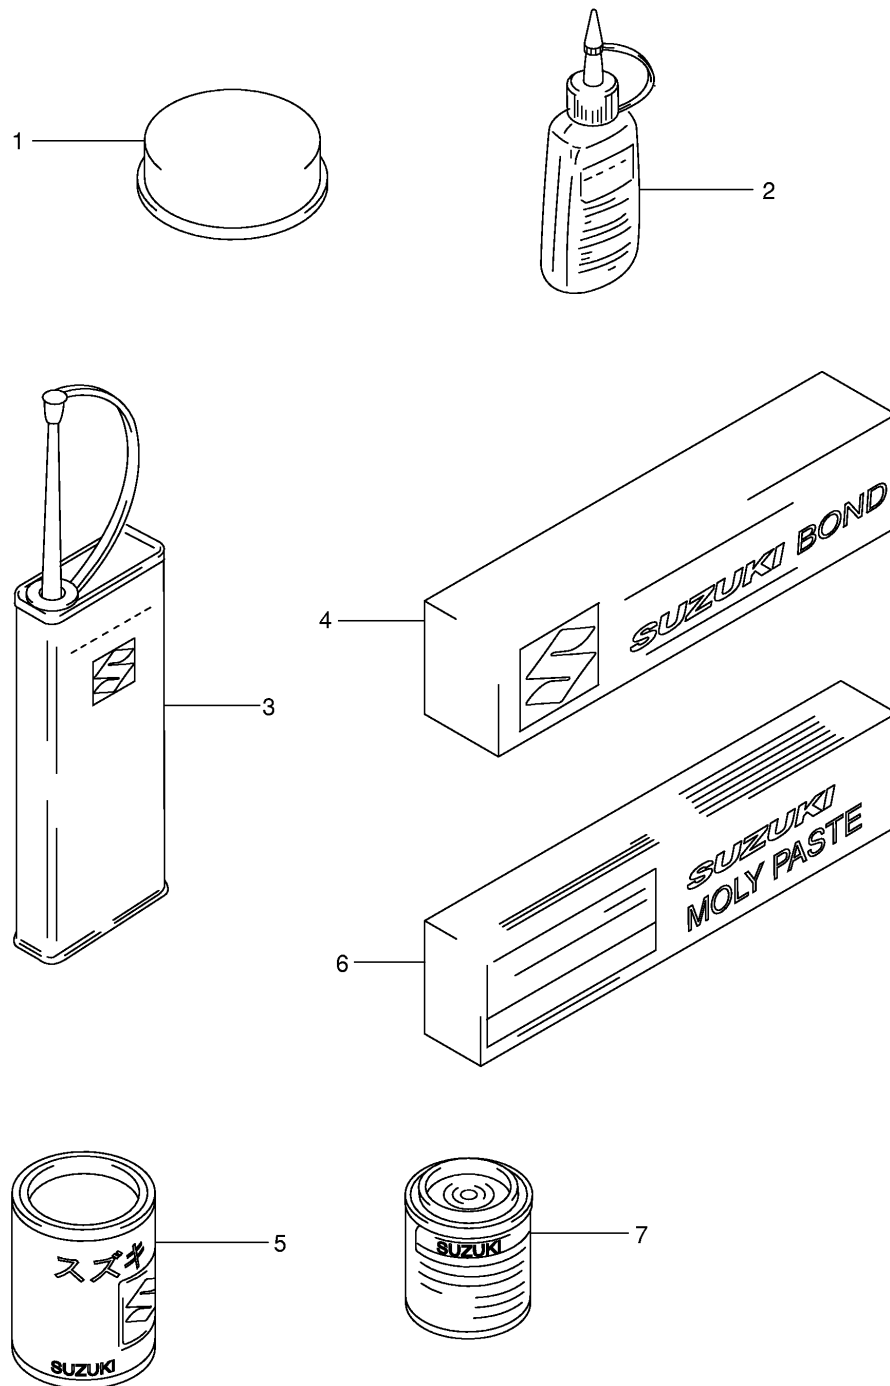

Ref No	Part No	Description
1	99000-25110	Brake Pad Grease (pbc)
2	99000-32020	Thread Lock, Super (1333b)
2	99000-32030	Thread Lock, Super (1303b)
2	99000-32050	Thread Lock, Super (1342)
2	99000-32100	Thread Lock, Super (1305)
2	99000-32130	Thread Lock, Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31110	Suzuki Bond (1215)
4	99000-31140	Suzuki Bond (1207b) Black
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10209-Y98	Paint (candy Forest Green)
7	99000-10109-10R	Paint (milky White)
7	99000-10209-33J	Paint (pearl Novelty Black)
7	99000-10109-Y4N	Paint (brick Brown)
7	99000-10109-Y4R	Paint (clay Beige)
7	99000-10109-14L	Paint (super White)
7	99000-10209-Y0W	Paint (candy Koran Orange)
7	99000-10109-Y4L	Paint (pale Yellow)
7	99000-10109-019	Paint (black)
7	99000-10209-0JW	Paint (pearl Still White)
7	99000-10209-19A	Paint (candy Antares Red)
7	99000-10209-Y2D	Paint (flash Silver Metallic)
7	99000-10209-Y7L	Paint (saturn Black Metallic)
7	99000-10209-YE2	Paint (deep Rhode Maroon Metallic)
7	99000-10209-Y7G	Paint (pearl Dark British Green)