E-03, 28, 33

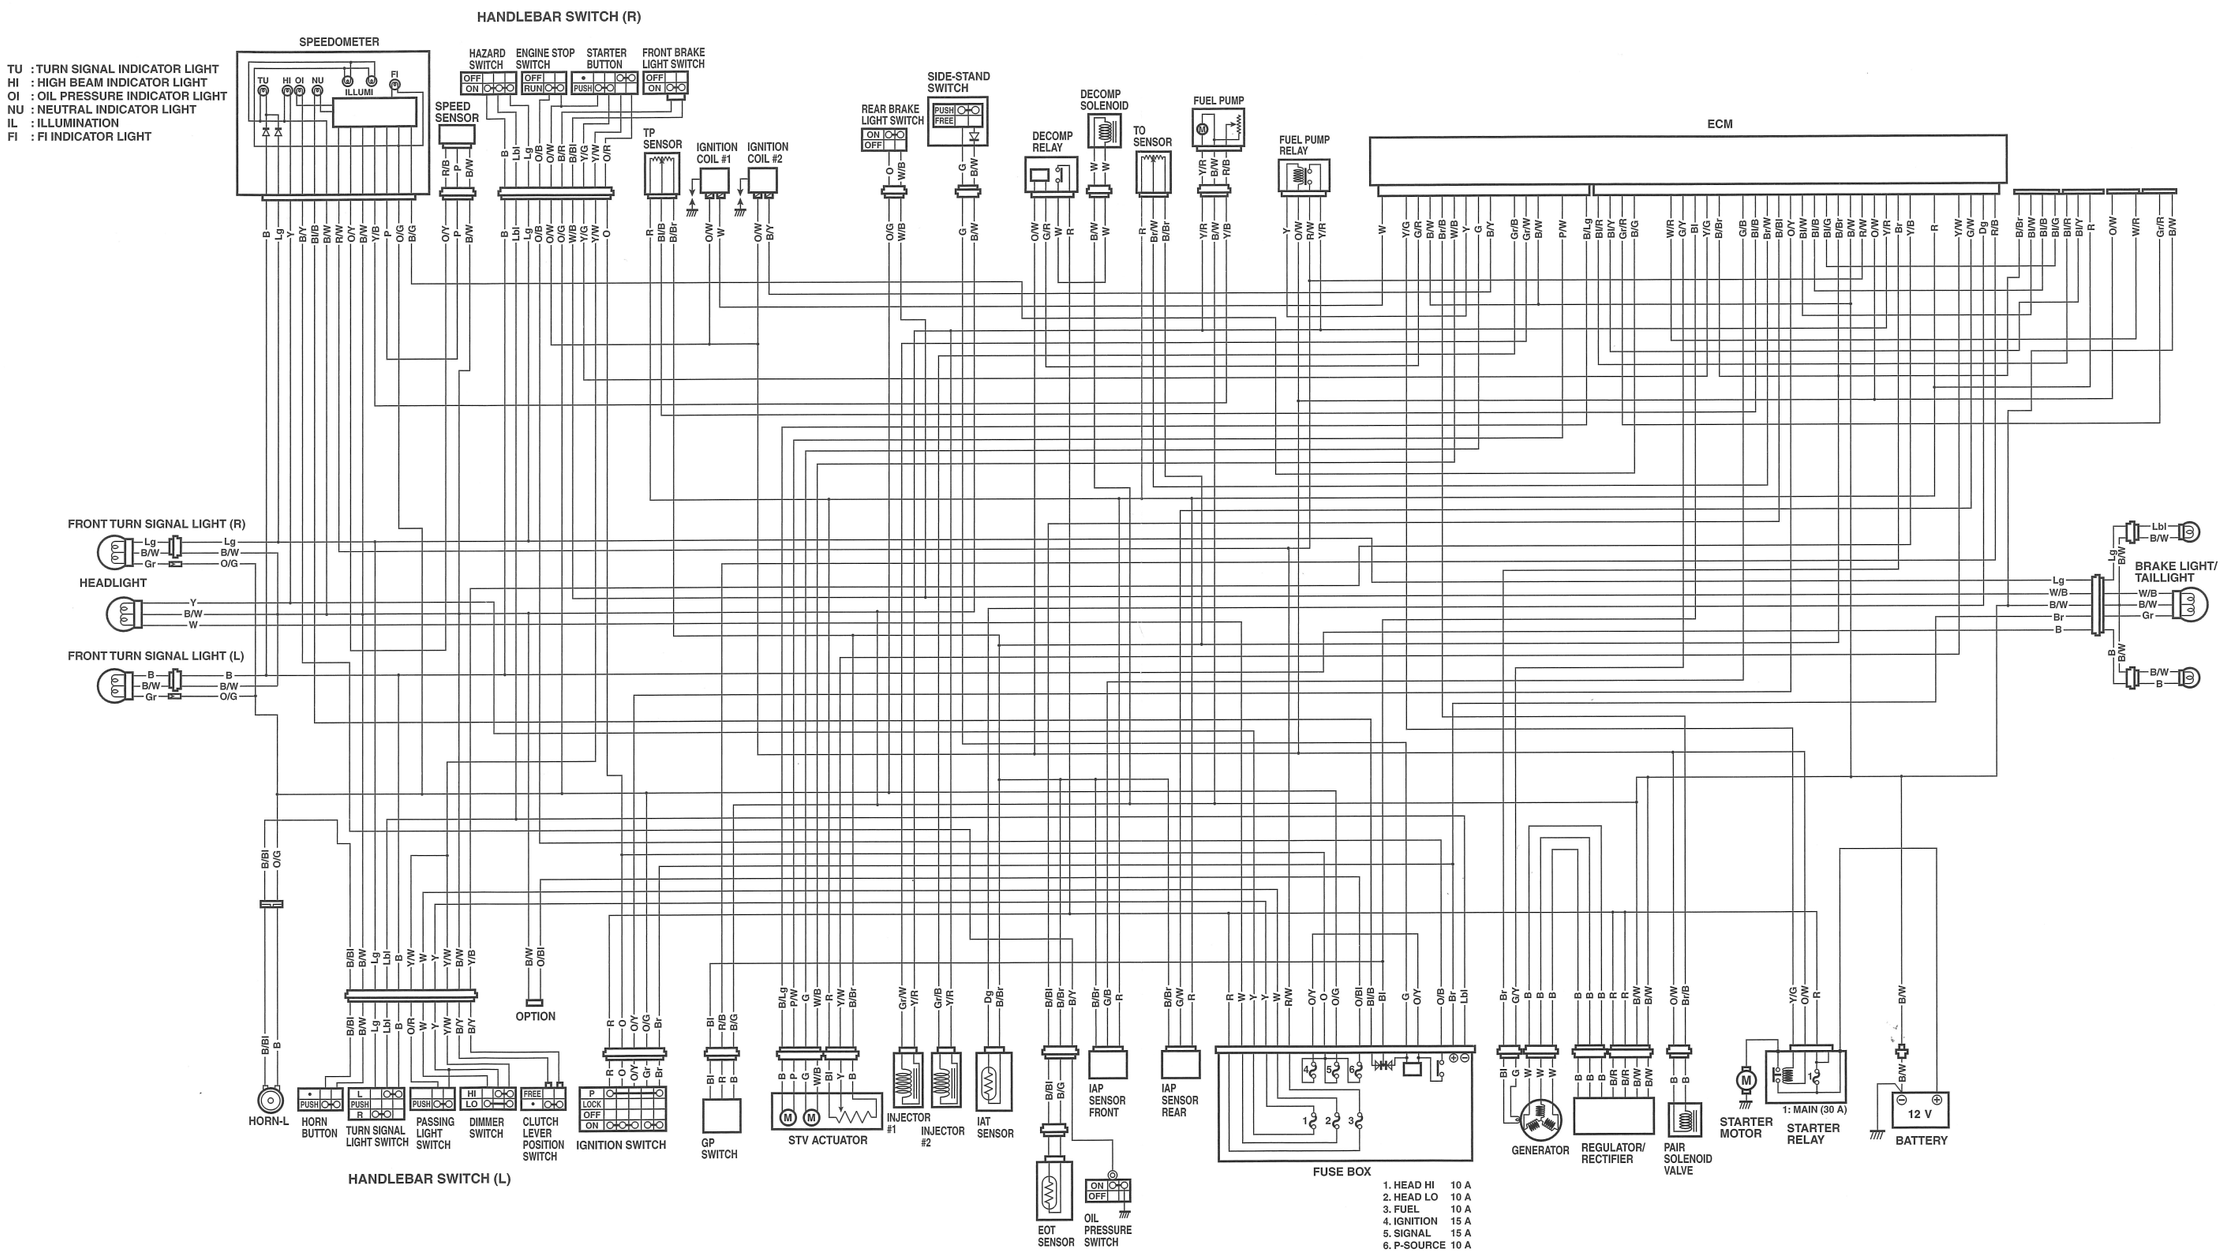
TU : TURN SIGNAL INDICATOR LIGHT
HI : HIGH BEAM INDICATOR LIGHT
OI : OIL PRESSURE INDICATOR LIGHT
NU : NEUTRAL INDICATOR LIGHT
IL : ILLUMINATION
FI : FI INDICATOR LIGHT
SPEEDOMETER
ILLUMI
HANDLEBAR SWITCH (R)
HAZARD SWITCH
ENGINE STOP SWITCH
STARTER BUTTON
FRONT BRAKE LIGHT SWITCH
SPEED SENSOR
TP SENSOR
IGNITION COIL #1
IGNITION COIL #2
REAR BRAKE LIGHT SWITCH
SIDE-STAND SWITCH
DECOMP RELAY
DECOMP SOLENOID
TO SENSOR
FUEL PUMP
FUEL PUMP RELAY
ECM
FRONT TURN SIGNAL LIGHT (R)
HEADLIGHT
FRONT TURN SIGNAL LIGHT (L)
BRAKE LIGHT/ TAILLIGHT
OPTION
HORN-L
HORN BUTTON
TURN SIGNAL LIGHT SWITCH
PASSING LIGHT SWITCH
DIMMER SWITCH
CLUTCH LEVER POSITION SWITCH
IGNITION SWITCH
HANDLEBAR SWITCH (L)
GP SWITCH
STV ACTUATOR
INJECTOR #1
INJECTOR #2
IAT SENSOR
IAP SENSOR FRONT
IAP SENSOR REAR
EOT SENSOR
OIL PRESSURE SWITCH
FUSE BOX
1. HEAD HI 10 A
2. HEAD LO 10 A
3. FUEL 10 A
4. IGNITION 15 A
5. SIGNAL 15 A
6. P-SOURCE 10 A
GENERATOR
REGULATOR/ RECTIFIER
PAIR SOLENOID VALVE
STARTER MOTOR
1: MAIN (30 A)
STARTER RELAY
12 V
BATTERY